


BUSTER+PUNCH
LONDON

KITCHEN TAP / MIXER WITH PULL SPRAY
PREPARATION AND INSTALLATION

INSTALLATION MANUAL

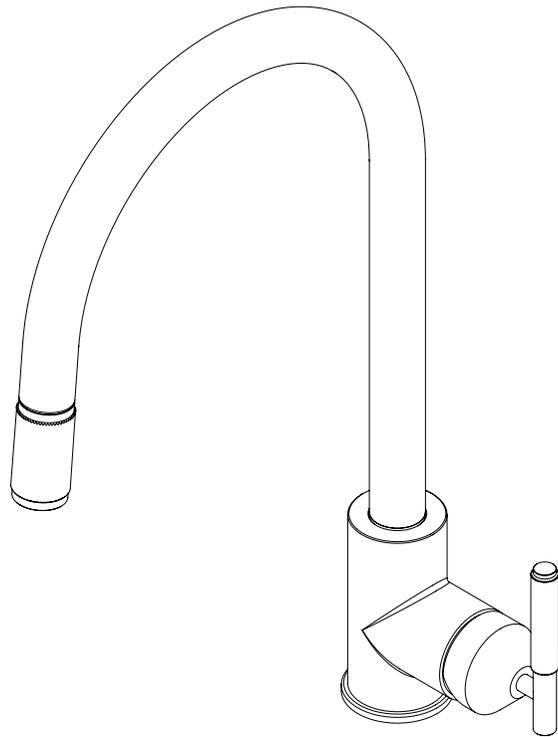


DISCLAIMER: THIS PRODUCT IS NOT SUITABLE FOR COMMERCIAL USE.

BUSTERANDPUNCH.COM
L0211

MINIMUM RECOMMENDED WATER PRESSURE: 7.25PSI (0.5 BAR)
MAXIMUM RECOMMENDED WATER PRESSURE: 72PSI (5 BAR)
RECOMMENDED HOT WATER TEMPERATURE: 70°C (158°F)
RECOMMENDED TEMPERATURE RANGE: 5 - 60°C (41 - 140°F)


NOTE: EXCEEDING THESE TEMPERATURES OR WATER PRESSURES CAN RESULT IN DAMAGE TO THE TAP. A PRESSURE REDUCING VALVE MAY BE REQUIRED TO BE FITTED IN HIGH WATER PRESSURE SITUATIONS.

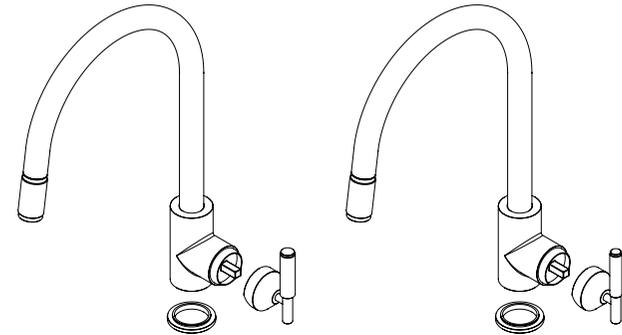

NOTE: INSTALLATION INSTRUCTION MANUAL APPLICABLE FOR UK SINGLE MIXER TAPS SUPPLIED BY BUSTER + PUNCH. PRODUCT VARIATIONS COVERED BY THIS INSTRUCTION MANUAL ARE LISTED BELOW:

KITCHEN TAP (WARM/COLD) / CROSS / SINGLE MIXER
KITCHEN TAP (WARM/COLD) / LINEAR / SINGLE MIXER

TAP BOX CONTENT

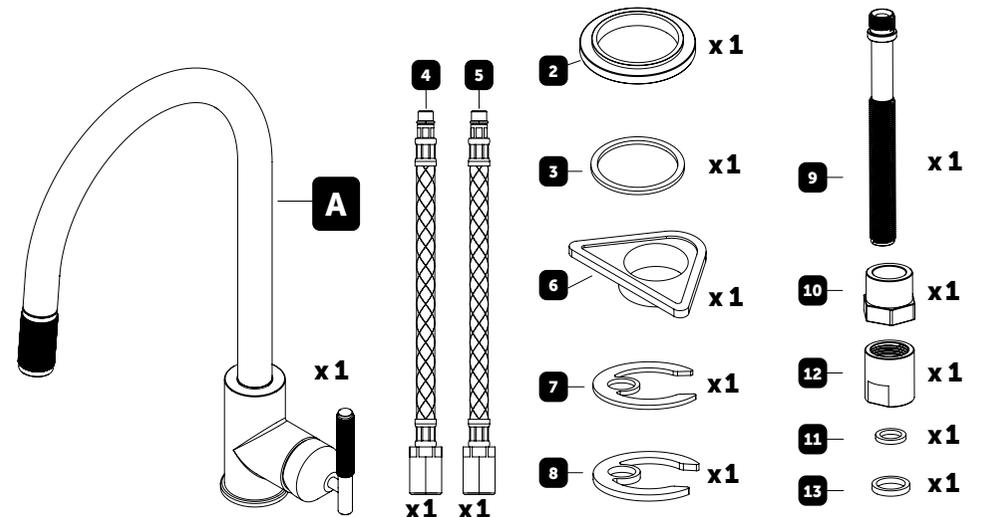

PREPARATION

BEFORE INSTALLING THE NEW MIXER IT IS ESSENTIAL THAT YOU THOROUGHLY FLUSH THROUGH THE SUPPLY PIPES IN ORDER TO REMOVE ANY REMAINING SWarf, SOLDER OR OTHER IMPURITIES.


FAILURE TO CARRY OUT THIS SIMPLE PROCEDURE COULD CAUSE PROBLEMS OR DAMAGE TO THE WORKINGS OF THE MIXER.

HAVING FIRST CHECKED ALL NEW CONNECTIONS, TURN ON THE MAINS STOPCOCK, CLOSE ALL TAPS EXCEPT THE NEW MIXER AND AS THE SYSTEM STARTS TO REFILL CHECK FOR LEAKS.


ONCE YOU HAVE SATISFIED YOURSELF THAT THERE ARE NO LEAKS, SWITCH ON THE WATER HEATING.

FIRST SHUT OFF YOUR WATER HEATING SYSTEM THEN, WITH YOUR MAINS STOPCOCK CLOSED, OPEN THE LOWEST HOT AND COLD TAPS IN THE HOUSE AND ALLOW TO RUN UNTIL THE COLD STORAGE TANK AND PIPES ARE EMPTY (THE HOT WATER STORAGE CYLINDER ALWAYS REMAINS FULL).

DISCLAIMER: PLEASE CONTACT YOUR LOCAL PLUMBER WHEN INSTALLING.

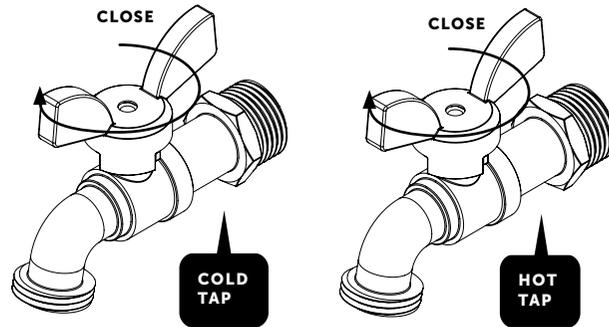


1

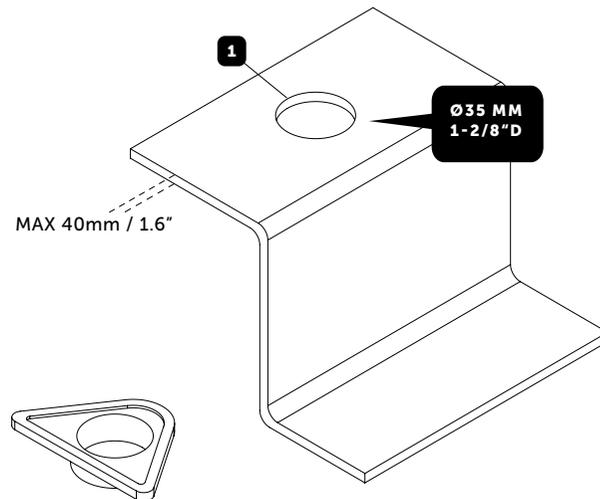


FOR SURFACES <5MM USE
THE TAP BRACE PROVIDED


2 A

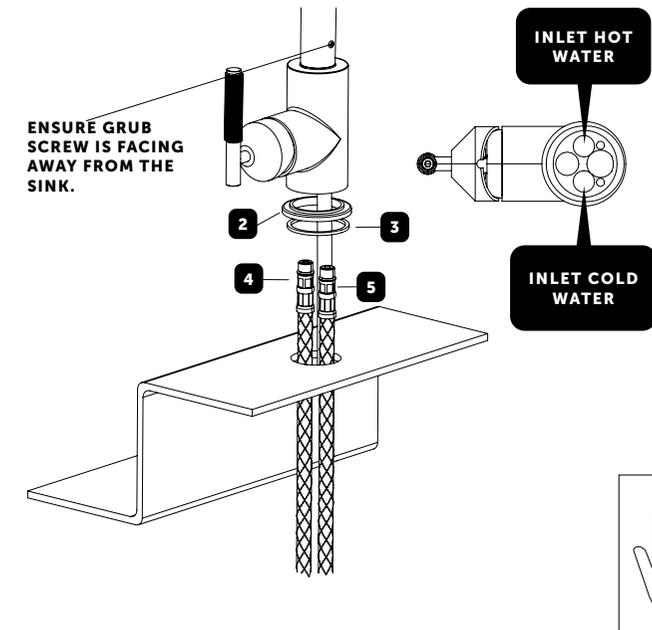



2 B

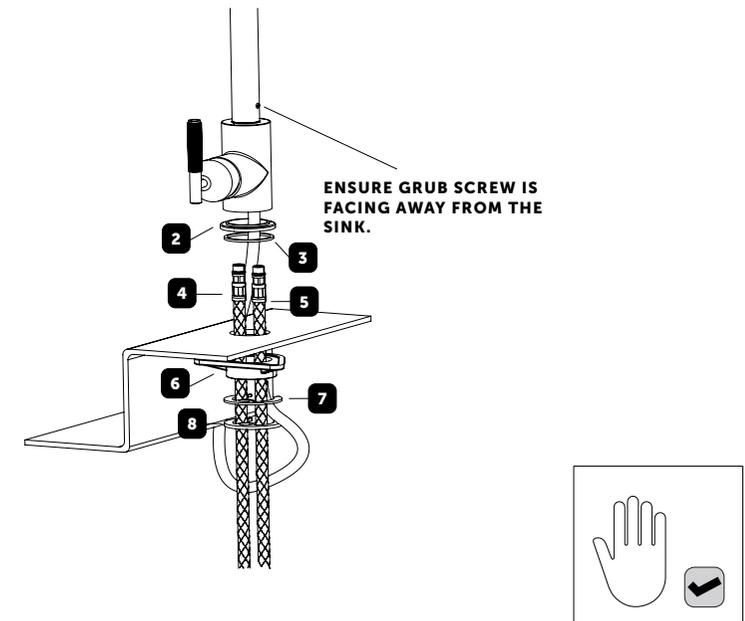 FOR SURFACES <5MM DEPTH




3 UNSCREW THE TENSILE CLAMPS.

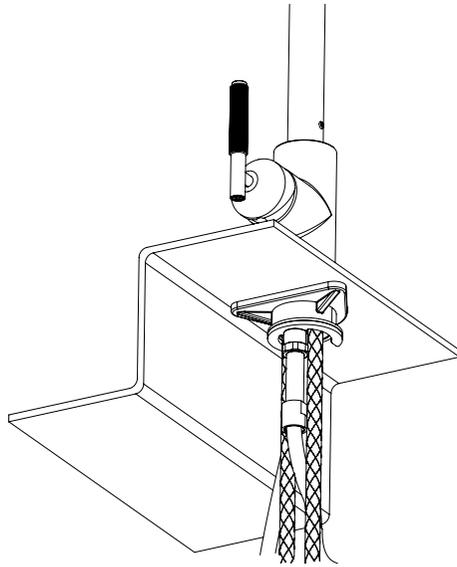



4

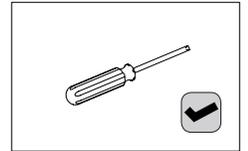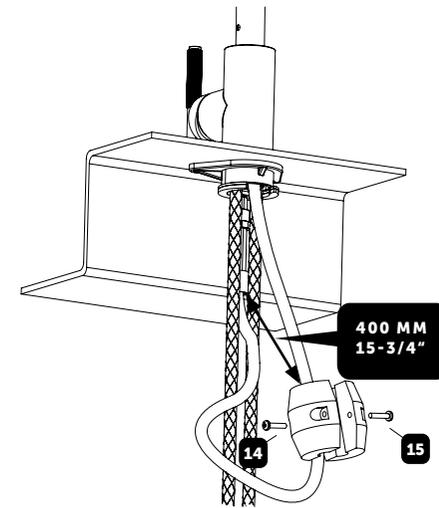

 5 ENSURE HOT & COLD HOSES ARE INSERTED INTO THE CORRECT CORRESPONDING TAPS.

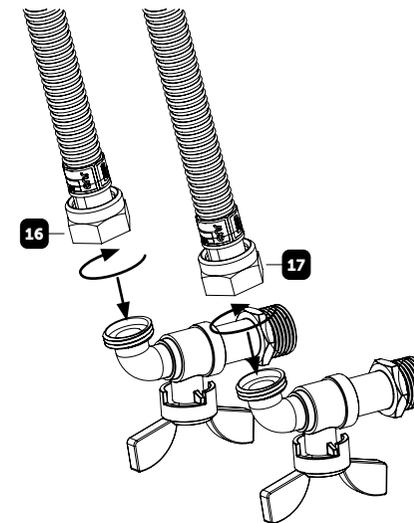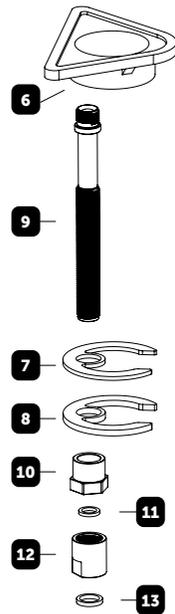



6

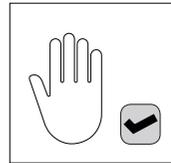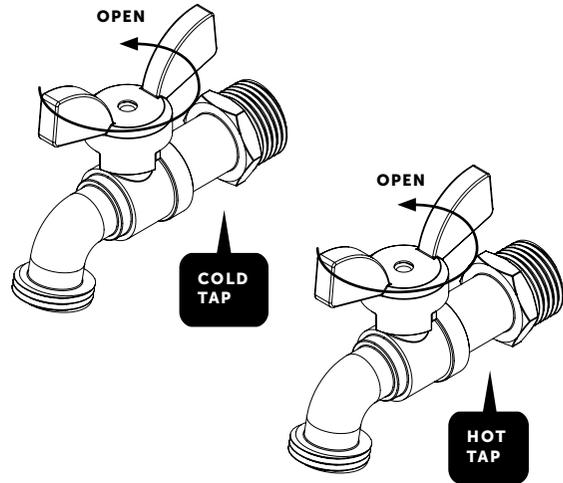


AERATOR MAINTENANCE

RECOMMENDED TO BE CLEANED AT LEAST ONCE A MONTH

NOTE: IF THERE IS A BUILDUP OF LIMESCALE IT MAY BE WORTH REPLACING

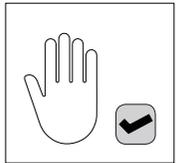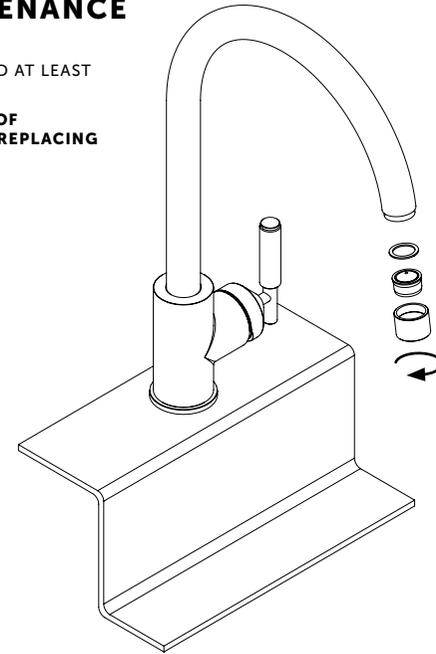

7

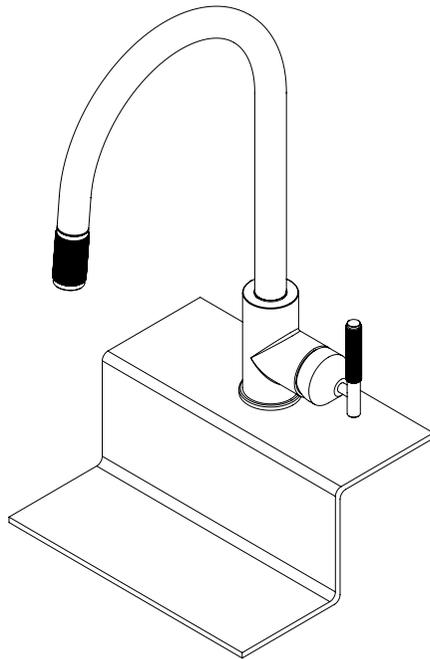

[end. ORDINARY]