BUSTER+PUNCY

LONDON

ELECTRICTY COOKER SWITCH

INSTALLATION MANUAL



EN

TECHNICAL SPECIFICATION

45A DP COOKER SWITCH WITH NEON: 1 GANG RATED AT 45A DP 250V~

IMPORTANT NOTES

PLEASE READ BEFORE INSTALLING

These products must be installed in accordance with the latest Building and IEE wiring regulations. If in any doubt, please contact a qualified electrician.

BACK BOXES

We recommend you to use a UK back box to install your product. Please note that the minimum recommended depth for the mounting box is 37mm. Back boxes are available to purchase from us, please see recommended sizes below:

PLATE	RECOMMENDED BACK BOX
1G	1G UK Back box – SKU# ELB921

WARRANTY INFORMATION

The Warranty Period of Two (2) years from the date of the original purchase.

RECYCLING ELECTRICAL PRODUCTS

Buster and Punch encourages all its customers to make note of this symbol and avoid putting any waste electrical goods in your domestic waste bin or container. Please ensure you take your waste electrical goods to a suitable facility for disposal.



BUSTERANDPUNCH.COM L0086



CERTAIN ITEMS IN THE RANGE WILL NOT FIT INTO A 4 LUG BOX. IF SUCH A BOX 3 HAS BEEN PREVIOUSLY INSTALLED THE TOP AND BOTTOM LUGS SHOULD BE REMOVED OR BENT BACK TO AVOID CONTACT WITH THE INTERIOR.

1

2

avoid installation on wet plaster.



* Please ensure screws are sufficiently tight to support the product but please do not over tighten as this may cause some deformation to the plate or damage the screw.



** Do NOT use a standard screw driver to tighten the coin caps. This may damage the cap and is not covered under warranty. Plastic coin cap tool must be used by hand only.

7 TURN POWER BACK ON.

6

No to

[end. ORDINARY]

