


08

Fitting Instructions

Range 08 Tile Door Access Panel

Independent bracing or support may be required to take the weight of the panel.

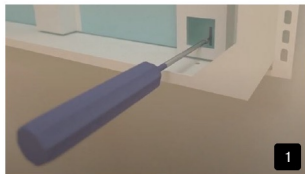

To remove the door; Open the door, loosen the fixing from the pin hinge system and slide into the door then lift the door out.




Place the frame into the aperture ensuring the aperture is 7mm larger than the back of frame size. Mark the position of the hinge holes and if 3 point locking the locking bar slots as well.



Remove the frame & drill clearance holes for hinge holes and if 3 point locking the locking bar slots as well as previously marked.



Fix the frame into the aperture using all the fixing holes to secure in place. Ensure frame is square by measuring diagonally & flush to the wall. If fire, acoustic or airtight rated apply intumescent acrylic mastic on the rear of the frame jamb prior to installing the frame.

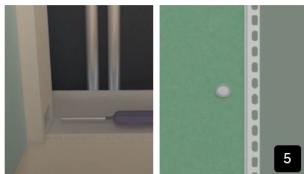

Refit the door securing the sliding pin hinges back in place ensuring the pins are fully inserted through the frame. Lock the door in place with key provided & ensure the door is flush when closed.



Apply tiles to the surface of the frame and door. Ensure the tiles do not overhang the frame or door as this will cause damage to the tiles. If fire, acoustic or airtight rated apply intumescent acrylic mastic to the rear of the frame, nominally 5mm wide sealing to the supporting construction.

NOTE: If fire rated, intumescent mastic is required between the door and the frame. Remove to operate the door and reapply after use.

QUALITY ASSURANCE

Please sign both

FIRE RATING

Please tick one

Sign

Ref

Non

1 Hour

2 Hour