

51-B

Fitting Instructions

Range 51-B Metal Faced Access Panel


For a Beaded Frame Panel, apply skim tape prior to plastering.

Independent bracing or support may be required to take the weight of the panel.

Scan for
Fitting
Video




To remove the door from the frame; Open the door, pull to release the FastFit Hinge System and lift out the door.

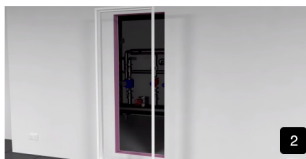

Place the frame into the aperture ensuring the aperture is 7mm larger than the panel size.

Mark the position of the hinge and door retaining pins located towards the hinge side.

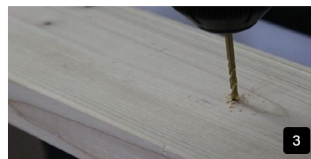

Remove the frame & drill clearance holes for Spring Pin hinge and door retaining pins, as previously marked.



Fix the frame into the aperture using all the fixing holes. Ensure frame is square by measuring diagonally & flush to the wall. If fire, acoustic, airtight or smoke rated, apply intumescent acrylic mastic on the rear of the frame jamb prior to installing the frame.



Refit the door, place the lower Spring Pin hinge system into its location. Slide the top pin along inside the frame until the hinge system locates fully then close the door. If fire, acoustic, airtight or smoke rated, apply intumescent acrylic mastic to the rear of the frame, nominally 5mm wide sealing to the supporting construction.



Lock the door in place with key provided & ensure the door is flush when closed. For a beaded framed panel, apply skim tape prior to to plastering.

QUALITY ASSURANCE

Please sign both

FIRE RATING

Please tick one

Sign

Ref

Non

1 Hour

2 Hour