

Safety Information

>All electrical work must be undertaken by a qualified contractor to ensure compliance with latest edition BS7671 and IEE/IET wiring regulations.


> Before installing the Ashley LED Panel Light or doing any maintenance, ensure power supply is turned off at the circuit breaker or fuse box.

> This product is designed for permanent connection to fixed wiring; the circuit should be protected with the appropriate MCB or fuse.

Environment

>Please DO NOT dispose of electrical items or packaging as unsorted waste. Use the recycling facilities provided by your local authorities.

PRODUCT DIMENSIONS

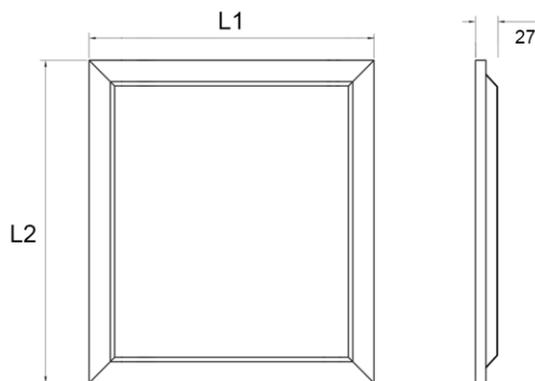

Size(mmxmm)	L1	L2
595x595	595	595

All units are in mm

Important Warranty Information

The Ashley LED Panel Light has a 3 year warranty, which can be extended free of charge to 5 years by registering online via the website address below. The registrant must provide the product part number and date of manufacture, which can be found on the label attached to the luminaire housing.



Certificate No. FS 590684



Certificate No. EMS 590685

NETLED Lighting
Buckingway Business Park
300 Anderson Road
Cambridge
CB24 4UQ
sales@netled.co.uk
www.netled.co.uk

Technical Helpline: 01223 851505
Email: support@netled.co.uk

www.netled.co.uk/downloads

Distributed by




ASHLEY LED PANEL INSTALLATION GUIDE

Part Number:	Description:
NET-43-03-65	600x600mm Standard
NET-43-03-66	600x600mm Emergency
NET-43-03-67	600x600mm Self Test Emergency
NET-43-03-68	600x600mm Dimmable
NET-43-03-69	600x600mm Dimmable Emergency
NET-43-03-70	600x600mm Dim Self Test Emergency
NET-43-03-71	600x600mm Dim DALI Emergency



SUPPLY/EARTH CLASS

Driver
220-240V AC 50/60 Hz
Fig.1 Mains Input Termination

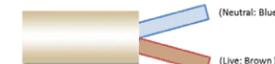

Class II

30-42V DC
Luminaire

Fig2. Twist Lock Connectors



Class III



Installation procedure: Carefully read the installation instructions and ensure the mains supply is isolated before installation. Please follow the safety information overleaf before carrying out any installation. Please retain the leaflet for future reference. Important: When installing, leave a space of at least 1.2m between the LED Panel and any heating source/air conditioning unit.

LED Panel Installation:

 Non-Replaceable light source  Replaceable control gear by professional

Step 1: Carefully remove the LED Panel and driver from the packaging. Remove the ceiling tile from the location where you want to install the LED Panel.

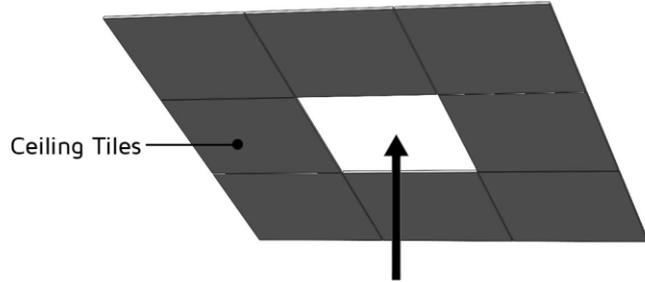


Fig.1

Step 2: Wire the flying leads from the LED Driver into the mains supply, Fig.2.

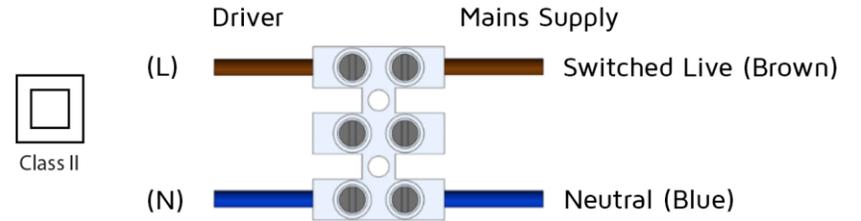


Fig.2

Step 3: Connect the panel light and driver, Fig.3.

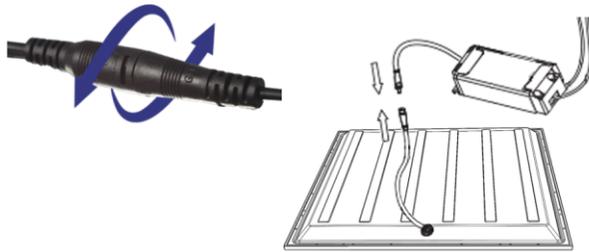


Fig.3

Step 4: Move the LED Panel into the ceiling aperture and ensure the LED Panel is mounted securely, Fig.4a. Finally, turn on the mains supply to check the panel is working correctly, Fig.4b.

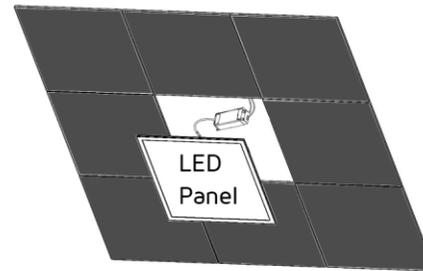


Fig.4a


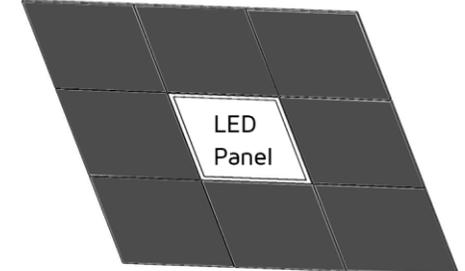


Fig.4b

Alternate wiring diagrams

Dimmable LED Panel wiring diagram:

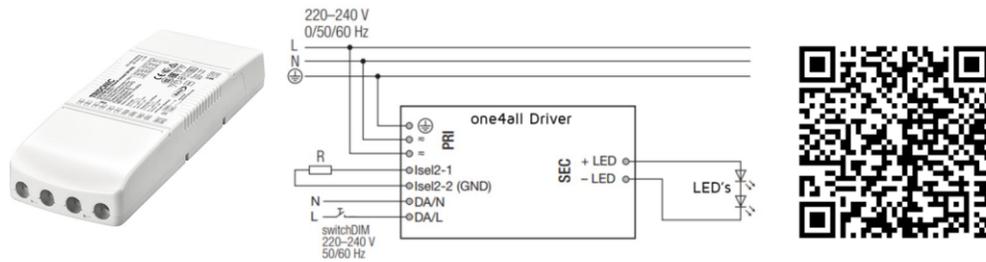

For more Dimmable and Dimmable Emergency information, please refer to the above QR code for driver wiring instructions.

Emergency wiring diagram:

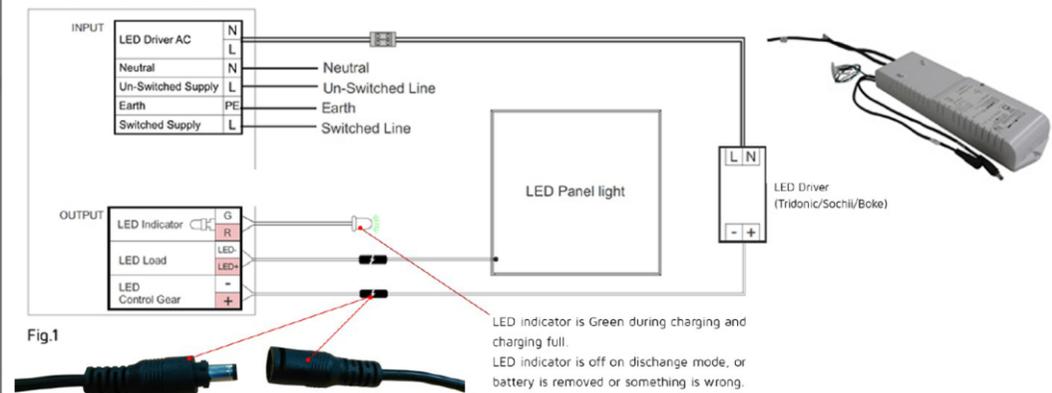


Fig.1