

Safety Information

>All electrical work must be undertaken by a qualified contractor to ensure compliance with latest edition BS7671 and IEE/IET wiring regulations.

> Before installing an Keystone Flood Light or doing any maintenance, ensure power supply is turned off at the circuit breaker or fuse box.

> This product is designed for permanent connection to fixed wiring; the circuit should be protected with the appropriate MCB or fuse.


Environment

>Please DO NOT dispose of electrical items or packaging as unsorted waste. Use the recycling facilities provided by your local authorities.

Non-replaceable light source

>The light source of this luminaire is not replaceable. When the light source reaches its end of life the whole luminaire shall be replaced.

PRODUCT DIMENSIONS

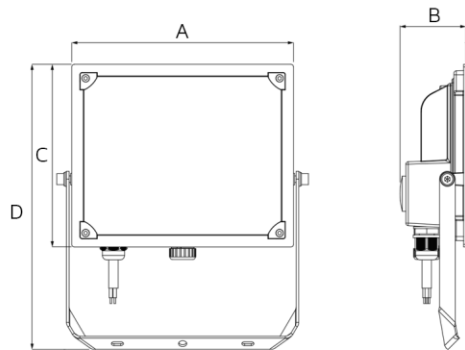

	A	B	C	D
20W	156	44.5	130	207
50W	170	50.5	140	218
100W	225	50.5	185	303

All units are in mm

Important Warranty Information

The Keystone Flood Light has a 3 year warranty, which can be extended free of charge to 5 years by registering online via the website address below. The registrant must provide the product part number and date of manufacture, which can be found on the label attached to the luminaire housing, along with the original purchase invoice.



Certificate No. FS 590684



Certificate No. EMS 590685

NET LED Ltd.
Buckingham Business Park
300 Anderson Road
Cambridge
CB24 4UQ
sales@netled.co.uk
www.netled.co.uk

Technical Helpline: 01223 851505
Email: support@netled.co.uk

www.netled.co.uk/downloads

Distributed by



KEYSTON FLOOD LIGHT INSTALLATION GUIDE

KEYSTON FLOOD LIGHT NET-70-04-XX


KEY DATA

Light Source	LED 		
Power	10W/20W	30W/50W	70W/100W
Luminous Flux	1250lm/2530lm	3375lm/5000lm	8400lm/11500lm
Luminous Efficacy	100-120lm/W		
Colour Temperature	3000K / 4000K / 5000K		
Colour Rendering	>80 CRI		
Housing Material	Aluminium		
Diffuser Material	Glass		
IP Rating	IP65		
Manufacturer	Hontek Lighting Technology Co., Ltd		

SUPPLY/EARTH CLASS

220-240V AC 50/60 Hz

Fig.1 Mains Input Termination

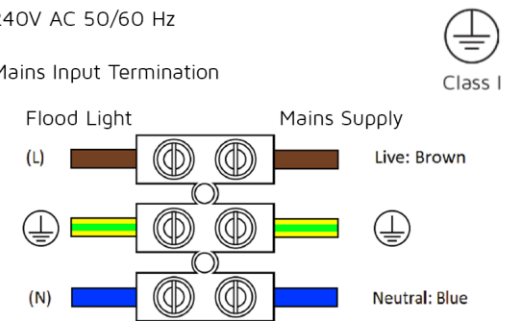

Installation procedure: Carefully read the instructions and ensure the mains supply is isolated before installation. Please follow the safety information overleaf before carrying out any installation. Please retain this leaflet for future reference.

Flood Light installation:




Non-replaceable light source




Non replaceable control gear


Step 1: Carefully remove the Keyston Flood Light from the packaging. Loosen the bolts on each side of the flood light and remove the mounting bracket.

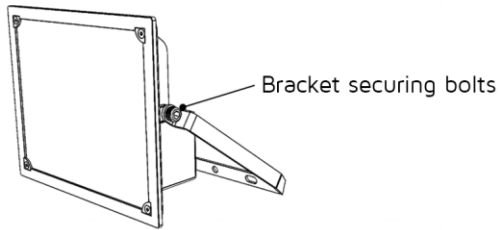


Step 2: Select a suitable mounting position. The minimum recommended mounting height is 2m. Drill into the mounting surface and screw the bracket onto the mounting surface using suitable wall plugs and screws.

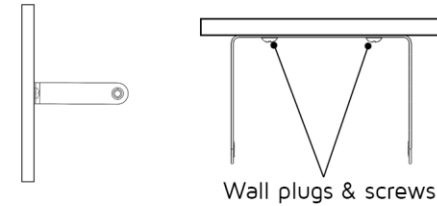


Step 3: Re-attach the Keyston Flood Light to the bracket.

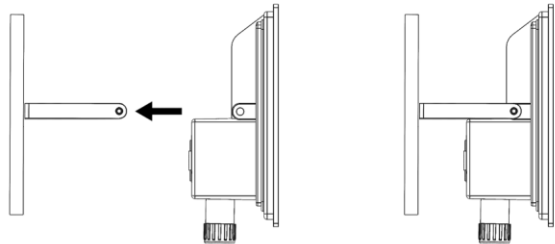


Step 4: To change the colour temperature settings, unscrew the switch cover cap and select required colour temperature/wattage.

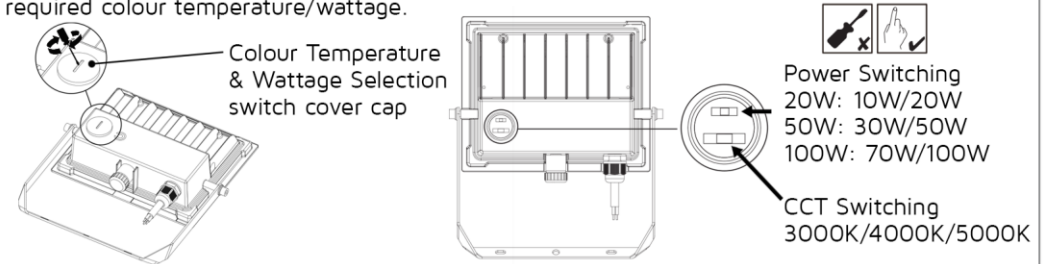

Step 5: Tilt the Keyston Flood Light to adjust it as required and tighten the bolts to lock in position. Secure the supply cable to the wall using suitable clips. Ensure that cable is not touching the body of the Keyston Flood Light.

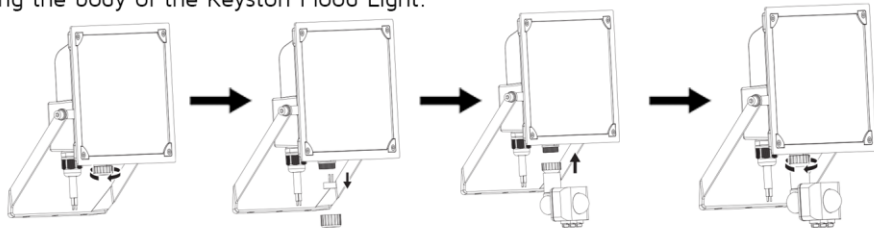

Step 6: Connect the cable to the mains as per the illustration below and test the Keyston Flood Light for correct operation.

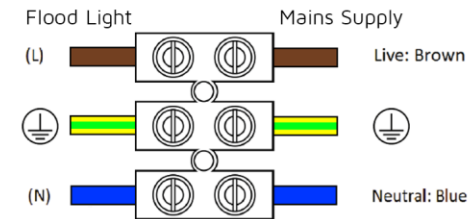

Accessories

Photocell Sensor

Luminaire is only on from Dusk till Dawn.



Accessories

PIR Sensor

Ensures that the unit is switched off when no movement is detected.



Full product range available

Visit www.netled.co.uk for more commercial LED lighting products, including:

Panel Lights, Downlights, T5 and T8 Tubes, Batten and Linear Luminaires, 2D Bulkheads and retrofit Gear Trays, Non-corrosive Luminaires, High Bays and much more.