
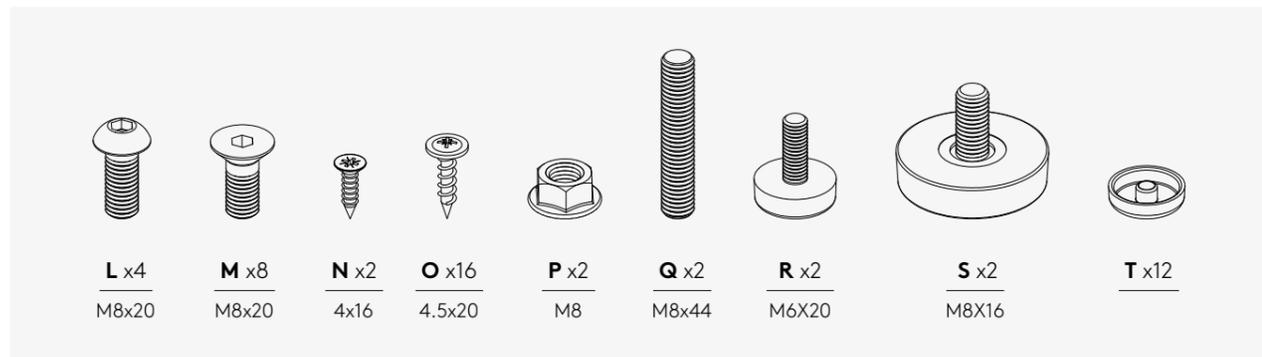



FIVE

Assembly Instructions


FIVE

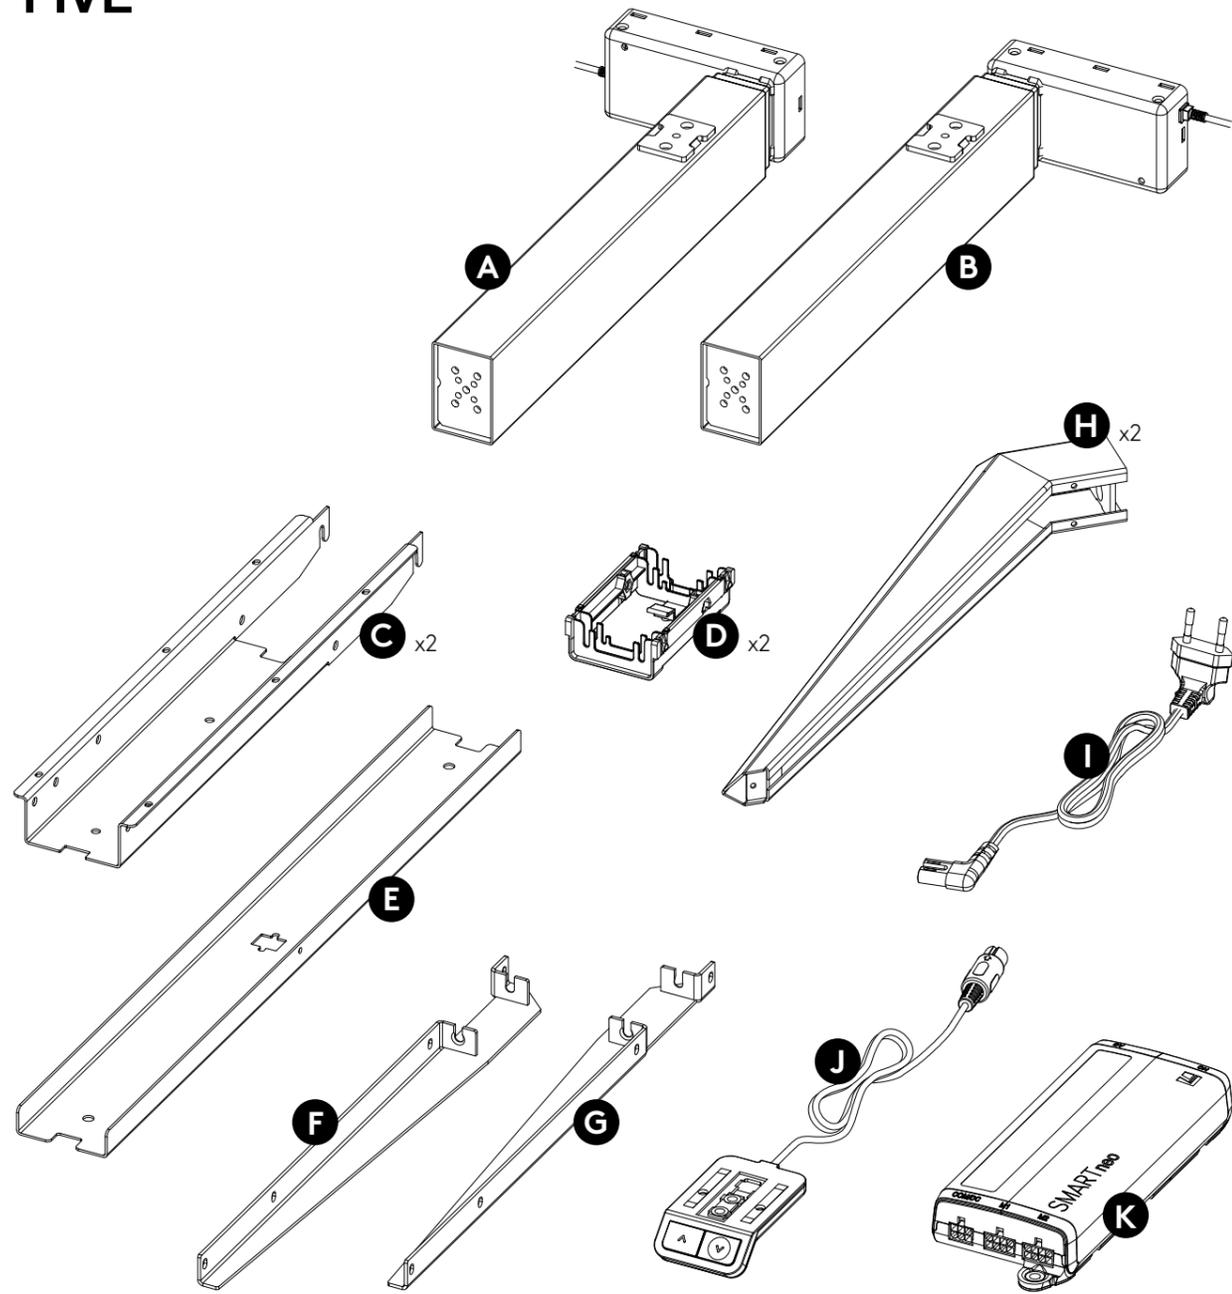


1.

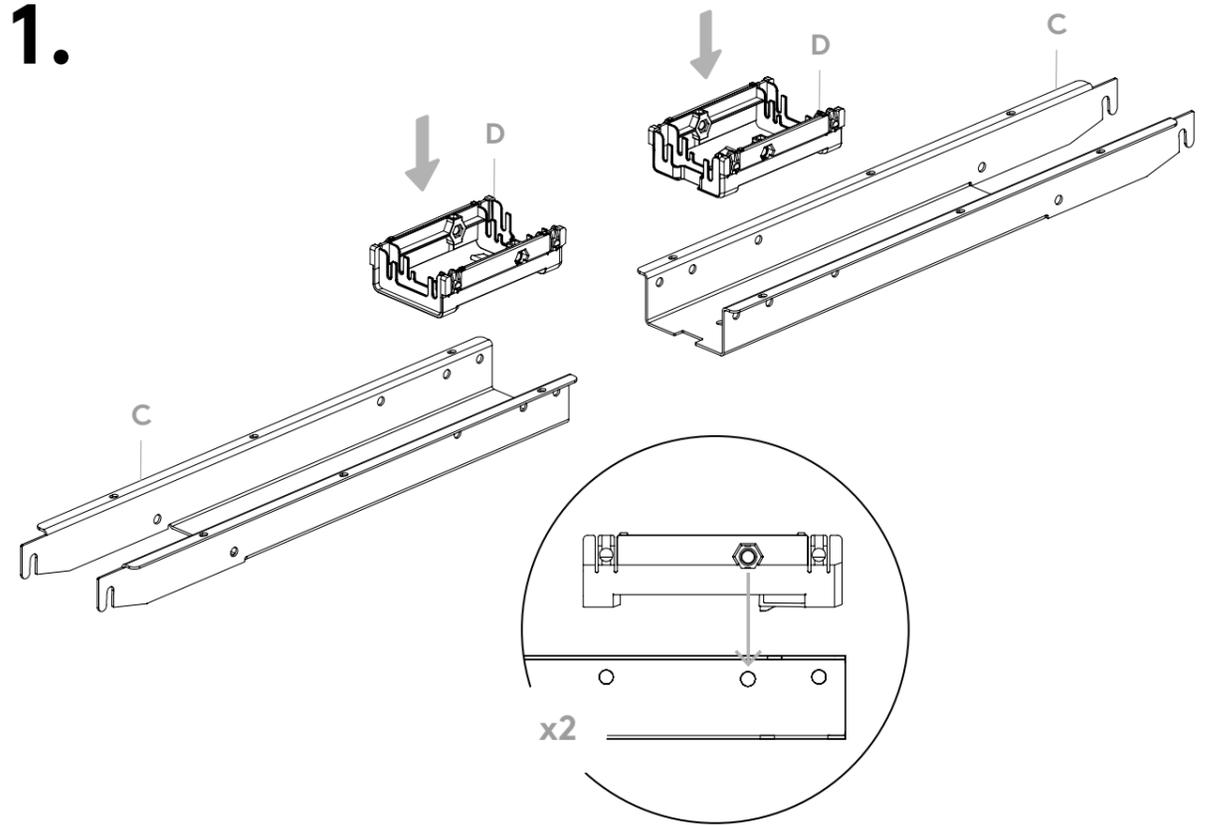


2.

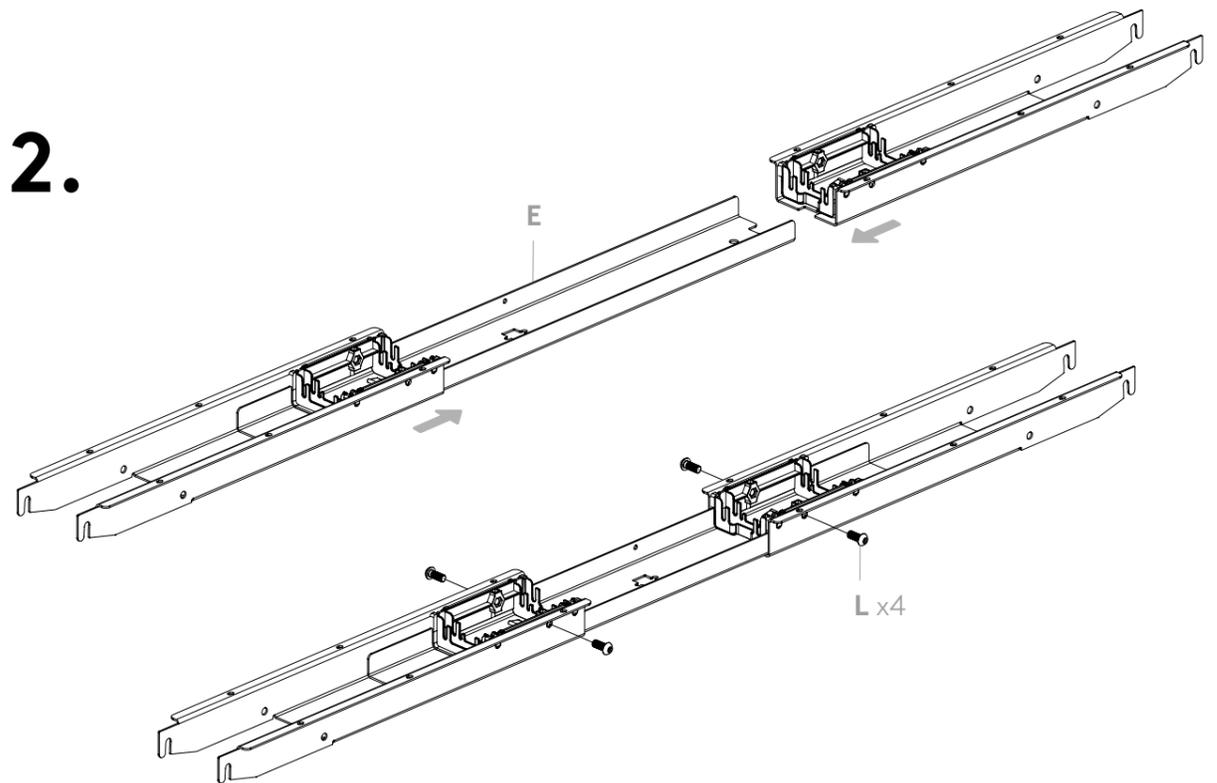


3.

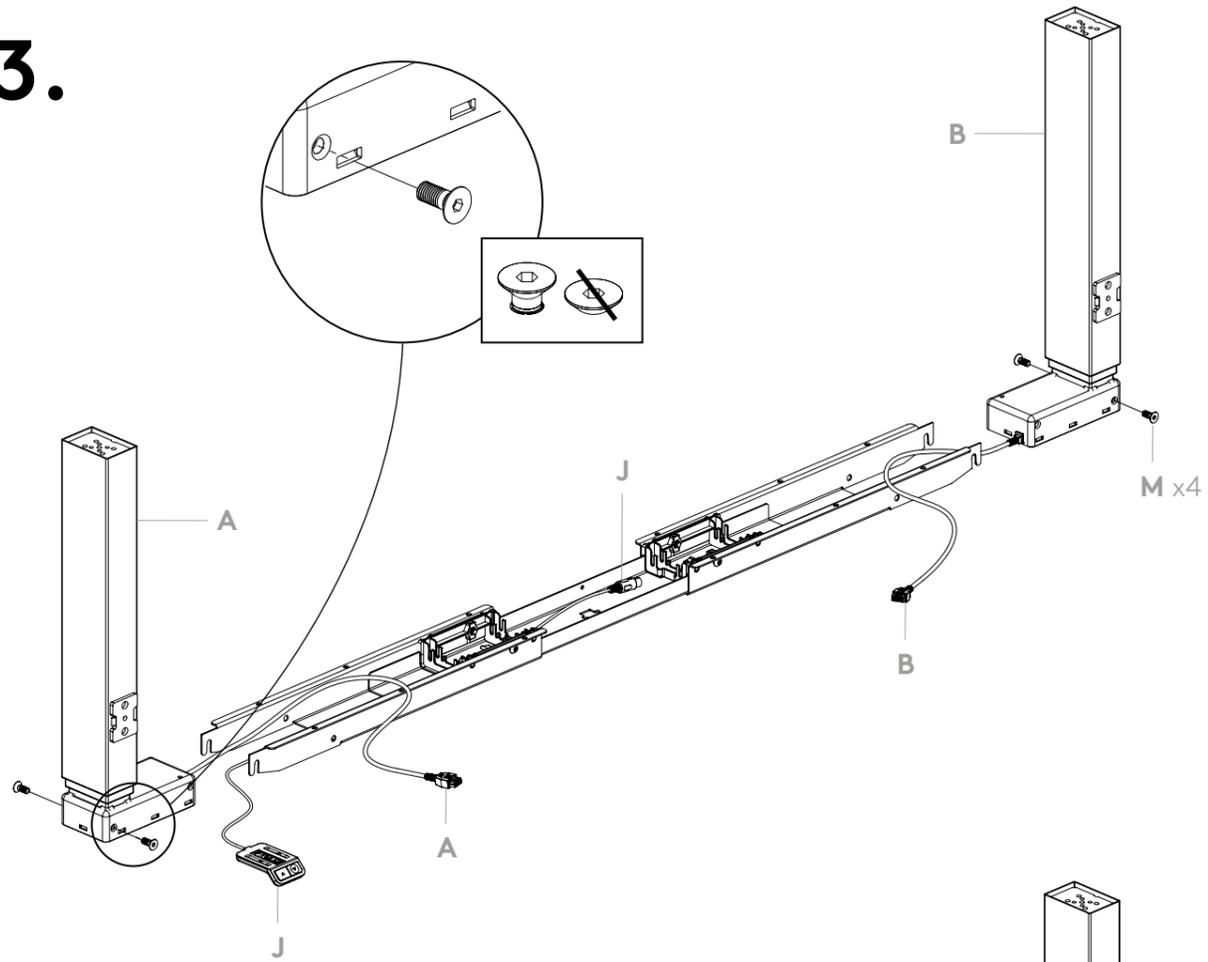


4.

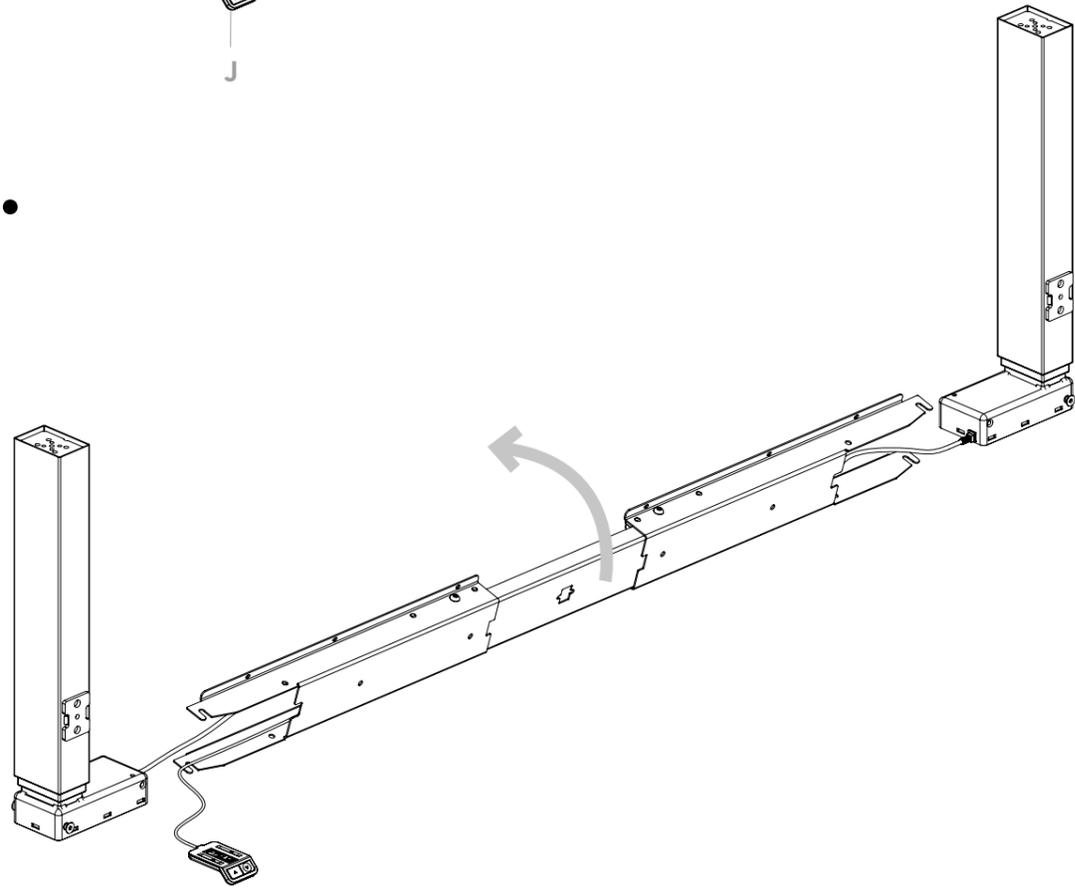


5.

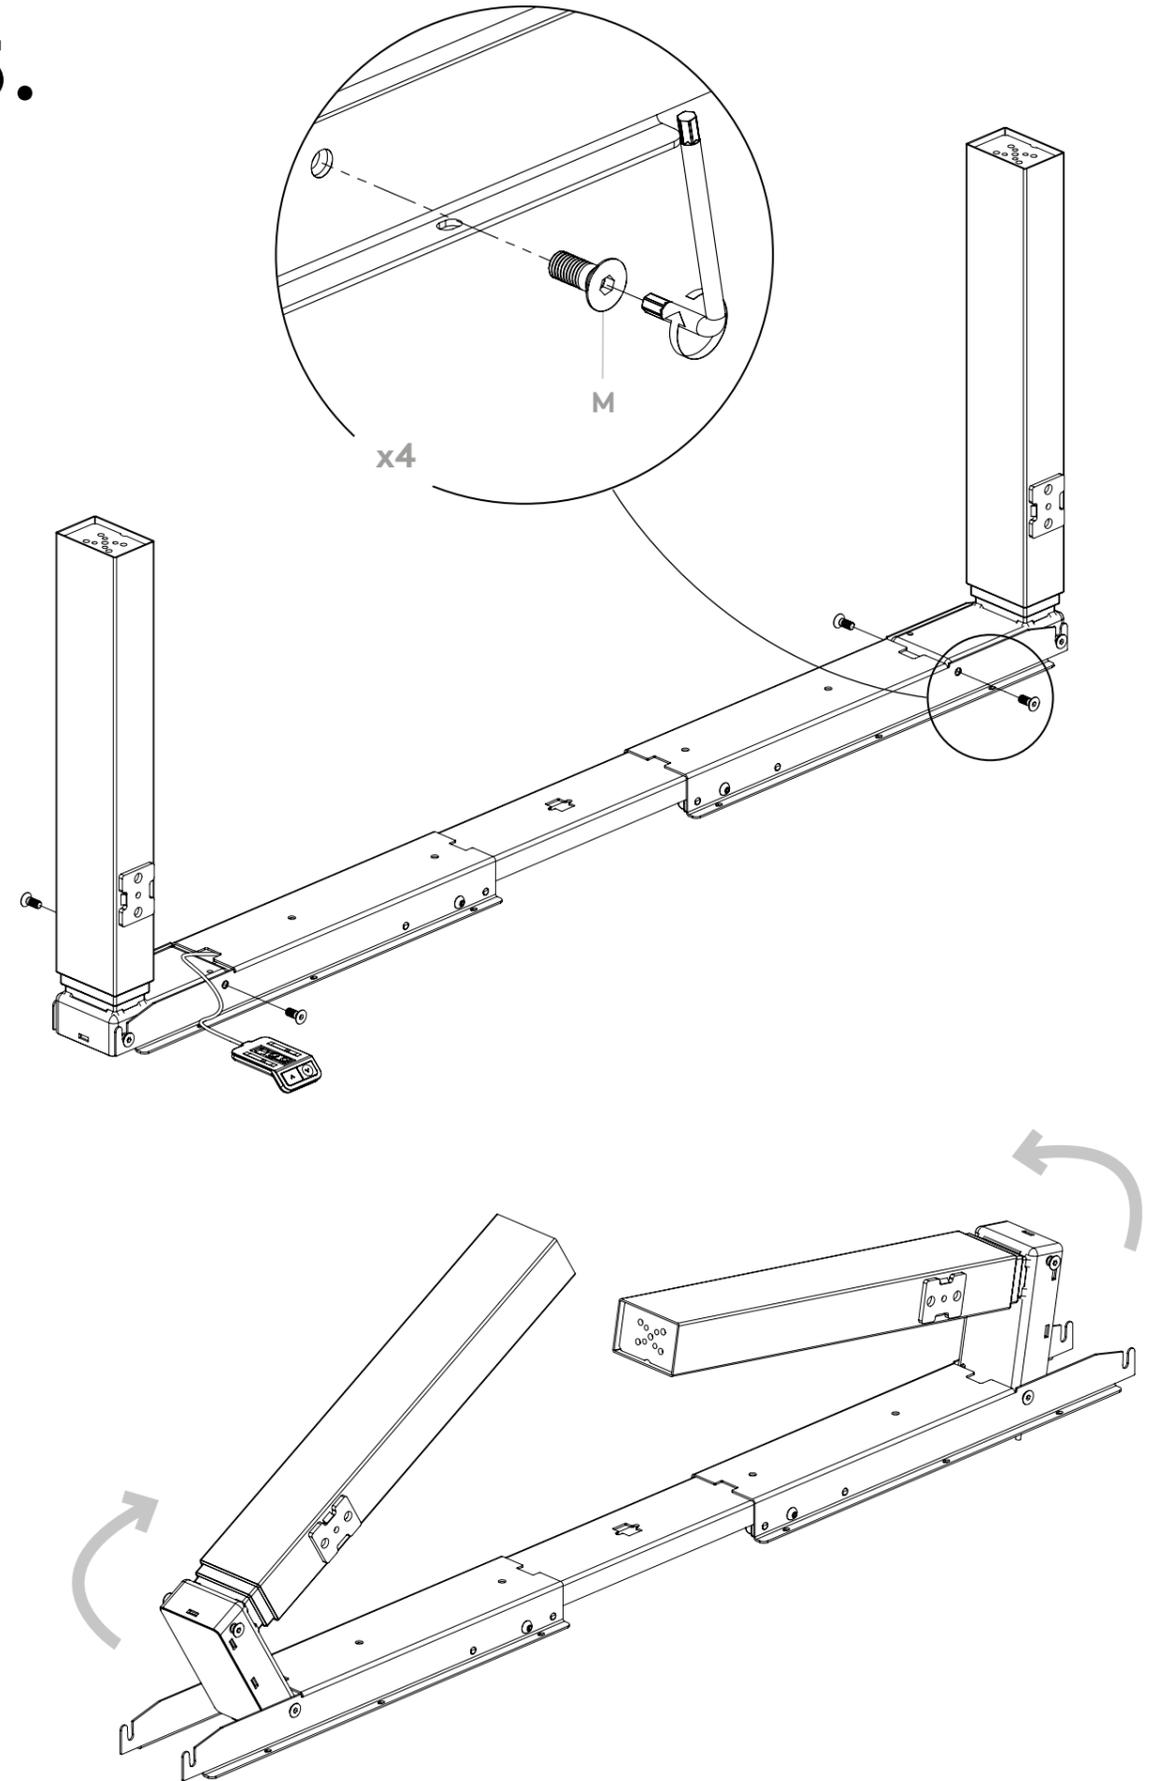


6.

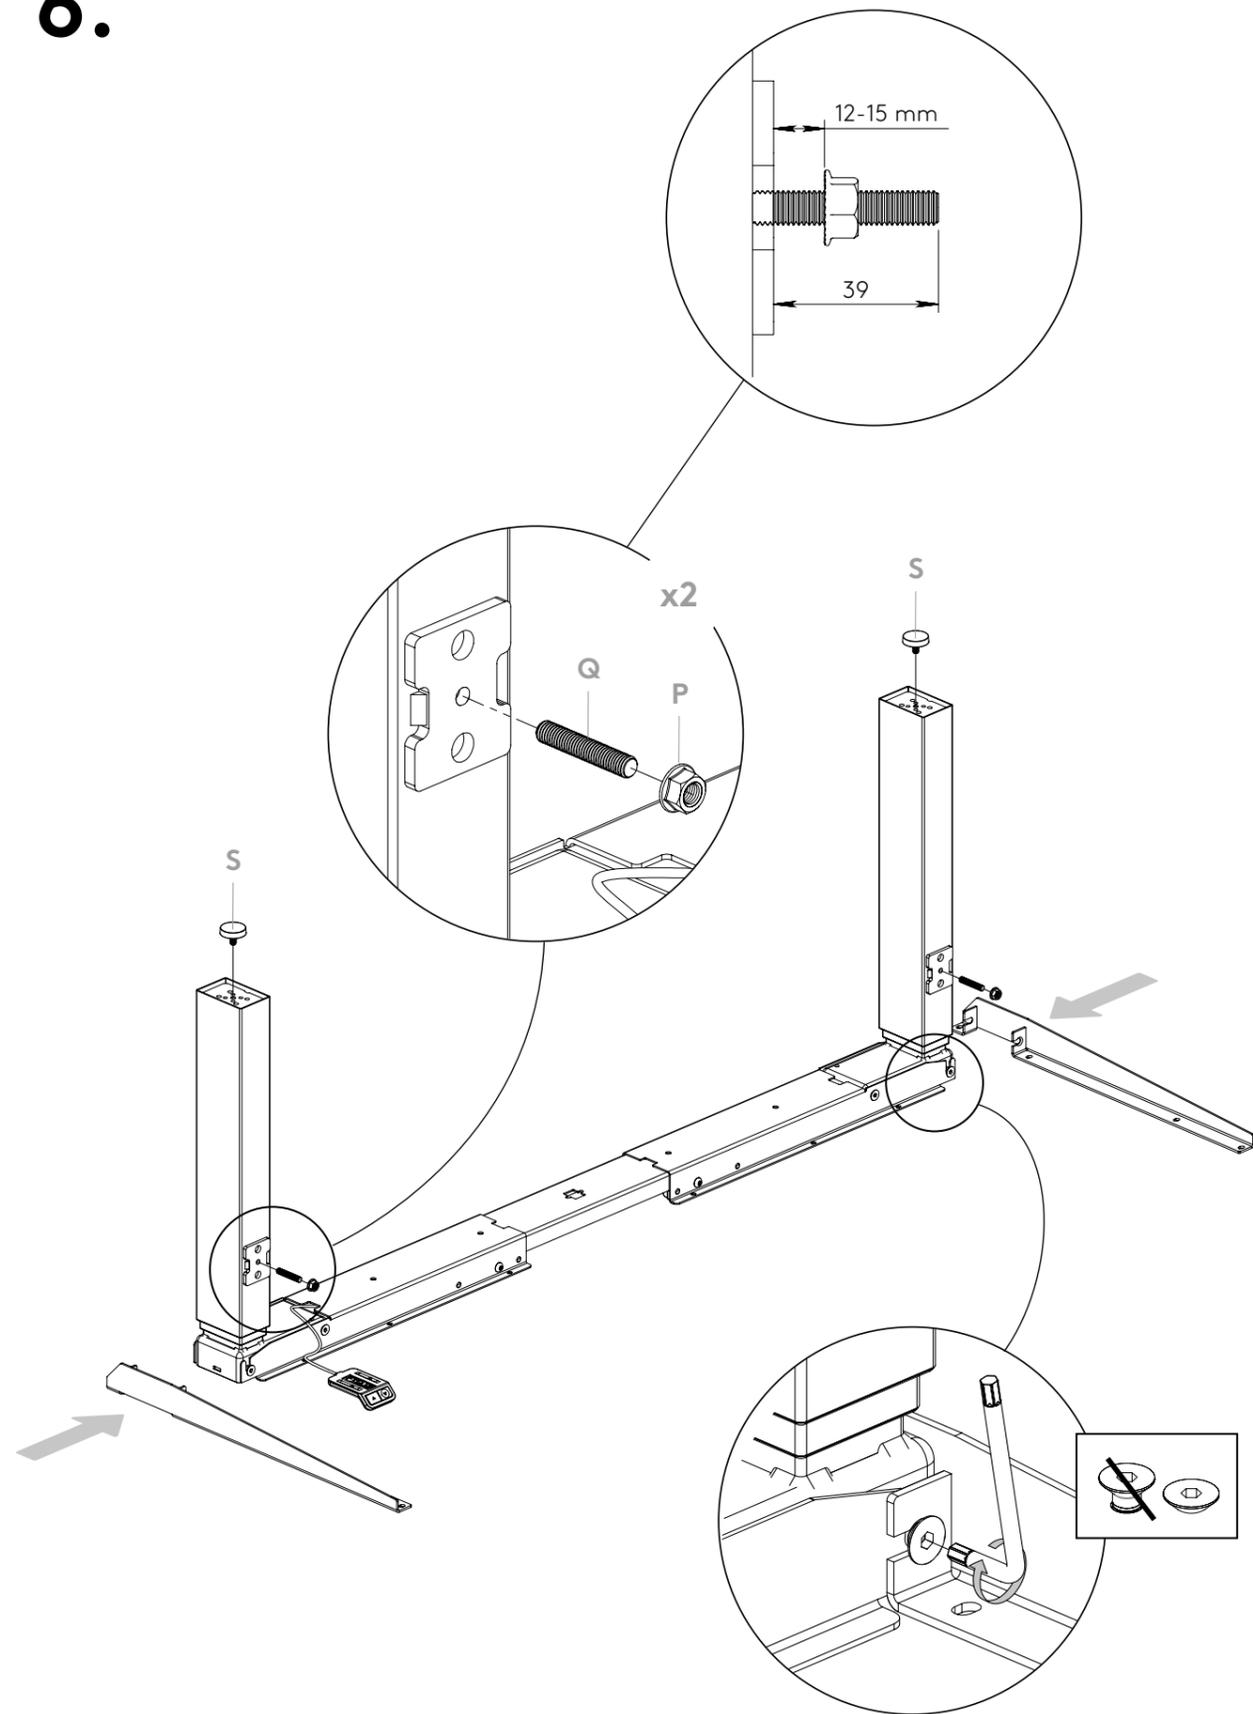


7.

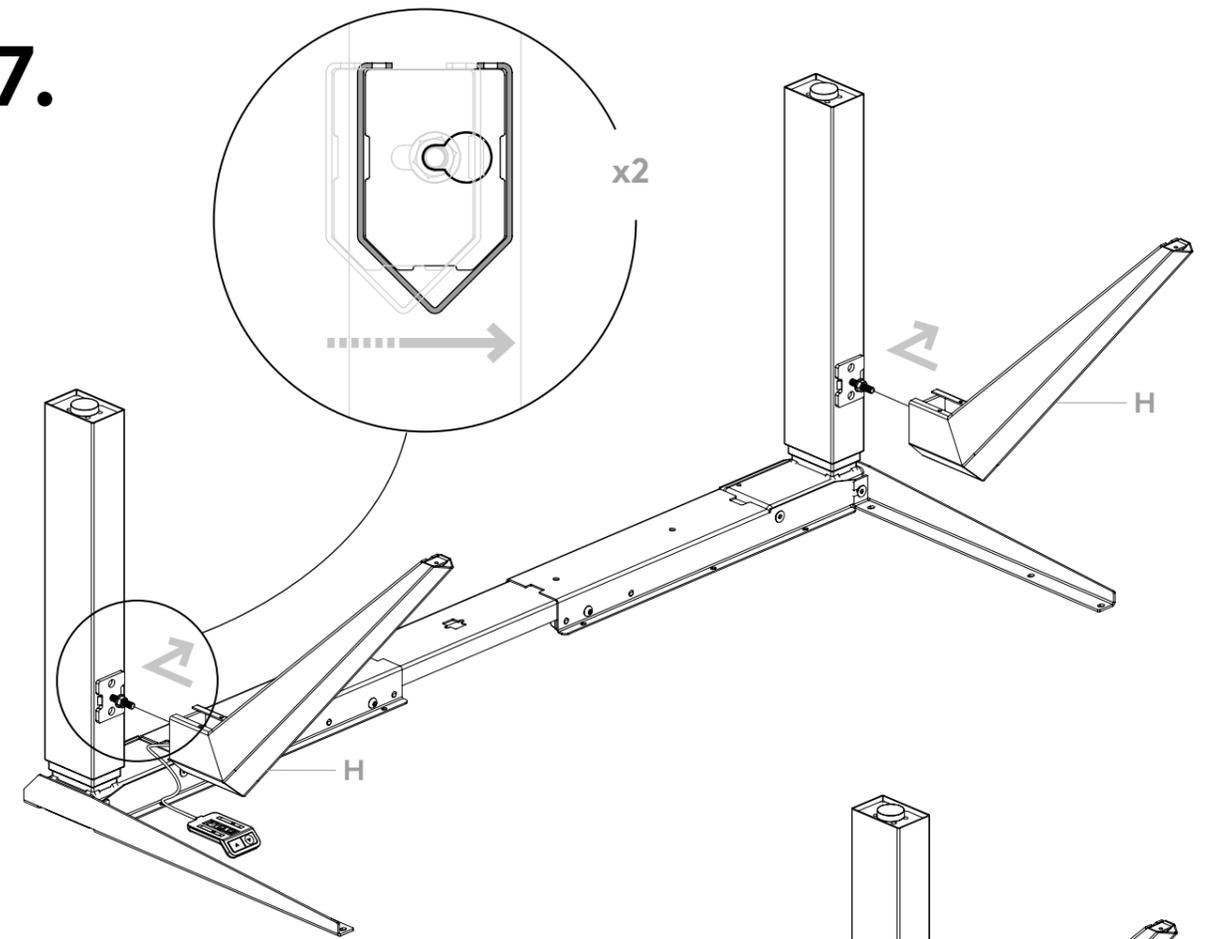


8.

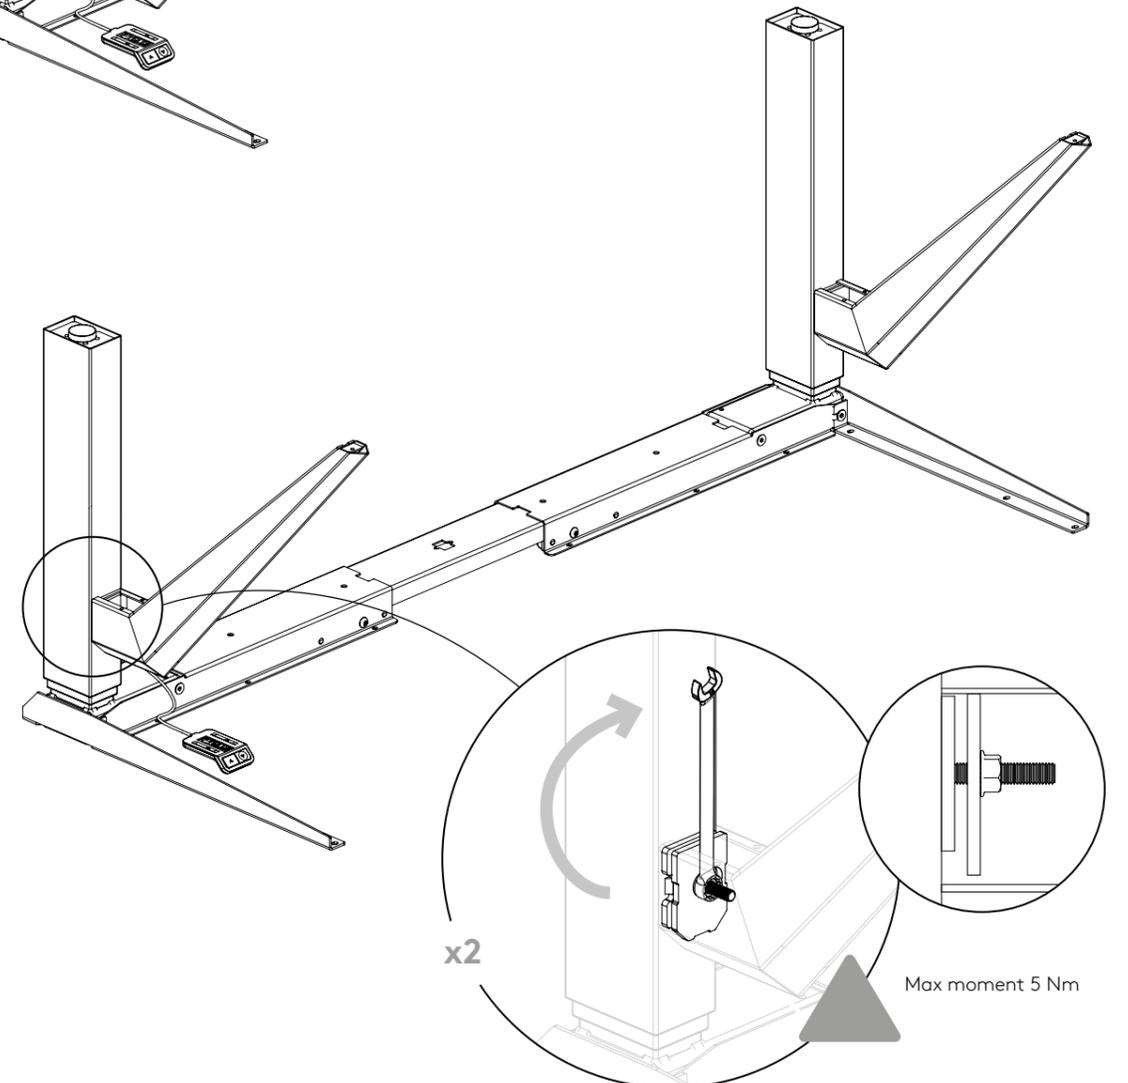



9.

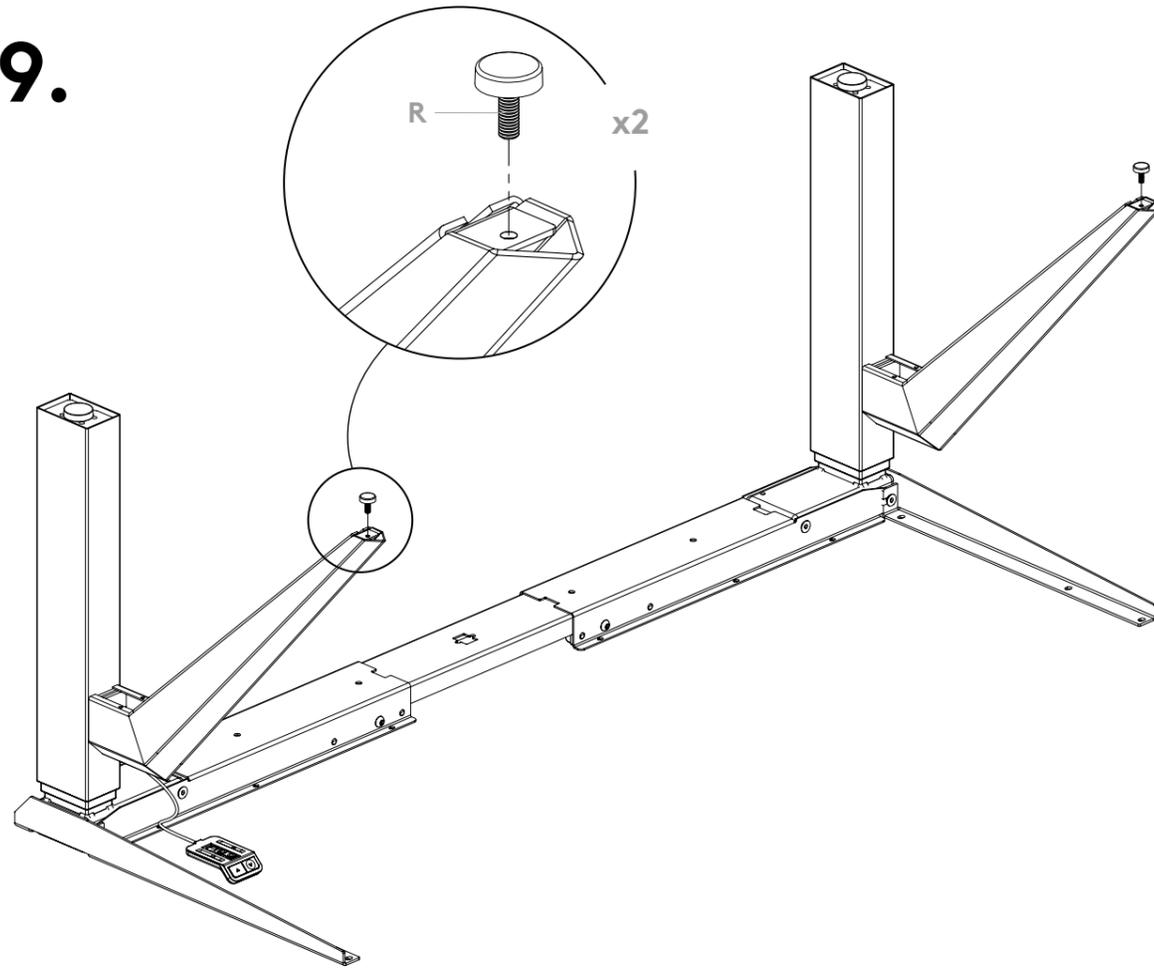


10.

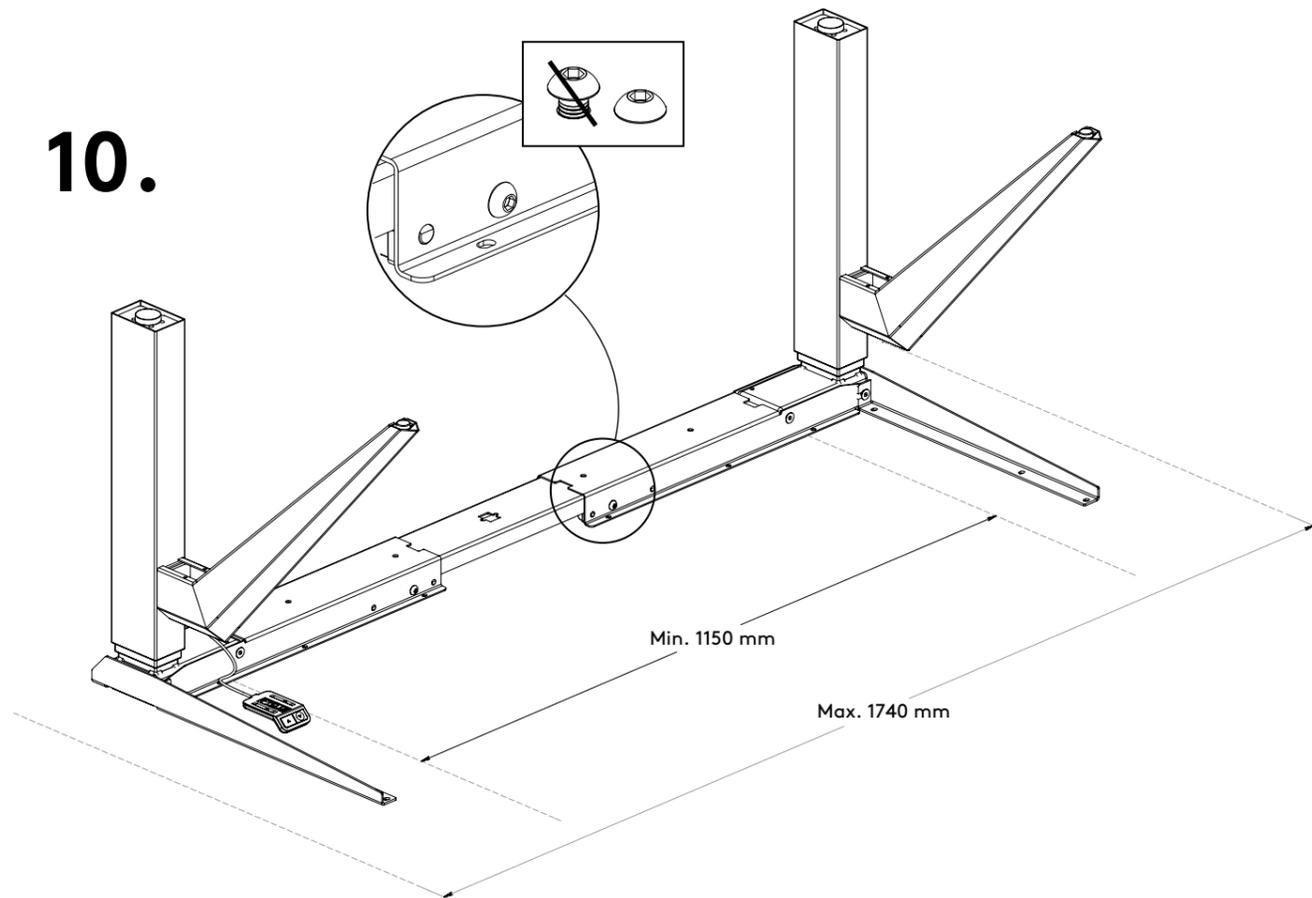


11.

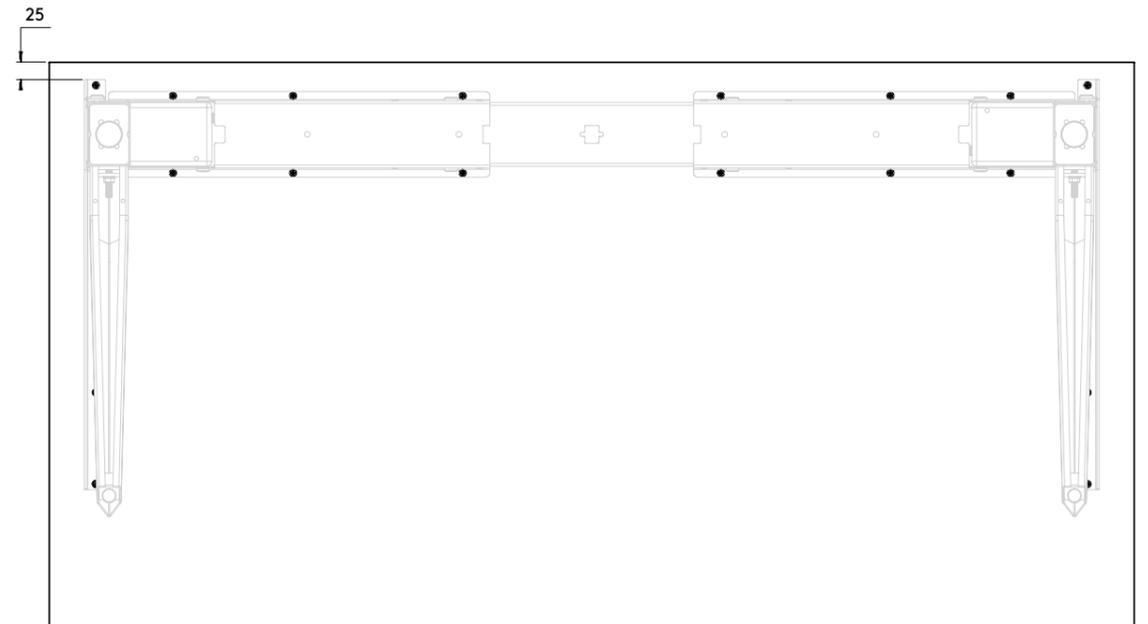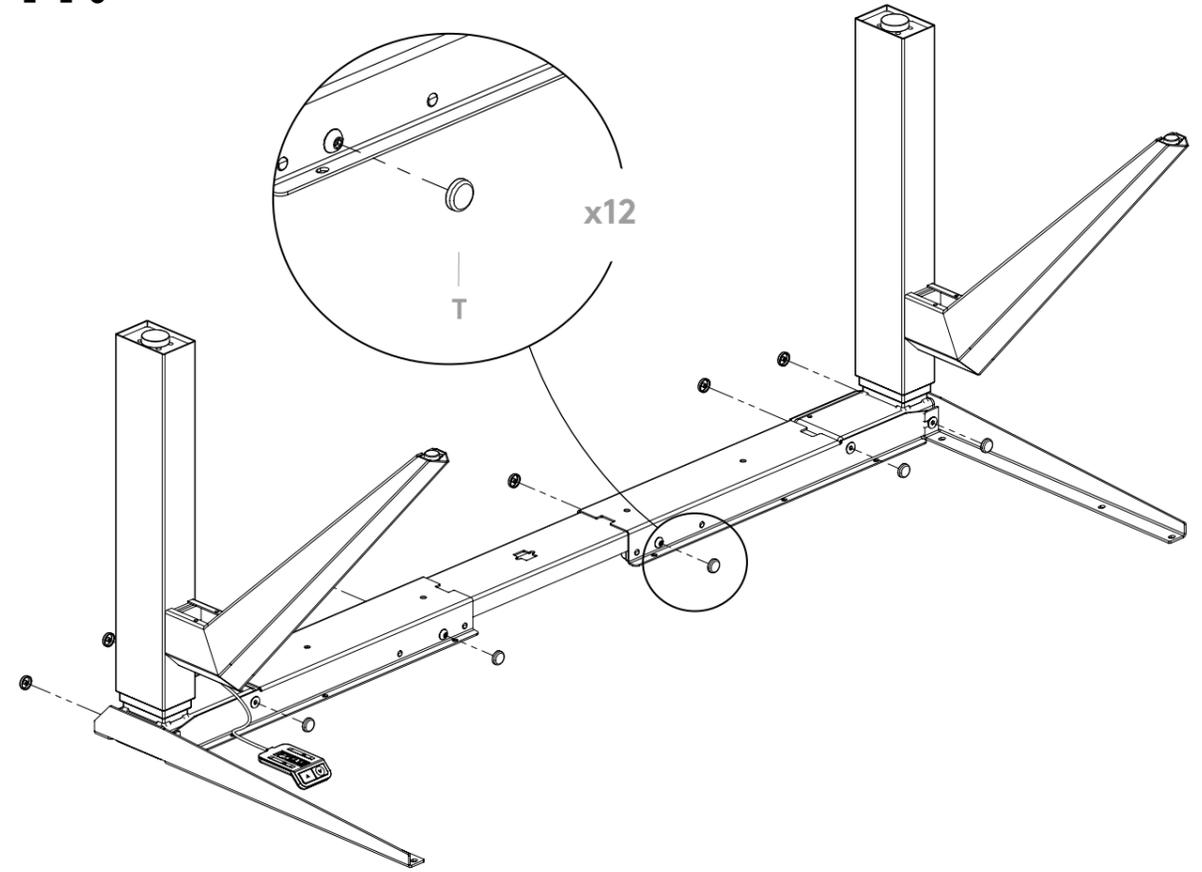

12.

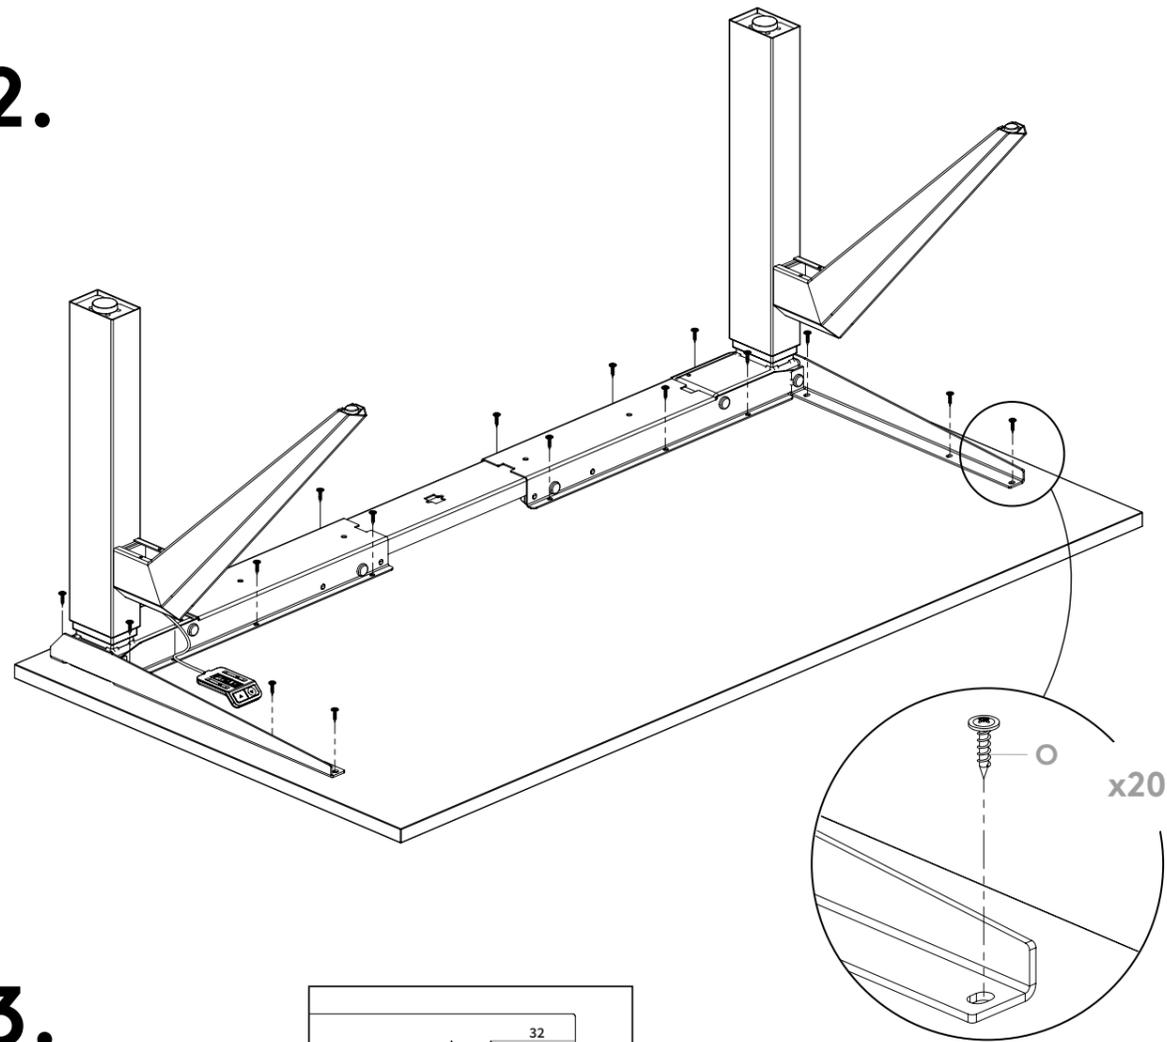

13.

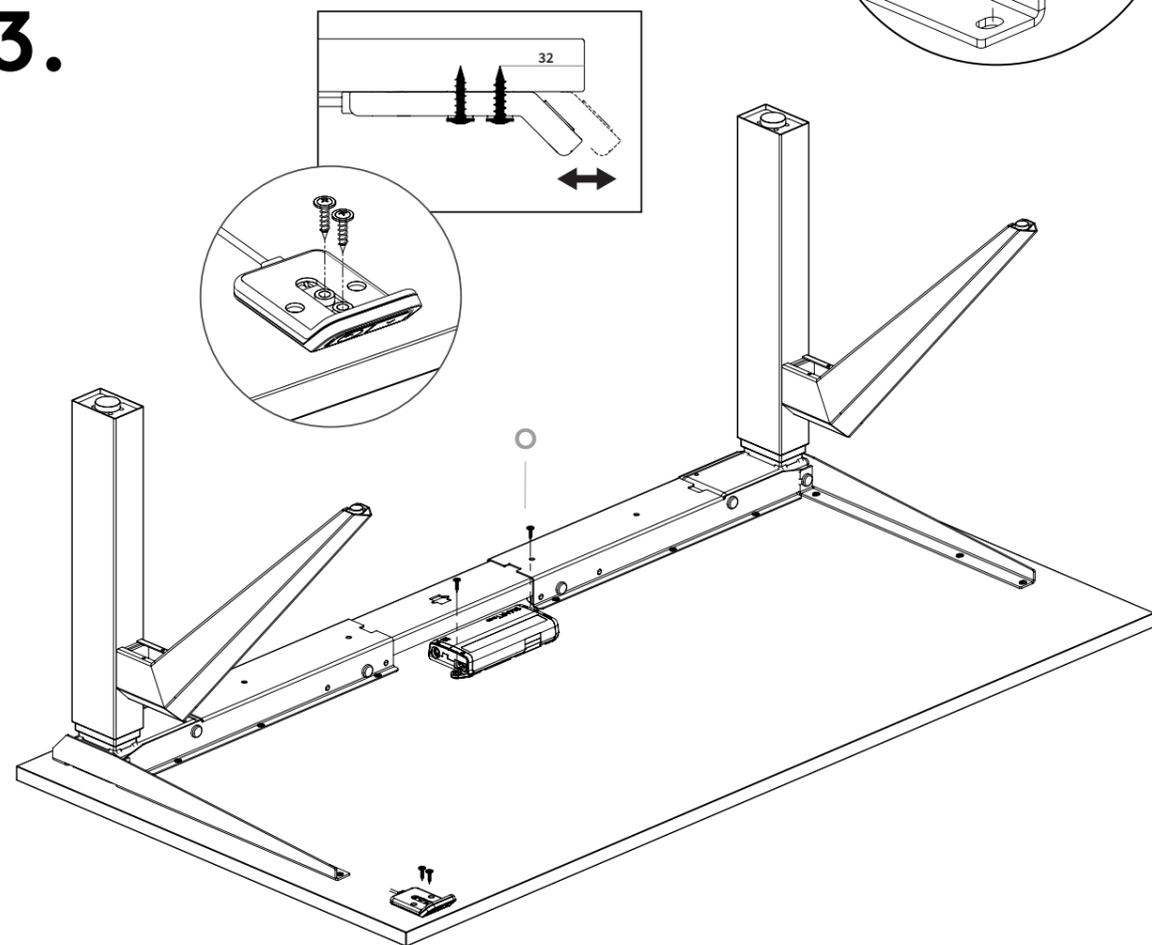

14.



NOTE All cables must be connected to the control box in this specific sequence before you plug in the power.

RESET PROCEDURE

Lower the frame to its lowest position by pressing the down arrow on the hand control. Release the button. Press the button again and keep it pressed for 10 seconds, the reset is now carried out and the frame is ready to use.

