

TRIDONIC

Triac Driver Installation Guide (Downlights)

LCA 21W 300-500mA flexC PH-C SR ADV

NET-60-43-82

Distributed by



Certificate No. FS 571788



Certificate No. EMS 571787

NET LED Ltd.
Buckingway Business Park
300 Anderson Road
Cambridge
CB24 4UQ
sales@netled.co.uk
www.netled.co.uk

Technical Helpline: 01223 851505
Email: support@netled.co.uk

www.netled.co.uk/downloads

Installation procedure: Carefully read the instructions and ensure the mains supply is isolated before installation. Please follow the wiring information before carrying out any installation. When installing, leave a space of at least 1.2m between the LED Panel and any heating source / air conditioning unit. Please retain this leaflet for future reference.

Wiring type and cross section:


The wiring can be in stranded wires with ferrules or solid. For perfect function of the cage clamp terminals the strip length should be 4 - 5mm for the input terminal. The max. torque at the clamp screw (M3) is 0.2 Nm.

Input terminal (D2)



Wiring Diagram

Remove existing Driver and wire as below diagram.

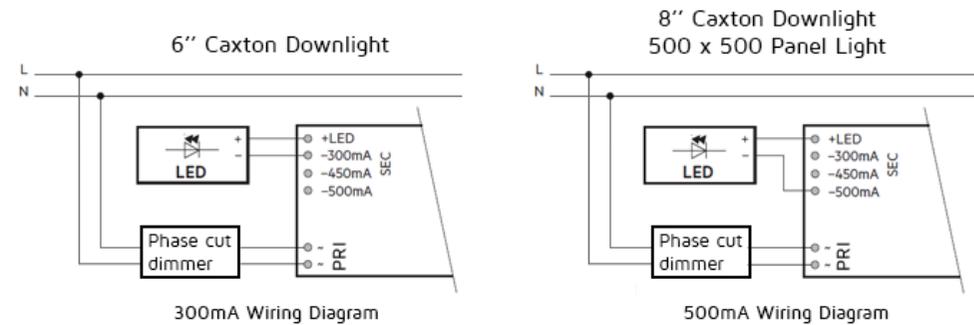

Dimension Drawing

