

## Configuration via web pages


Each ALIF unit hosts its own internal set of web pages which contain all configuration details and settings. You will need to use a computer connected to the same network as each ALIF unit to access the web pages. Additionally, on the console attached to the receiver, you can access its configuration details via the On Screen Display (OSD) by pressing **CTRL + ALT + C**

### To manually configure an ALIF102T via its web page

Run a web browser on your computer and enter the IP address of the required ALIF unit:

The default address is <https://169.254.1.33>

The opening page should be displayed:

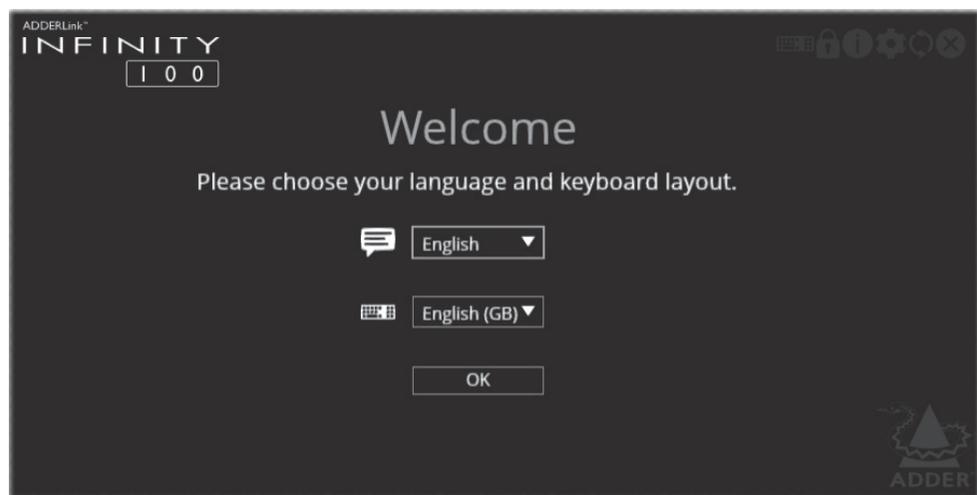

Full user details and setup instructions can be found at either:

- **HDMI®:** <https://www.adder.com/en/kvm-solutions/adderlink-infinity-102t-hdmi>
- **DisplayPort™:** <https://www.adder.com/en/kvm-solutions/adderlink-infinity-102t-displayport>



[www.adder.com](http://www.adder.com)

## Welcome

This quick start guide covers some of the key points of the ALIF102T unit. Full user details and setup instructions can be found at either:

- **HDMI®:** <https://www.adder.com/en/kvm-solutions/adderlink-infinity-102t-hdmi>
- **DisplayPort™:** <https://www.adder.com/en/kvm-solutions/adderlink-infinity-102t-displayport>

## Initial configuration *(Please see the next page for Connection details)*

ALIF units can be linked in two main ways: Direct or Networked.

### Direct linking


Where ALIF transmitters and receivers are directly linked to each other, very little configuration action is required, provided that they both have their factory default settings in place - just link them together. If the standard settings have been changed in a previous installation, you merely need to perform a **manual factory reset** on each unit. Please see the next page for further details.



### Networked linking

Where ALIF units are connected via networked links, you can either configure them individually, or configure them collectively using an AIM server:


- **Configuring networked ALIF units individually** - You need to specify the network addresses of the ALIF units so that they can locate each other. This is done by running the ADDERLink INFINITY browser-based configuration utility on a computer system linked to the same network as the ALIF units. Please see the rear page for further details.
- **Configuring networked ALIF units collectively** - The ADDERLink INFINITY Management (AIM) server allows you to configure, control and coordinate any number of ALIF transmitters and receivers from a single application. See [www.adder.com](http://www.adder.com) for details.

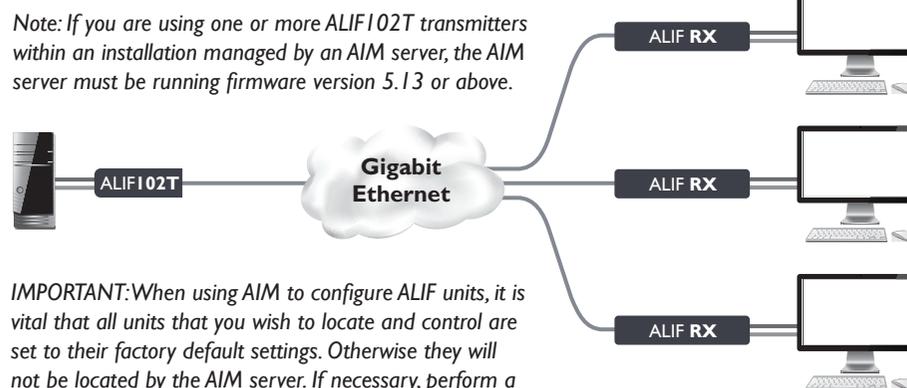

*Note: If you are using one or more ALIF102T transmitters within an installation managed by an AIM server, the AIM server must be running firmware version 5.13 or above.*

**IMPORTANT:** When using AIM to configure ALIF units, it is vital that all units that you wish to locate and control are set to their factory default settings. Otherwise they will not be located by the AIM server. If necessary, perform a manual factory reset on each ALIF unit. See next page.

# Connections

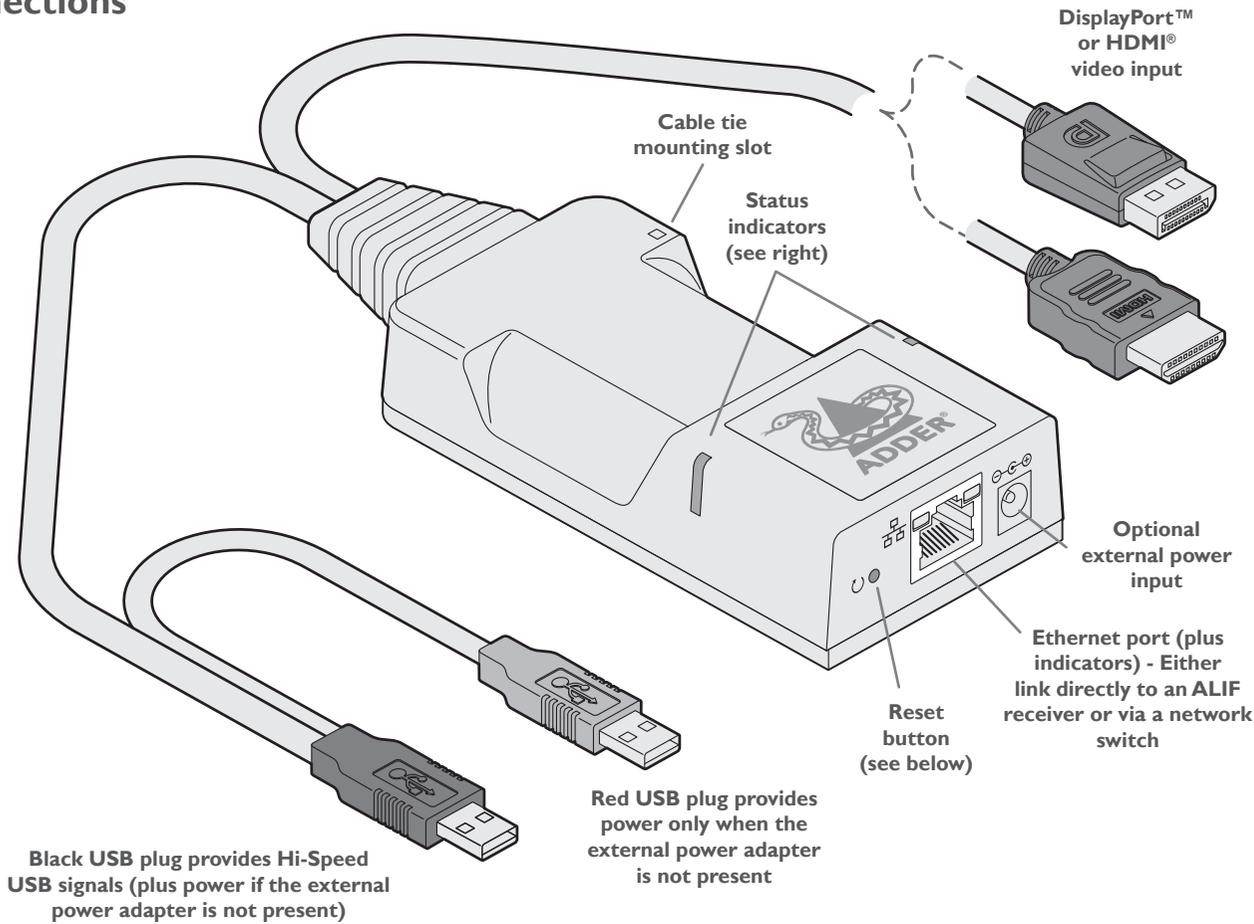

Main status indicators	
• Off	No power.
• Green	Operating - Video, USB and network link all present.
• Orange	Operating - But video, USB and/or network link missing.
• Red	(momentarily) Unit is booting up, or (consistently) Unit has failed, try rebooting.
• Red/green flashing	Unit is in backup mode.
• Blue	Factory reset has been activated.
• Red/blue flashing	Unit is in upgrade mode.
• Fast green flash	Unit is in identify mode.

Power sourcing summary			
Power adapter	Black USB	Red USB	Power sourced...
x	✓	✓	...from both USB plugs.
✓	✓	x	...from power adapter only.
✓	✓	✓	...from power adapter only, unless it becomes unavailable, in which case power will be taken from both USB plugs after a short interruption.

**To perform a manual factory reset**

- 1 Power on the ALIF102T ie, switch on the host computer.
- 2 Use a narrow implement (e.g. a straightened-out paper clip) to press-and-hold the recessed reset button for more than 15 seconds until the status indicators turn **blue**.
- 3 Release the reset switch. The indicators will remain **blue** for a short while (less than ten seconds) while the unit configures itself and should then change to **green** if all connections are correct; or **orange** if one or more of the video, USB and/or network links are missing.

*Note: Allow the unit to fully complete the reset process by waiting for at least 30 seconds after you release the button.*