

LEDEP11

Installation instructions





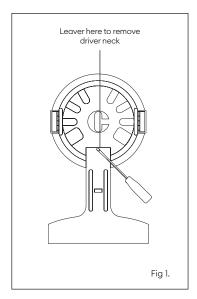

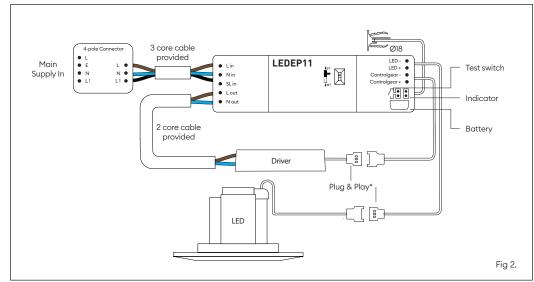

Installation

- Refer to the LED unit installation instructions and install all non-emergency LED units.
- 2. For each emergency light position, drill 18mm hole for LED indicator close to the LED unit hole.
- Drill 7mm hole for test button (optional).
- Switch the emergency converter to the appropriate testing mode (up for self test and down for manual test).
- Note: Self-Test will be the standard setting.
- Remove the driver neck from the LED unit, use small flat screwdriver (Fig 1). Pull the cable out of the LED unit and disconnect plug and play connector.
- 6.
- Connect LEDEP11 plug and play output connectors to the corresponding connectors of the LED unit and LED driver.
- Push the cable back into the LED unit and fit the driver neck back in place.
- Connect input of the LED driver to the LEDEP11 output (Lout, Nout).
- Connect the mains supply to the 4pole connector. L in = unswitched Live, N in = Neutral, E = Earth, SL in /L1= Switched Live. Fit cable clamps to secure the wires. 10
- 12. Connect the battery and write installation date on the battery. Battery is installed in the emergency pack housing, to remove it open the end cover and pull the battery.
- Feed the junction boxes/connectors and LEDEP11 though the ceiling hole.
- Fit the indicator housing to the indicator LED, then press the housing into the ceiling.

 Note: If the drilled hole is slightly larger than 18mm, it may be necessary to apply a little adhesive to the housing to secure it.
- 15. Fit the LED unit into the ceiling.

Testing

Periodic testing of the unit must be performed in line with the appropriate regulations.

Self-test version

- Initial duration test: The test will be carried out automatically 24 hours after the unit is powered up. The green LED indicator will be flashing for 5 days if the duration test passed.
- Functional test (every 7 days) 5 second test, check functionality of emergency unit, battery and LED unit.
- Full test (every 180-182 days) full duration test 3 hours. Green LED indicator will be flashing slowly for 5 days if the duration test passed.

Test switch functionality

- $Hold \ test \ button \ for \ 1 \ second \ functional \ test 5 \ second \ test, check \ functionality \ of \ emergency \ unit, \ battery \ and \ LED \ unit.$
- Hold test button for at least 10 seconds reset self-test counter to 0 for functional and full duration test

Emergency pack commissioning

- Reset the self-test counter to 0 hold test button for at least 10s.
- Provide an uninterrupted mains power supply (permanent live) for 24 hours.
- Check that the green indicator LED light is lit, this confirms that the battery is charging.
- Initial duration test will start automatically 24 hours after installation.



5 year warranty



Disposal of this product should be separate from household waste. Please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resource. Household users should contact their local government office for details of where and how they can take these items for environmentally safe recycling.

- t +44 (0) 1604 495 151 | f +44 (0) 1604 495 095 | e sales@collingwoodgroup.com | w collingwoodlighting.com Collingwood Lighting, Brooklands House, Sywell Aerodrome, Sywell, Northampton NN6 0BT, United Kingdom
- t +32 (0)4 351 91 40 | e info@indigo-lighting.com | w www.indigo-lighting.com Indigo S.A. / N.V. Rue de la légende 32 G, 4141 Srimont - Belgique

LEDEP11

Installation instructions





LED indicator status

LED indicator status	Comment				
Green LED on	Product connected and functioning correctly				
Green LED flashing (approx. 0.25s interval)	Functional test in progress				
Green LED flashing (approx. 1s interval)	Successful duration test - flashing for 5 days Duration test in progress				
Red LED on	LED unit failure				
Red LED flashing (approx. 0.25s interval))	Battery duration test failure				

Installation data

- · Isolate the mains supply, prior to wiring.
- This unit must be wired by a qualified electrician or suitable competent person.
- Do not cover emergency pack with insulation.
- Use only with LED modules, ensuring the supplied emergency markings are placed on the luminaire.



5 year warranty



Disposal of this product should be separate from household waste. Please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resource. Household users should contact their local government office for details of where and how they can take these items for environmentally safe recycling.

- t +44 (0) 1604 495 151 | f +44 (0) 1604 495 095 | e sales@collingwoodgroup.com | w collingwoodlighting.com Collingwood Lighting, Brooklands House, Sywell Aerodrome, Sywell, Northampton NN6 0BT, United Kingdom
- t +32 (0)4 351 91 40 | l e info@indigo-lighting.com | l w www.indigo-lighting.com | lndigo S.A. / N.V. Rue de la légende 32 G, 4141 Srimont Belgique

LEDEP11



Installation instructions

en									
Emergency installation and maintenance record									
Product:									
Installer:									
Date installed:									
Commissioning by:									
Date commissioned:									

	Year 1		Year 2		Year 3		Year 4		Year 5	
Month	Signed	Date								
1										
2										
3										
4										
5										
6										
7										
8										
9										
10										
11										
12										



5 year warranty



Disposal of this product should be separate from household waste. Please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resource. Household users should contact their local government office for details of where and how they can take these items for environmentally safe recycling.

- a t +44 (0) 1604 495 151 | f +44 (0) 1604 495 095 | e sales@collingwoodgroup.com | w collingwoodlighting.com Collingwood Lighting, Brooklands House, Sywell Aerodrome, Sywell, Northampton NN6 0BT, United Kingdom
- t +32 (0)4 351 91 40 | l e info@indigo-lighting.com | l w www.indigo-lighting.com | lndigo S.A. / N.V. Rue de la légende 32 G, 4141 Srimont Belgique