






Installation Instructions

Instrucciones de instalación, Instructions d'installation, Installationsanleitung, إرشادات التركيب,
Installatie-instructies, Instruções de instalação, Installatie-instructies,
設置手順説明, Οδηγίες εγκατάστασης

Product Code: [ALEG/P3/1/NM/W/DA]
[ALEG/P3/1/NM/B/DA]



Master
Translations
QR Link

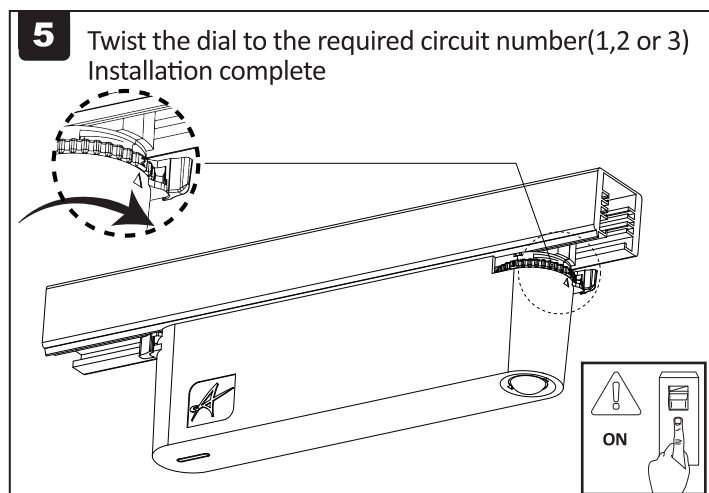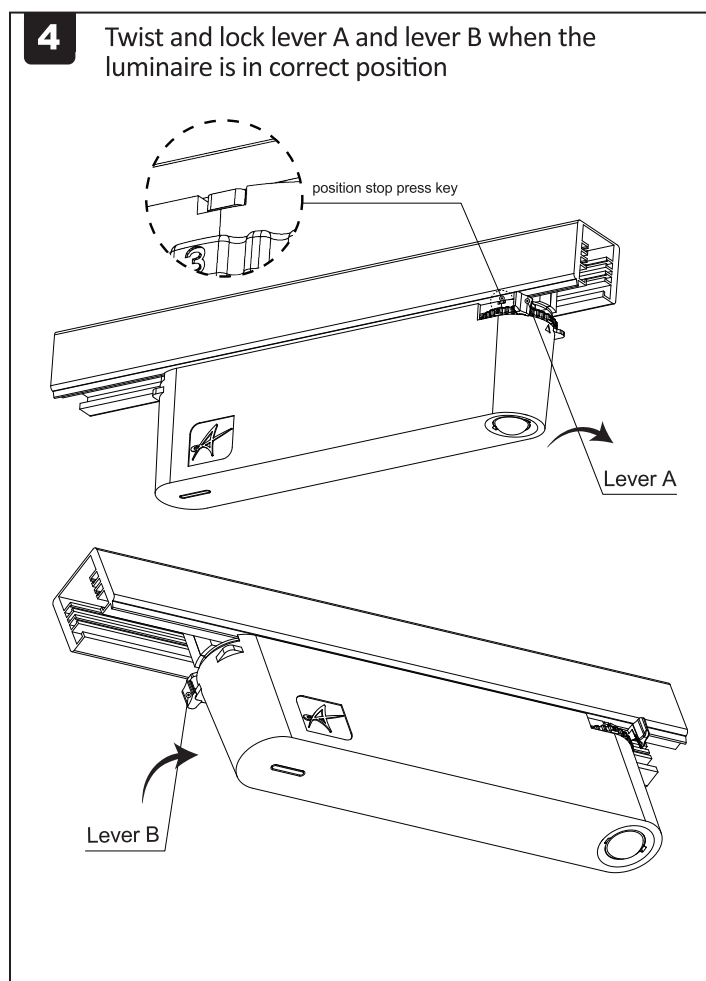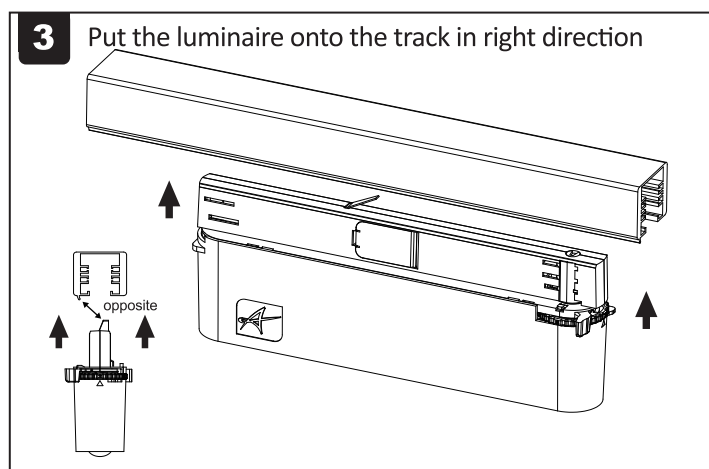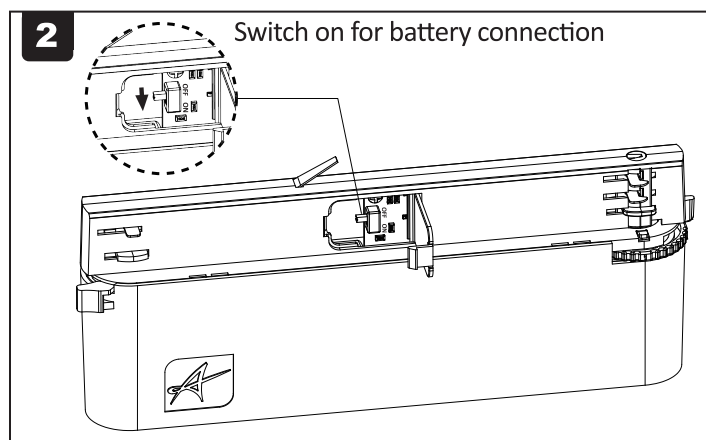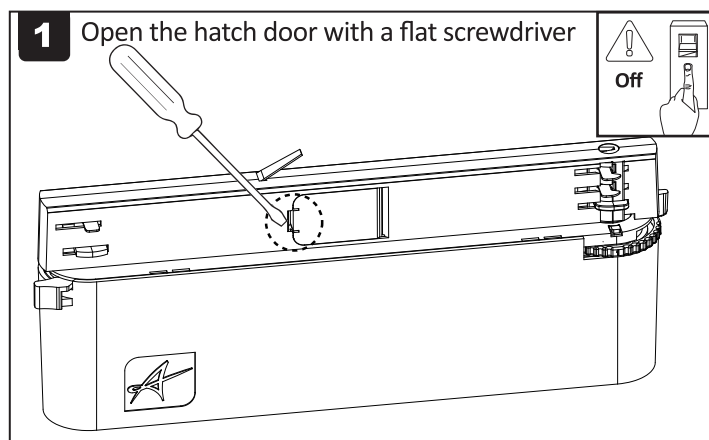

Ansell Electrical Products
Unit 6B, Stonecross Industrial
Park,
Yew Tree Way,
Warrington,
WA3 3JD



Ansell (Sales & Distribution)
Unit 2, M2 Business Park,
Duncrue Street,
Belfast,
BT3 9AQ

Ansell (Sales & Distribution) Republic of Ireland Limited
Unit G1, Block G,
Calmount Park, Calmount Avenue
Dublin 12,
D12 TH56



www.ansell-lighting.com

Changing the Lens



Press the lens gently and rotate it out, please be careful and prevent the lens from falling off

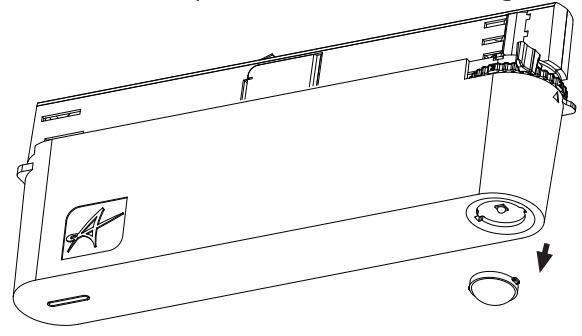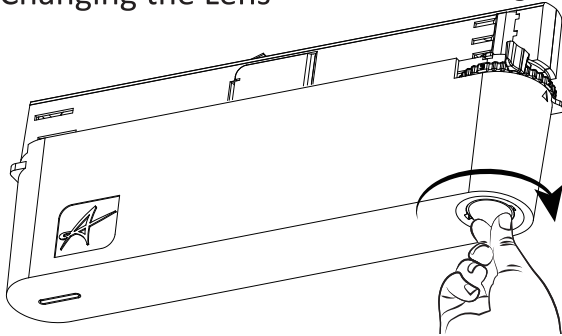

Gently press and rotate the replacement Lens into the housing to required direction

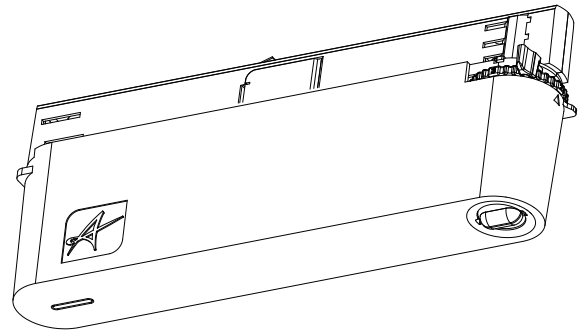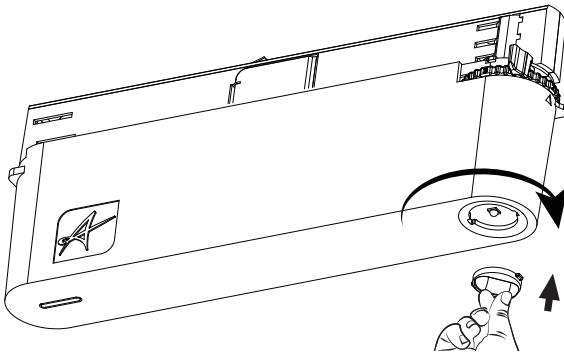

Battery Replacement

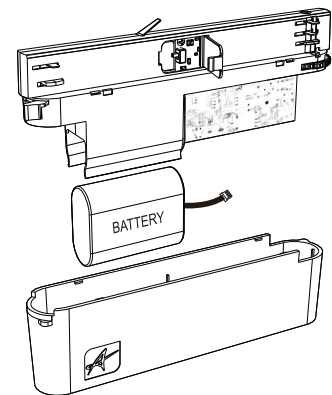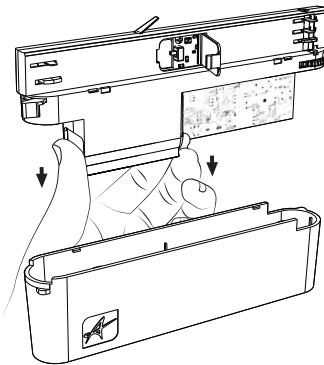

1. Instruction for DALI test function

Once the unit is powered up, a self-diagnostics test will be automatically initiated:



- Check battery, lamp, charge board and transfer fault all the time.
- Run 3mins duration test every month.
- Run 1H or 3H duration test every year.

Note: All test functions are preset and no need field adjustment.

2. Dual Colour LED Status Indicator Meaning

LED indication	Status	Commentary
Permanent green	System OK	
Fast flashing green (0.1 sec. on - 0.1 sec. off)	Function test underway	
Slow flashing green (1 sec. on - 1 sec. off)	Duration test	
Red LED on	Load failure	Open circuit / Short circuit / LED failure
Slow flashing red (1 sec. on - 1 sec. off)	Battery failure	Battery failed the duration test or function test/ Battery is defect / Incorrect battery voltage
Fast flashing red (0.1 sec. on - 0.1 sec. off)	Charging failure	Incorrect charging current
Double pulsing green	Inhibit mode	Switching into inhibit mode via controller
Binary transmission of address via green/red LED	Address identification	During address identification mode
Green and red off	Emergency mode	Battery operation

3. Default setting is DALI. If need Normal emergency mode/ Manual test, please remove the jumper.

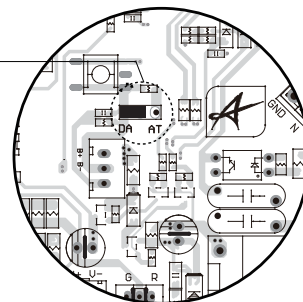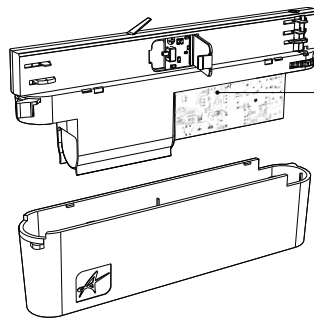

a. DALI mode (default):
(jumper on the left two pins)

DA AT

b. Normal Emergency mode:
(w/o jumper)

DA AT

Remark:

LiFePO4 battery could not be charged below 0°C or above 60°C according to IEC 60598-2-22.

When the battery temperature is detected below 0°C or above 60°C, the LED indicator will be off and the battery will stop charging.

Ansell Electrical Products
Unit 6B, Stonecross Industrial
Park,
Yew Tree Way,
Warrington,
WA3 3JD

Ansell (Sales & Distribution)
Unit 2, M2 Business Park,
Duncrue Street,
Belfast,
BT3 9AQ

Ansell (Sales & Distribution) Republic of Ireland Limited
Unit G1, Block G,
Calmount Park, Calmount Avenue
Dublin 12,
D12 TH56

www.ansell-lighting.com