

Installation Instructions

Instrucciones de instalación, Instructions d'installation, Installationsanleitung, إرشادات التركيب,

Installatie-instructies, Instruções de instalação, Installatie-instructies,

設置手順説明, Οδηγίες εγκατάστασης

Product Code:(AZH/RP/1)



Master Translations QR Link



REMOTE CONTROL SETTING	BUTTON	REMARKS																												
		Press the "ON/OFF" button, the light goes to constant ON/OFF mode and sensor is disabled. Press Reset or Sensor motion button to quit from this mode and sensor will start to work.																												
		Press "Reset" button, all parameters are same as setting of DIP switch or factory settings.																												
		Press "Sensor motion" button, the light quits from the constant ON/OFF mode, and the sensor starts to work. (The latest setting stays in validity)																												
		Press "DIM Test" button, the dimming works to test whether 0-10V dimming ports are connected properly. After 2s, it returns to the latest setting automatically.																												
		Long press "Override DH" >3s quit the daylight priority function or daylight harvesting function and enter the daylight threshold function.																												
		Short press to transmit a dimming signal, and the brightness of the lamp will be adjusted with +/-5% each time. (Only available for daylight priority function sensor) Note: the maximum brightness can be set with this button;																												
		Long press "DH Mode" >3s to enter the daylight priority function or daylight harvesting function ; Press "Override DH" quit the daylight priority function or daylight harvesting function.																												
		<table border="1"> <thead> <tr> <th>Scene Options</th> <th>Detection Area</th> <th>Hold Time</th> <th>Stand-by Period</th> <th>Stand-by Dim Level</th> <th>Daylight Sensor</th> <th>Induction Model</th> </tr> </thead> <tbody> <tr> <td>QS1</td> <td>100%</td> <td>5min</td> <td>10min</td> <td>10%</td> <td>30Lux</td> <td>Hs</td> </tr> <tr> <td>QS2</td> <td>100%</td> <td>10min</td> <td>30min</td> <td>10%</td> <td>Disable</td> <td>Hs</td> </tr> <tr> <td>QS3</td> <td>100%</td> <td>20min</td> <td>30min</td> <td>10%</td> <td>Disable</td> <td>Hs</td> </tr> </tbody> </table> <p>Note: Users can press any button to adjust parameters, subject to the last setting. When the sensor does not have the above parameter function, the parameter setting is invalid. Stand-by Period and Stand-by Dim Level induction are not applicable to ON/OFF sensor, induction mode is not available for low installation sensor.</p>	Scene Options	Detection Area	Hold Time	Stand-by Period	Stand-by Dim Level	Daylight Sensor	Induction Model	QS1	100%	5min	10min	10%	30Lux	Hs	QS2	100%	10min	30min	10%	Disable	Hs	QS3	100%	20min	30min	10%	Disable	Hs
	Scene Options	Detection Area	Hold Time	Stand-by Period	Stand-by Dim Level	Daylight Sensor	Induction Model																							
	QS1	100%	5min	10min	10%	30Lux	Hs																							
	QS2	100%	10min	30min	10%	Disable	Hs																							
	QS3	100%	20min	30min	10%	Disable	Hs																							
		Press the "TEST 2S" button to enter the test mode any time. At the mode the sensor parameters as below: Detection Area: 100%, Hold Time: 2s, Stand-by Dim Level: 10%, Stand-by Period: 0s, daylight sensor: disable. Quit the mode by pressing "RESET" or any other function buttons.																												
		Press "HS" button to set the detection area to high sensitivity. Press "LS" button to set the detection area to low sensitivity. The Induction mode is adjusted at the setting detection area. Note: This button is invalid for low-mount sensor.																												
		Daylight Sensor: Set up daylight threshold: 5Lux/15Lux/30Lux/50Lux/100Lux/150Lux/Disable																												
	Stand-by Period: Set up stand-by time: 0s/10s/1min/3min/5min/10min/20min/30min/+∞																													
	Hold Time: Set up hold time: 5s/30s/1min/3min/5min/10min/20min/30min																													
	Stand-by Dim Level: Set up stand-by dim level: 10%/20%/30%/50%																													
	Detection Area: Set up detection area: 25%/50%/75%/100%																													
	Remote Distance Toggle button Set the remote distance of remote control and sensor.																													

Ansell Electrical Products
Unit 6B, Stonecross Industrial Park,
Yew Tree Way,
Warrington,
WA3 3JD

Ansell (Sales & Distribution)
Unit 2, M2 Business Park,
Duncrue Street,
Belfast,
BT3 9AQ

Ansell (Sales & Distribution) Republic of Ireland Limited
Unit G1, Block G,
Calmount Park, Ballymount
Dublin 12,
D12 TH56

www.ansell-lighting.com

Warrington Tel: +44 (0)1942 433333

Belfast Tel: +44 (0)2890 773750

International Tel: +44 (0)2890 773750

Spain Tel: 00 34 938 005642