

Battery Instructions:


- 1) Remove cover and bring bell wire in to the unit, and then fix the base using the screws provided.
- 2) Connect bell wire from bell push switch to terminals 0 and 2. Load batteries observing +VE (positive) and -VE (negative) markings.
- 3) Remove cards on both sides after installation.
- 4) Replace cover.

This product is designed for domestic installation up to 15m range

Transformer Instructions:

- 1) Isolate the mains and connect the mains wire to the bell transformer - terminals 0 and 3.
- 2) Connect bell wire from bell push switch to terminals 2 and 0.
- 3) Remove cards on both sides after installation.
- 4) Replace cover.

Chime Wiring Diagram

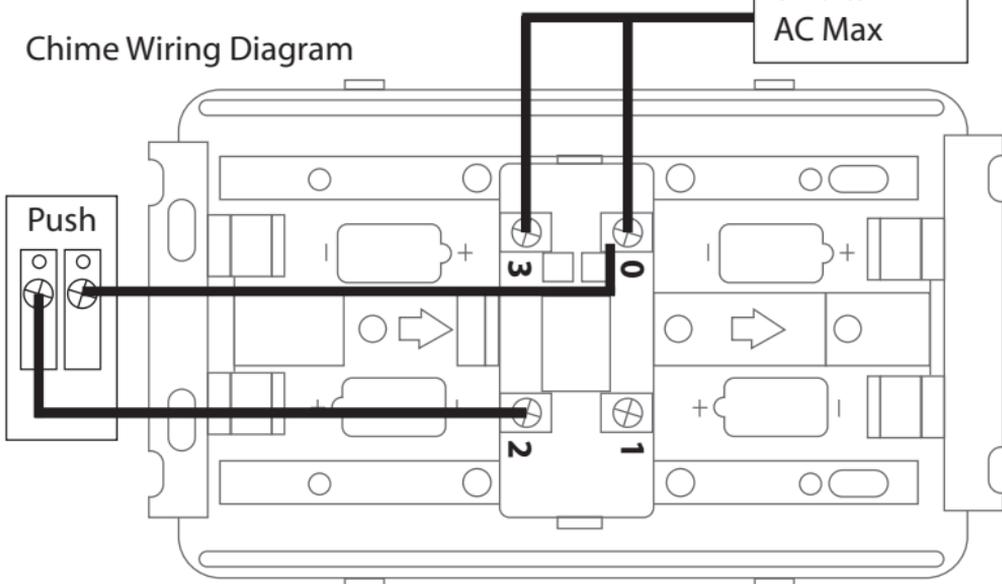

NOTE: Please use a transformer unit when using with an illuminated bell push, as the light will drain the batteries.