



WARNING!

Children of less than 3 years should be kept away from the heater unless continuously supervised.

Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.



CAUTION!

SOME PARTS OF THIS PRODUCT CAN BECOME VERY HOT AND CAUSE BURNS. PARTICULAR ATTENTION HAS TO BE GIVEN WHERE CHILDREN AND VULNERABLE PEOPLE ARE PRESENT.

CLEANING:

- Before cleaning the appliance, make sure it is unplugged from the power and that it is completely cooled.
- Do not clean the appliance with abrasive chemicals.

CLEANING WARNING:

Do not immerse the heater in water.

Do not use any cleaning chemicals such as detergents and abrasives.

Do not allow the interior to get wet.

EVENTUALLY, YOU MAY WANT TO REPLACE THIS PRODUCT:

Regulations require the recycling of Waste from Electrical and Electronic Equipment (European "WEEE Directive" effective August 2005—UK WEEE Regulations effective February 2014). Environment Agency Registered Producer: WEE/GA0248QZ.

WHEN YOUR PRODUCT COMES TO THE END OF ITS LIFE OR YOU CHOOSE TO REPLACE IT, PLEASE RECYCLE IT WHERE FACILITIES EXIST - DO NOT DISPOSE WITH HOUSEHOLD WASTE.

IF YOU EXPERIENCE PROBLEMS:

If you believe your product is defective, please return it to the place where you bought it. Our Technical Team will gladly advise on any Eterna Lighting product, but may not be able to give specific instructions regarding individual installations.



Email: sales@eterna-lighting.co.uk / technical@eterna-lighting.co.uk

Visit our website: www.eterna-lighting.co.uk

Issue 1025

Made in China

eterna.

INSTALLATION INSTRUCTIONS

 
 
 


Scan QR code to go to web page

E12WP1 White Panel Convector Heater 1000W 430x480mm with 7day/24hr Timer

E12WP15 White Panel Convector Heater 1500W 430x620mm with 7day/24hr Timer

E12WP2 White Panel Convector Heater 2000W 430x760mm with 7day/24hr Timer

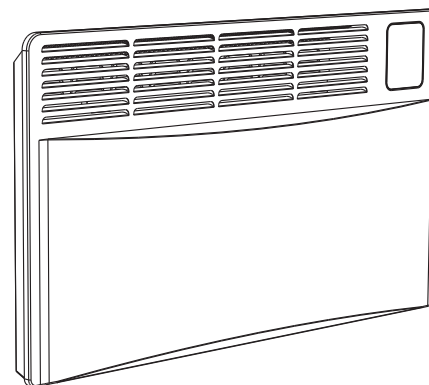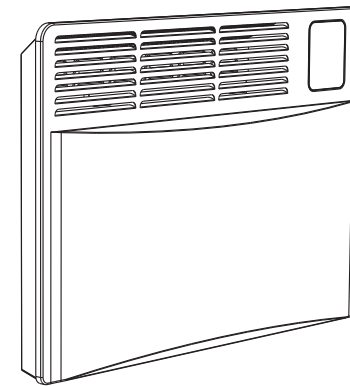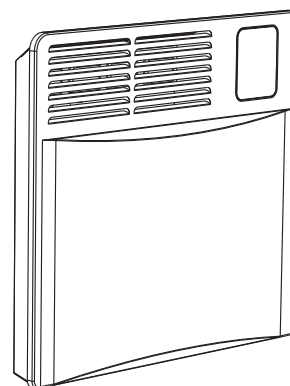

Pack contents: Panel Convector Heater ·3x Wall Mounting Brackets ·2x Mounting Feet

A guide for qualified electricians

READ THIS FIRST:

Check the pack and make sure you have all of the parts listed on the front of this booklet. If not, contact the supplier where you bought this product.

IMPORTANT SAFEGUARDS:

When using an electrical appliance, basic safety precautions should always be observed, including the following:

Ensure the feet are correctly attached before use.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Extreme caution is necessary where children or persons with reduced physical, sensory or mental capabilities may come into contact with the heater when in use.

The product is for household/office use only.

WARNING - In order to avoid overheating do not cover or obstruct grilles or air intake openings when in use.

Do not place the heater on carpets with a very deep pile.

Always ensure that the heater is placed on a firm level surface and ensure that the heater is not positioned close to flammable materials, such as curtains, drapes etc as this could create a fire hazard.

The heater must not be located adjacent to or against an electrical socket.

Do not run the cord under carpets/rugs.

Keep the mains lead away from the heater when in use. Do not operate the heater with a damaged cord/plug or if the heater malfunctions.

If the supply cord is damaged, it must be replaced by a qualified engineer.

Avoid the use of an extension cord as this may overheat and cause a risk of fire.

Do not use this heater with a programmer, timer, separate remote control system or any other device that switches the heater on automatically, since a fire risk exists if the heater is covered or positioned incorrectly.

Do not use the heater in any areas where petrol, paint or other flammable liquids or flammable fumes may be present e.g. garages or workshops.

Do not use this heater in the immediate surroundings of a bath, shower, swimming pool or where water is present.

 
This heater is hot when in use. To avoid burns and personal injury, do not let bare skin touch hot surfaces. Never leave the heater unattended whilst it is in use.

FREESTANDING INSTRUCTIONS:

1. Ensure the Heater is not plugged into mains power and carefully turn upside down.
2. Fix the feet to the base of the heater using the screws provided. Line up the holes in the base with the holes in feet, put the screws through the holes and tighten with a screwdriver.
3. Turn heater correct way up.

WALL MOUNTED INSTRUCTIONS:

1. Hook the wall-mounting brackets into the holes on the back of the product and screw them tight using the screws provided, as shown in the following picture.

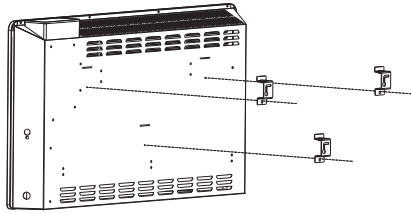


2. Drill two holes on the wall. The distance between the two holes should be 1.0KW:244MM, 1.5KW:255MM, 2.0KW:395MM.

Note: Only 2 screws should be installed, the bottom bracket is used as a support and does not need to be screwed to the wall.

	A		
	[Diagram showing two holes on a wall with a dimension line A between them]		
KW	1.0	1.5	2.0
A(MM)	244	255	395

 
3. Align the holes on the wall-mounting brackets and hook the heater on the screws. Move the heater down and then left to let the screws sit into the slot. Please see the picture below.



Note : During wall hanging installation, ensure the heater is greater than 15cm away from the ground and 50 cm away from the ceiling.

Make connections to the supply terminals according to the colour code (left). Ensure that there are no strands protruding from the terminals.

 The controls

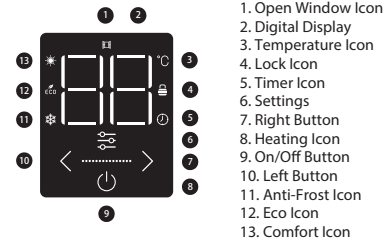

1. Open Window Icon
2. Digital Display
3. Temperature Icon
4. Lock Icon
5. Timer Icon
6. Settings
7. Right Button
8. Heating Icon
9. On/Off Button
10. Left Button
11. Anti-Frost Icon
12. Eco Icon
13. Comfort Icon

After powering on, the heater is in standby mode, the buzzer will "beep" and the digital display (2) shows the current ambient temperature.

Touch the on/off button (9) to turn on the heater, it will automatically enter comfort mode
Note: The initial setting temperature is 25 degrees, and when the ambient temperature is above 25 degrees, the heating icon (8) does not light up. When the temperature drops below 25 degrees the heater will turn on

Temperature setting

Touch the setting button (6), the digital display (2) and temperature icon (3) will flash. Touch the left button(10) or right button(7) to adjust the temperature from 5-50°C
Comfort mode temperature range: from 10°C to 50°C.
ECO mode temperature range: from 5°C to 45°C.

The temperature setting in comfort mode is 5°C higher than that in ECO mode. If the temperature set in comfort mode is 25°C, the temperature will automatically be 20°C when switched to ECO mode.

Anti-frost mode is 6°C when the ambient temperature is lower than 5°C the heater will work with full power. When the ambient temperature is higher than 7°C the heater will turn off.

Timer setting

Touch the setting button (6) twice to enter the timer setting. The digital display (2) and timer icon (5) will flash. Touch the left or (10) right buttons (7) to set the timer. Each touch increases or decreases the time by 1 hour, and cycle between 0 to 24 hours. After the time is set, the timer icon (5) remains on and goes off after the timer is set.

Child lock setting

Press and hold the left button(10) for 3 seconds to switch on and off the child lock function

Window opening function:

Press and hold the on/off button (9) for 3 seconds to activate the window opening function. When the ambient temperature drops by 5°C within 20 minutes, the window opening function is activated and the window opening indicator light (1) is on. The heater will then turn off. After the window opening function is turned off, the window opening indicator light (1) will turn off and the product will resume heating.

Weekly mode setting:

Long press the setting button (6) for 6 seconds to enter the weekly mode setting and the timer indicator light (5) will flash. The display screen (2) flashes P1, touch the left (10) and right (7) buttons to cycle from P1 to P7 from Monday to Sunday, short press the settings button (6) to confirm the weekly setting and jump to the hour setting. The display screen (2) flashes 00, touch the left(10) and right(7) buttons to cycle from 00 to 23 hours, then short press the settings button (6) to confirm the hour setting and jump to the minute setting. The display screen (2) flashes 00, touch the left(10) and right(7) buttons to cycle from 00 to 59 minutes, complete the time setting. The timer indicator light (5) stays on, the weekly mode starts running, long press the settings button (6) for 6 seconds to turn off the weekly mode, and the timer indicator light (5) goes out.

The weekly mode programme is Monday to Friday from 00:00 to 06:59, the heater is in economy mode (12) and the temperature is set to 20 degrees.
From 07:00 to 07:59, the product is in comfort mode (13) with a set temperature of 25 degrees.
From 08:00 to 14:59, the product is in anti-frost mode (11) with a set temperature of 6 degrees.
From 15:00 to 21:59, the product is in comfort mode (13) with a set temperature of 25 degrees.
From 22:00 to 23:59, the product is in economy mode (12) with a set temperature of 20 degrees.
On Saturdays and Sundays from 00:00 to 06:59, the product is in economy mode (12) with a set temperature of 20 degrees.
From 07:00 to 22:59, the product is in comfort mode (13) with a set temperature of 25 degrees.
From 23:00 to 23:59, the product is in economy mode (12) with a set temperature of 20 degrees.

Resetting the heater

Press the left button(10)and right button(7)for 3 seconds at the same time, a "beep" will sound to restore initial settings. The comfort mode is 25 °C Celsius, the ECO mode is 20 °C Celsius, and any programming will have been erased.

Model Identifier(s):	E12WP1	E12WP15	E12WP2		
Heat output					
Nominal heat output	Pnom	1.0	1.5	2.0	kW
Minimum heat output (indicative)	Pmin	1.0	1.5	2.0	kW
Maximum continuous heat output	Pmax,c	1.0	1.5	2.0	kW
Auxiliary electricity consumption					
At nominal heat output	elmax	0.15	0.15	0.15	W
At minimum heat output	elmin	0.15	0.15	0.15	W
In standby mode	eLSB	0.15	0.15	0.15	W
Type of heat output/room temperature control					
Electronic room temperature control plus week timer					Yes

Contact details: Eterna Lighting Ltd, Huxley Close, Wellingborough, Northamptonshire NN8 6AB