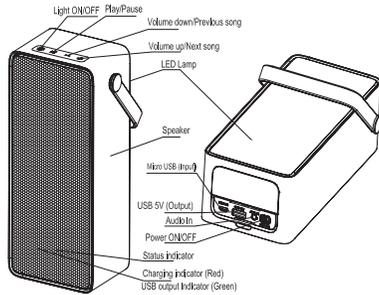# KOBLE
### STEP INTO OUR SPACE

## BLOK LED light with Bluetooth speaker

## User Manual

Please read this user manual carefully before use. We suggest you retain the user manual for future reference.

### Product Illustration



Light ON/OFF  Play/Pause
Volume down/Previous song
Volume up/Next song
LED Lamp

Speaker

Micro USB (Input)

USB 5V (Output)
Audio In
Power ON/OFF
Status indicator
Charging indicator (Red)
USB output Indicator (Green)

### Parts Included

1. Micro USB cable x 1
2. Line in Aux audio cable x 1
3. User Manual
4. Speaker light body

### Main Features and Technical Data

- ●Bluetooth audio player
- ●Emergency power bank
- ●Φ3.5mm audio input
- ●Frequency response: 20Hz-20kHz±3dB
- ●Speaker max power: 5W
- ●LED max power: 2W
- ●Capacitive touch sensor
- ●Micro USB input: DC5V/1A
- ●USB output: DC5V/1A(MAX)
- ●Built in rechargeable lithium-battery, full charged around 7 hours
- ●Audio keeps playing 10 hours at mid-volume after battery full charged
- ●LED light on for 8 hours at max power after battery full charged

### Key Function

| No. | Current mode | Function operating | Button | Operation | Indicator |
|---|---|---|---|---|---|
| 1 | Power off | Power on | ▶❙ | Switch on, press and hold | Blue indicator flashing |
| 2 | Power on | Power off | ▶❙ | Press and hold / switch off | Blue indicator off |

| | | | | | |
|---|---|---|---|---|---|
| 3 | Power on | Bluetooth pairing | | Manually pairing | Blue indicator flashing rapidly |
| 4 | Power on | Bluetooth connected | | Automatically pairing | Blue indicator flashing slowly |
| 5 | Play mode | Volume up | + | Press and hold | |
| 6 | Play mode | Volume down | − | Press and hold | |
| 7 | Play mode | Previous song | − | Short press | |
| 8 | Play mode | Next song | + | Short press | |
| 9 | Play mode | Play/pause /mute | ▶❙ | Short press | |
| 10 | Play mode | Bluetooth disconnected | ▶❙ | Press and hold for 2 seconds | |
| 11 | Any mode | Charging | | Connect USB cable (DC5V) | Red indicator flashing |
| 12 | Any mode | Full charged | | Connect USB cable (DC5V) | Red charging indicator light on |
| 13 | Bluetooth mode | Play external audio | | Connect audio cable | Status blue indicator light on |

| | | | | | |
|---|---|---|---|---|---|
| 14 | External audio mode | Bluetooth | | Disconnect audio cable | Blue status indicator flashing rapidly; indicator flashing slowly after paired |
| 15 | Any mode | Light on/off | ☀ | Short press | |
| 16 | Any mode | Lighter or Dimmer | ☀ | Press and hold | |

### Bluetooth Playback

1. Open the silicone cover on the base of the unit and switch the On / Off switch to ON.
2. Press and hold " ▶❙ " for 2 seconds. The Bluetooth indicator light will flash quickly and you will hear an audible tone.
3. Turn on the Bluetooth function on your mobile device and search for Bluetooth devices.
4. Select "BLOK" from the list of devices to start pairing between the speaker light and your mobile device. If a pass code is required, enter ' 0000 '. Once the connection has been established, you will hear an audible tone and the Bluetooth indicator light will flash slowly. The speaker is now ready for playing music.

---

5. Music playback options (stop, pause, skip track) can be controlled via your mobile device. To adjust the volume, press and hold the "+" or "- "buttons. When the maximum speaker volume has been reached, a repeated audible tone will be heard. Use your mobile device if a higher volume is still required.

6. If pairing cannot be completed, or the indicator light is not flashing, repeat steps 1 to 3 for re-connection

7. To disconnect Bluetooth, press and hold" ▶❙ "for 2 seconds. An audible tone will be heard and the blue indicator light will flash quickly. The unit will be in the pairing mode.

8. To reconnect Bluetooth, press " ▶❙ " and start music playback on your mobile device.

### Incoming Phone Calls (Bluetooth)

1. If you receive an incoming call on your mobile phone whilst music is playing, the music playback will be interrupted.
2. Music playback will continue once you have ended the call.

### Audio input mode

1. To playback music directly from other audio devices (iPod, mobile telephone, MP3 player), insert the 3.5mm audio cable into the Aux In port. The blue indicator light will turn on

2. Adjust the volume using the "+" or "- " buttons. When the maximum speaker volume has been reached, a repeated audible tone will be heard

3. All playback options (stop, pause, skip track) are controlled from your audio device

4. To stop music playback from your audio device, disconnect the audio cable. The speaker will switch back to the Bluetooth mode and the connection to the last paired device will be re-established. The blue indicator light will start flashing.

### Charging and emergency power

1. To charge the built in rechargeable lithium battery, connect the USB power source to the Micro USB port. The red power indicator light will flash during charging. Once fully charged, the red indicator light will remain on.

Disconnect the power cable. The red charging light will go off.

2. The built-in high capacity lithium battery can be used to provide power bank charging for your mobile devices. Connect the mobile device USB charging cable to the USB output port. During charging the green indicator light is illuminated. If the green indicator light flashes, the built-in battery power is insufficient.

Note - During normal speaker charging, the power bank function will not provide power output.

### LED Light function

Press the" ☀ "button to turn the light ON and OFF. Press and hold the" ☀ "button to adjust the dimmer function.

### Troubleshooting

| Fault | Solution |
|---|---|
| Bluetooth playback is interrupted and a sound is heard | Low battery, please charge |
| Unit fails to turn on | |
| Music intermittent in Bluetooth playback | Try to move the Bluetooth device closer to the product or change the audio or equipment location |
| Equipment cannot pair with Bluetooth audio connection | Low battery , please charge |
| | Try to move the Bluetooth device closer to the speaker |
| | Turn off & restart |
| | Check the mobile device has a Bluetooth function and it is working |
| | Try repeating the Bluetooth playback and set up steps |
| | Play music through one device only. Delete all other devices and unused pairings (see the documents for help). In accordance with the set up procedure, re-set pairing on new devices |
| | Bluetooth name is not correct, confirm whether "BLOK". |
| No call function | Re-pair again |
| | Check the setting of the phone(see the phone manual) |
| Key failure | Low battery, please charge |
| | Turn off & restart |
| | Please use the original adapter for this item |
| Weak sound or loud sound | Touch " + " or " - " key to the suitable level |
| No output for power bank | Built-in battery low power, please charge |
| | The product is in charging status |

### Caution / Warnings (Please read)

1. To prevent serious malfunction or the risk of fire or explosion of the lithium battery, avoid extreme hot or cold temperatures.
2. Always keep batteries away from children and pets
3. Do not store the unit near hazardous or combustible materials. Keep in a cool dry ventilated area
4. When the product is playing music via Bluetooth, there may be intermittent interference due to the environment or the source device (such as mobile phones) or software incompatibilities. Try adjusting the distance between the mobile device and the unit, or turning the unit and / or mobile device off and back on again.
5. During Bluetooth phone calls, there may be intermittent interference or noise due to environmental factors or poor network signal. Try adjusting the distance between the mobile device and the unit, or turning the unit and / or mobile phone off and back on again.
6. When DC5V is used as the power supply, the power supply current should be more than 2A.
7. If the unit is not used for an extended period, please make sure it is fully charged before using again.
8. This product includes a built-in rechargeable lithium battery. Wherever possible, this should be disposed of in an environmentally responsible way. Contact your local government office for battery disposal or recycling options in your local area.
9. The product should be fully charged before using for the first time.

### After Sales support / Product Returns

In the unlikely event that you need to return the unit because it is faulty, please follow the 'Product Returns' instructions at www.kobledesigns.com

Should you need to request replacement parts, please contact our after sales support team at:-
Email – returns@kobledesigns.com
Tel: + 44 (0)1799 513 466
Address: Koble Designs, 6 The Shires, Shirehill industrial Estate, Saffron Walden, Essex, CB11 3AP