


# BUSTER + PUNCH

LONDON


**TUBULAR LATCH**  
DOOR PREPARATION AND INSTALLATION

INSTRUCTION MANUAL

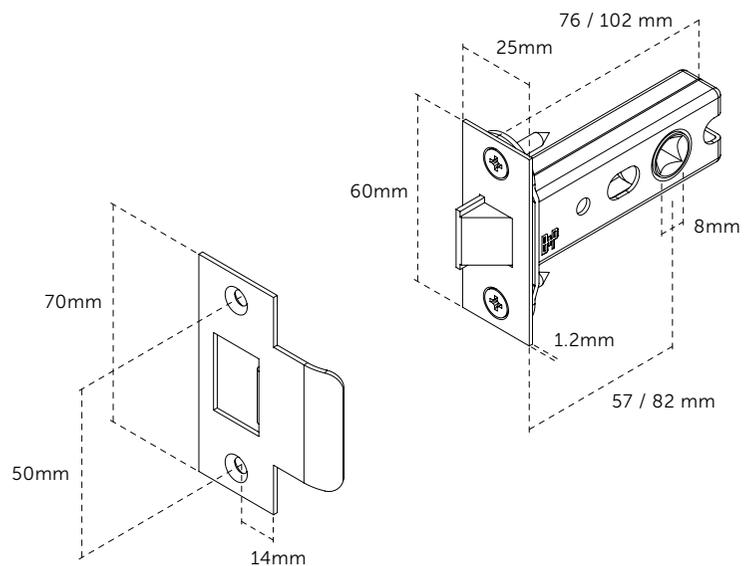

BUSTERANDPUNCH.COM

## CONTENTS

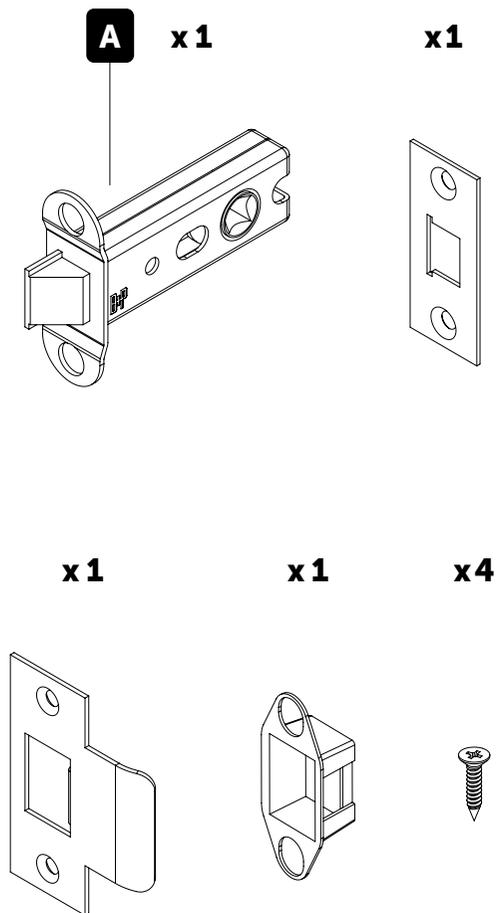


ABOVE DIMENSIONS APPROXIMATE. USE PARTS AS TEMPLATES FOR DOOR PREPARATION.


**NOTE: INSTALLATION INSTRUCTION MANUAL APPLICABLE FOR US TUBULAR LATCHES SUPPLIED BY BUSTER + PUNCH. PRODUCT VARIATIONS COVERED BY THIS INSTRUCTION MANUAL ARE LISTED BELOW:**

TUBULAR LATCH / FOR DOOR HANDLE / 57mm BACKSET  
TUBULAR LATCH / FOR DOOR KNOB / 82mm BACKSET


**1 DOOR JAM PREPERATION**

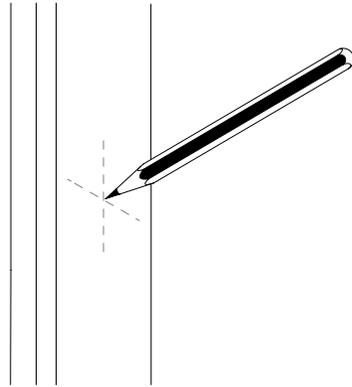


**2**

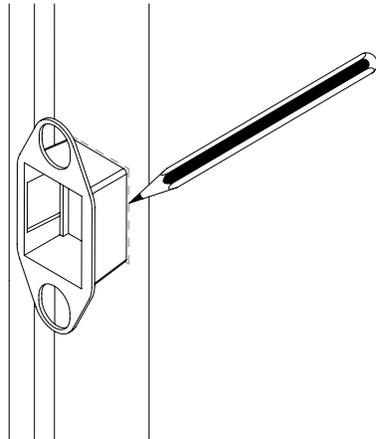


**3**

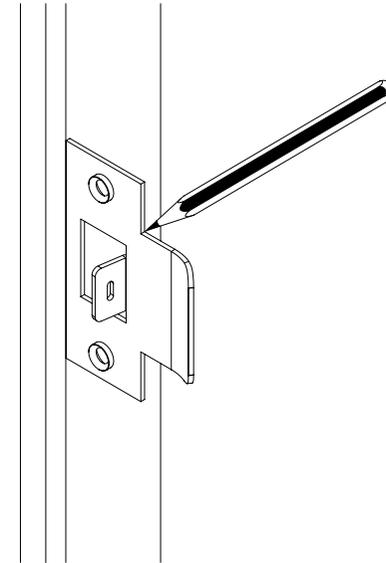


**4 CHISEL UNTIL FACE PLATE FLUSH.**

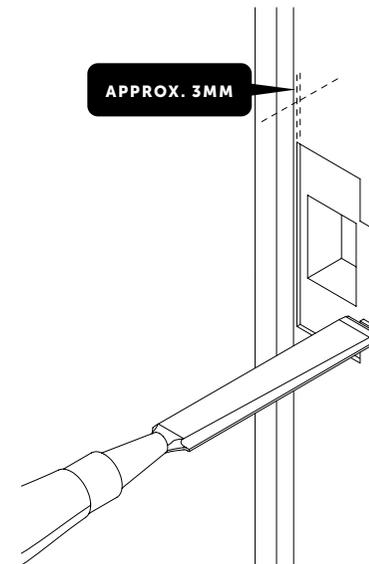



5

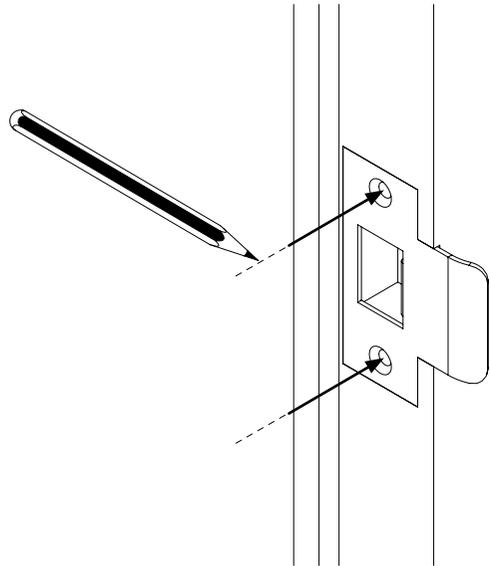


6

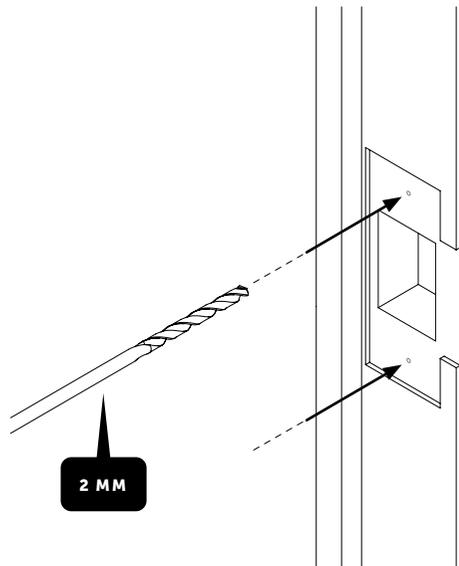


7

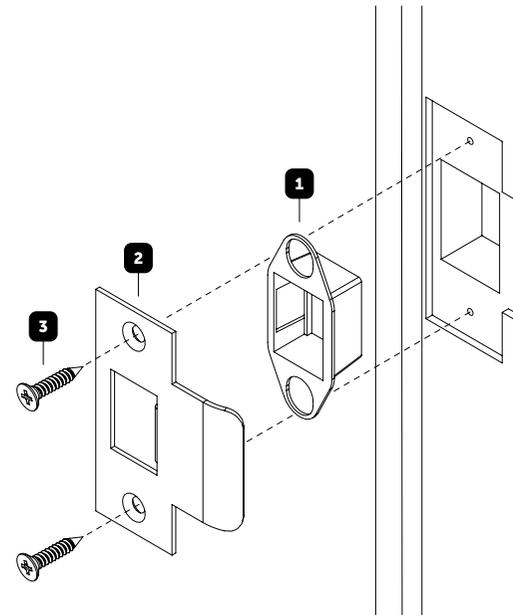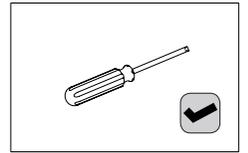


# 1 DOOR PREPARATION

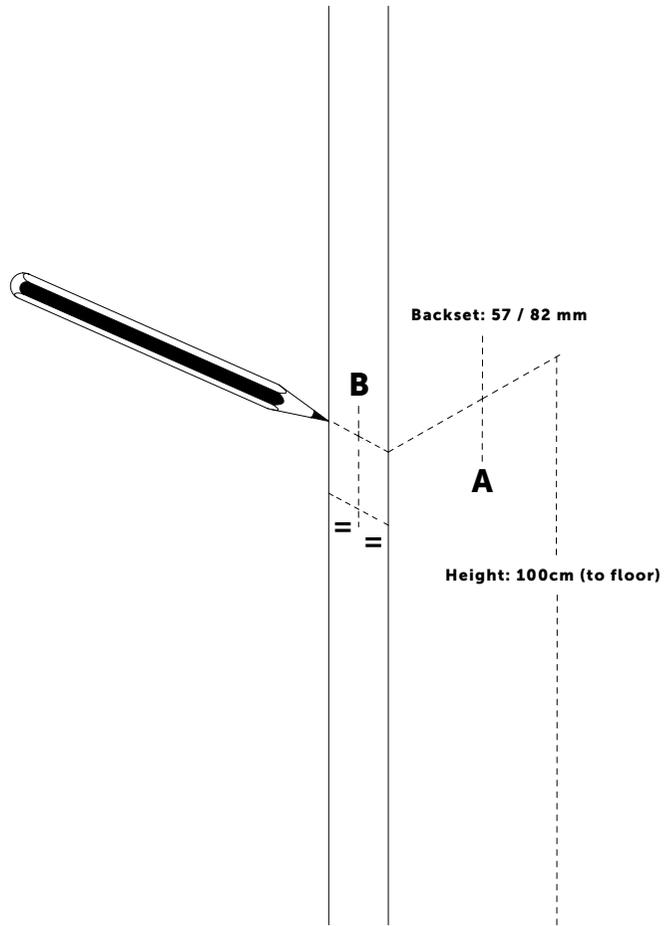


# 2

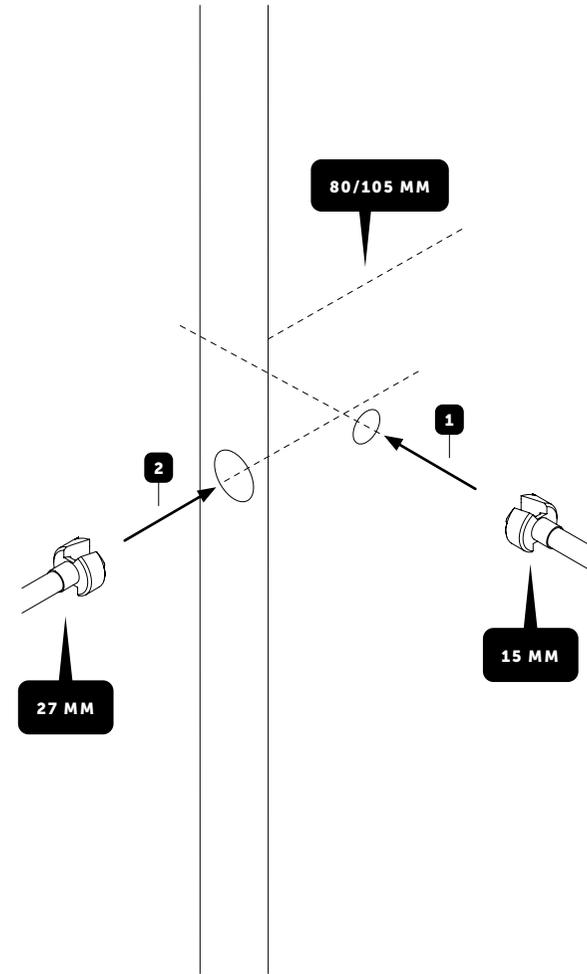


**3**

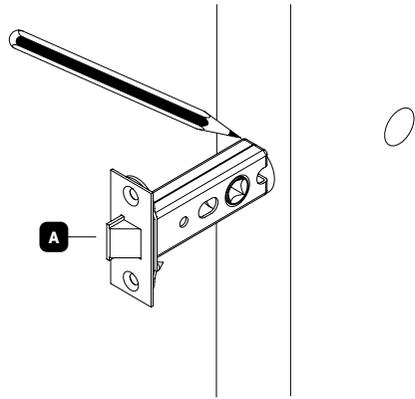


**5**

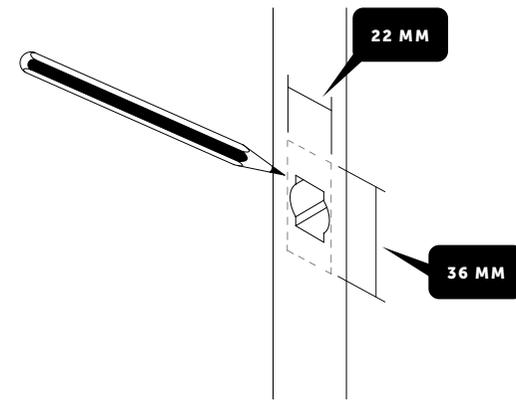


**4**

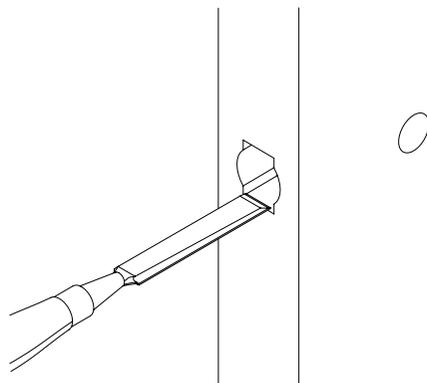


**6**

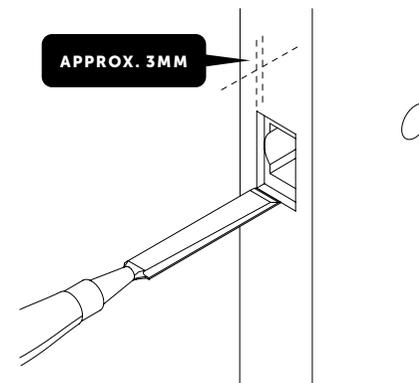


7

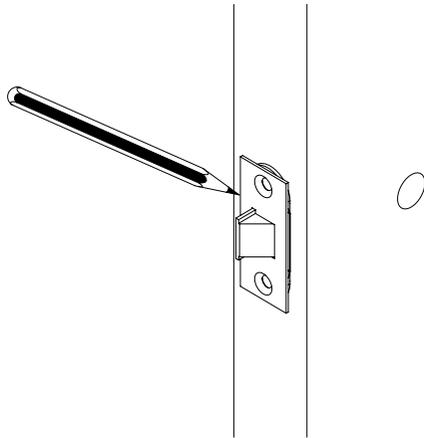


9

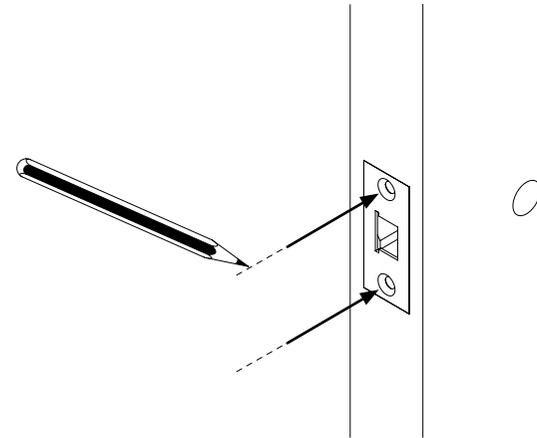


8 CHISEL UNTIL  
FACE PLATE  
FLUSH.

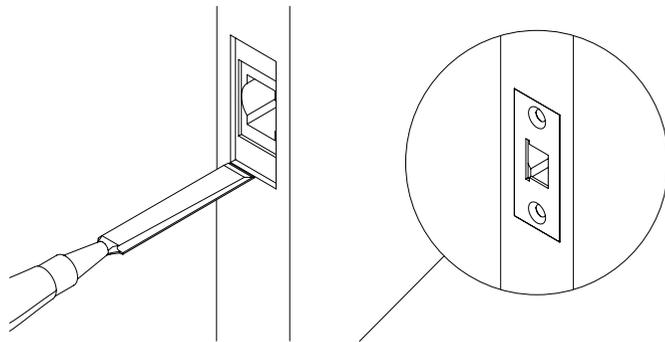


10

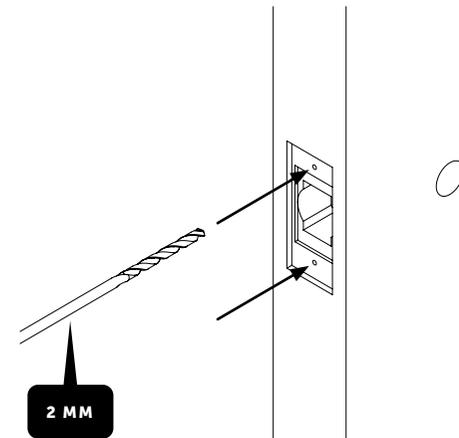

**11**

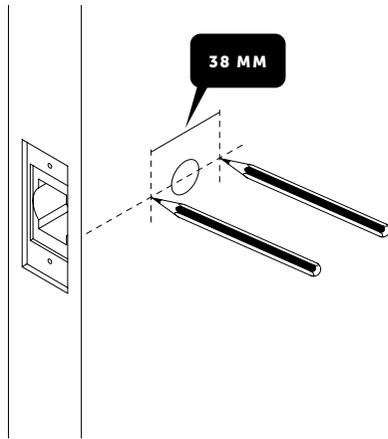

**12**

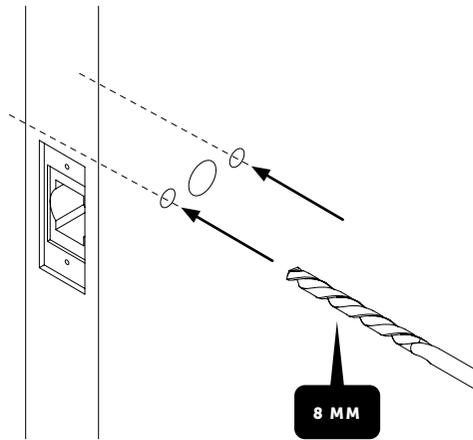

**13**

