


BUSTER + PUNCH

LONDON


TUBULAR LATCH DOOR PREPARATION AND INSTALLATION

INSTRUCTION MANUAL

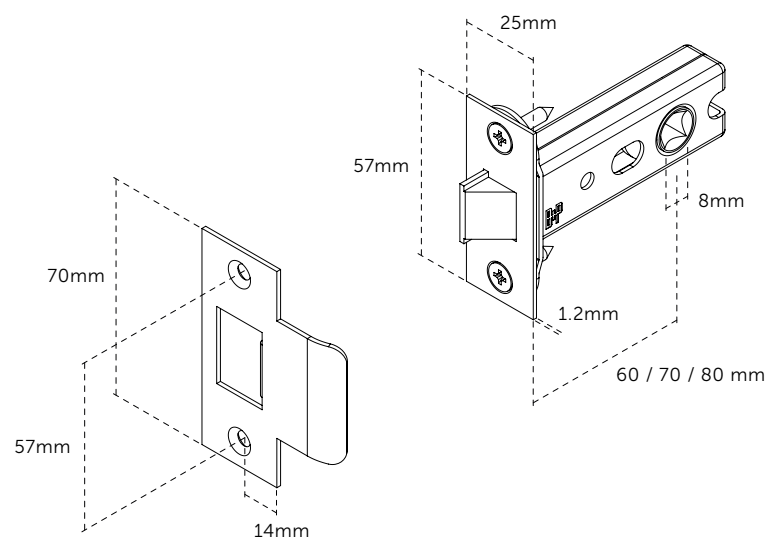

BUSTERANDPUNCH.COM/AU

CONTENTS

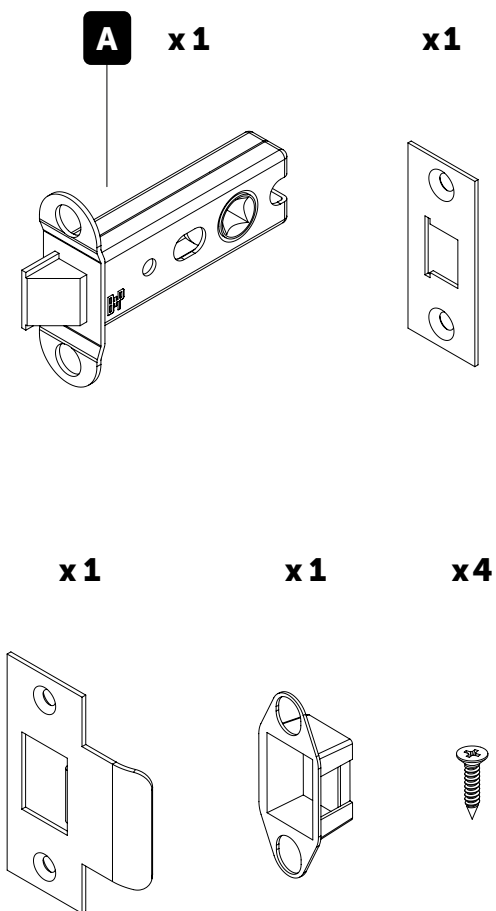


ABOVE DIMENSIONS APPROXIMATE. USE PARTS AS TEMPLATES FOR DOOR PREPARATION.


NOTE: INSTALLATION INSTRUCTION MANUAL APPLICABLE FOR US TUBULAR LATCHES SUPPLIED BY BUSTER + PUNCH. PRODUCT VARIATIONS COVERED BY THIS INSTRUCTION MANUAL ARE LISTED BELOW:

TUBULAR LATCH / FOR DOOR HANDLE / 60 mm, 70 mm BACKSET
TUBULAR LATCH / FOR DOOR KNOB / 80 mm BACKSET


1 DOOR JAM PREPERATION

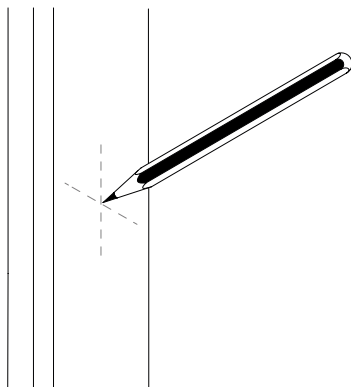


2

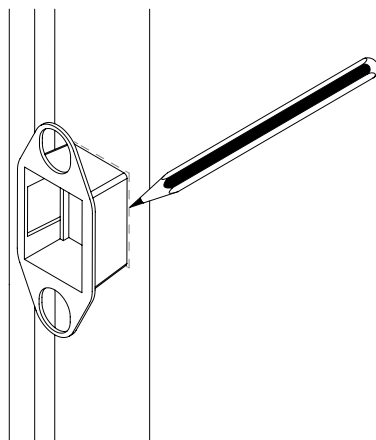


3

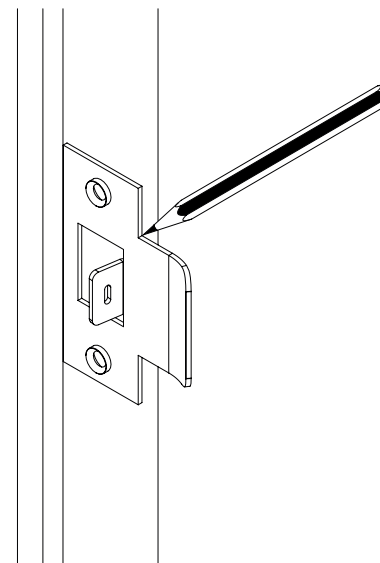


4 CHISEL UNTIL
FACE PLATE
FLUSH.

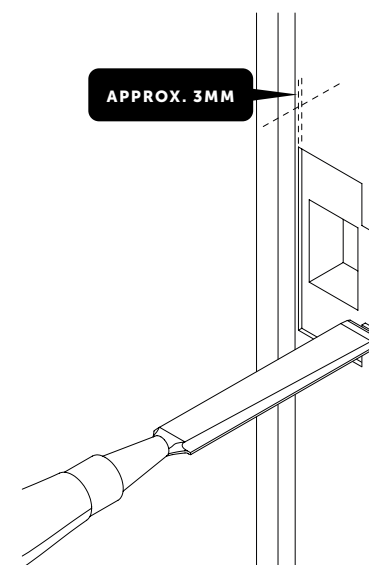



5

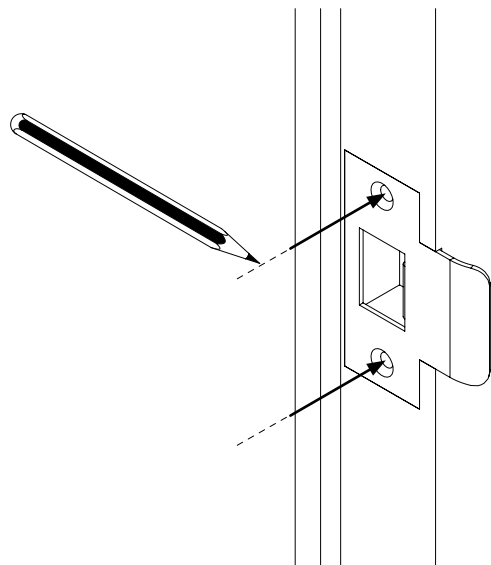


6

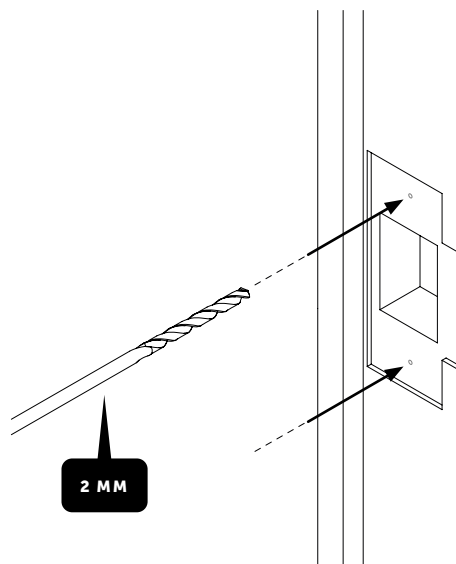


7

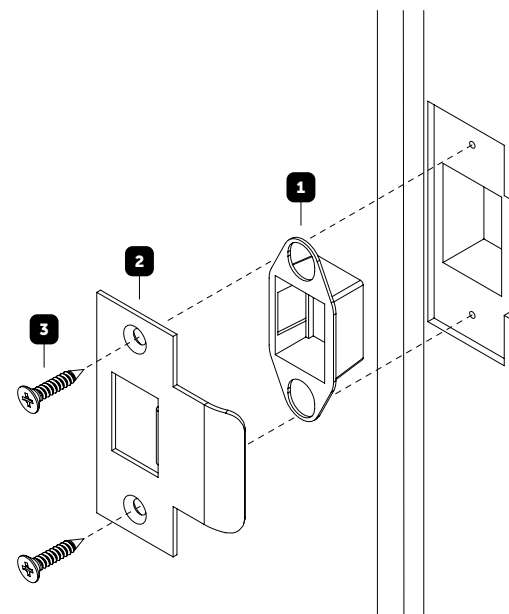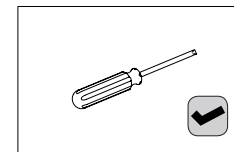


1 DOOR PREPARATION

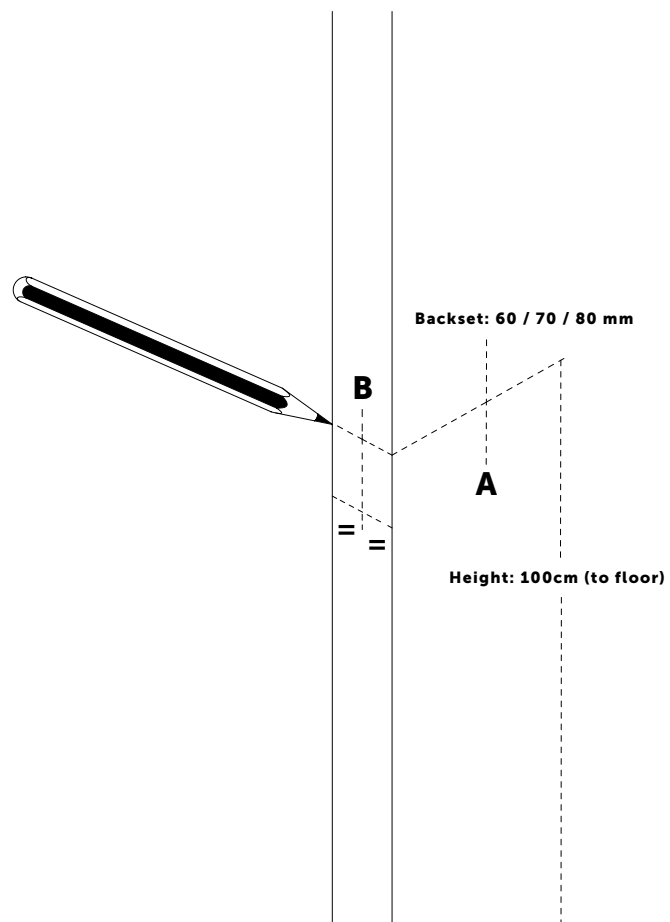


2

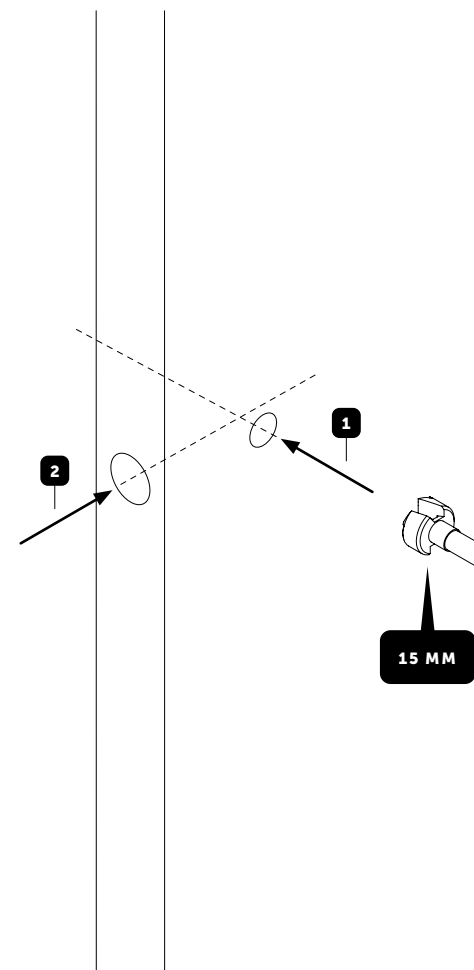


3

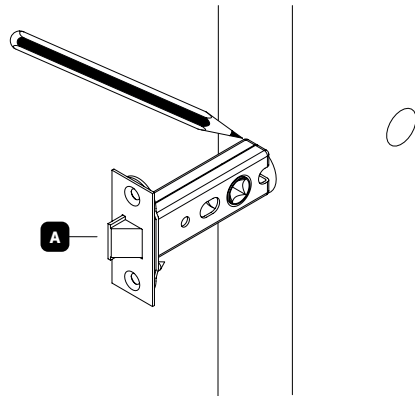


5

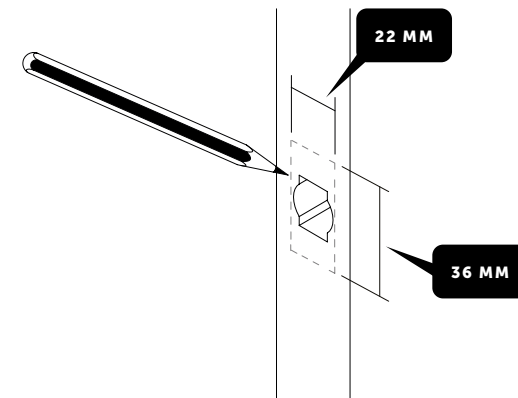


4

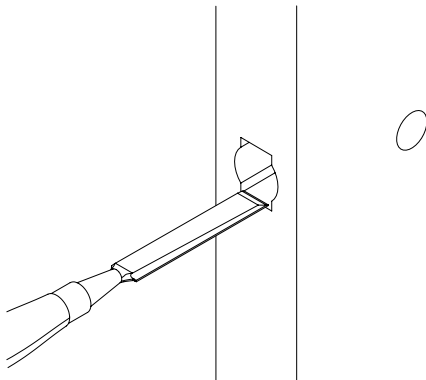


6

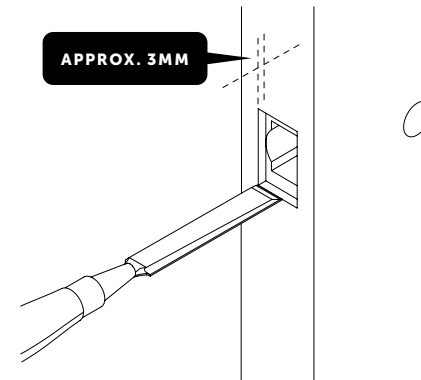


7

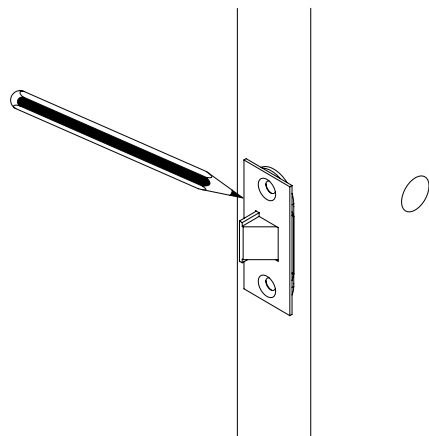


8 CHISEL UNTIL
FACE PLATE
FLUSH.

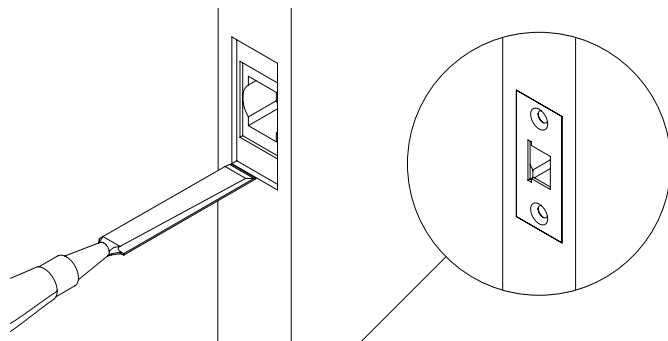


9

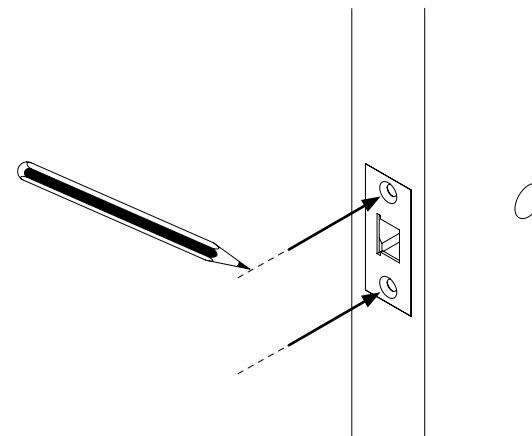


10

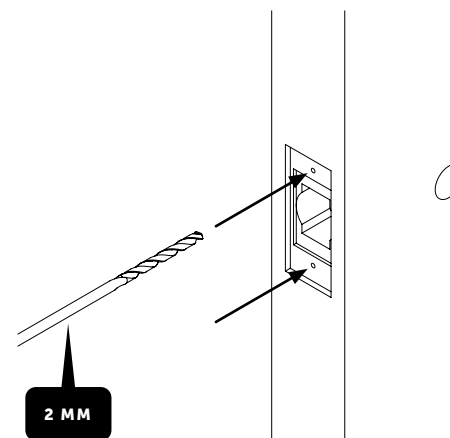

11

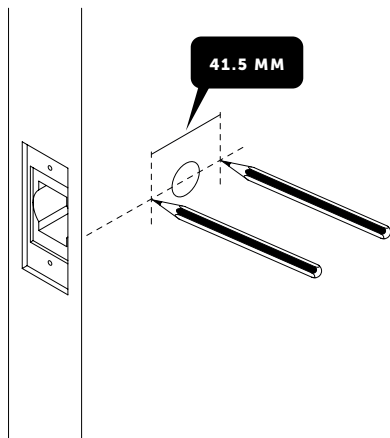

12

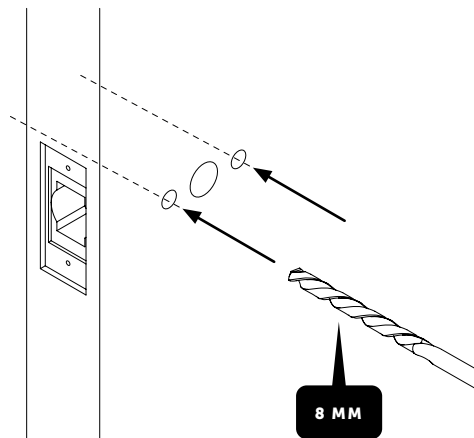

13

