


HANGER SHELF


FURNITURE

INSRUCTION MANUAL

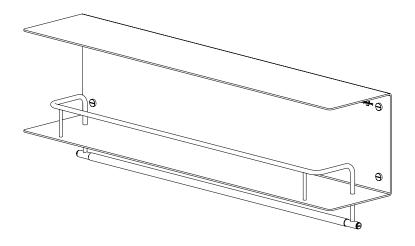


BUSTERANDPUNCH.COM


L0218

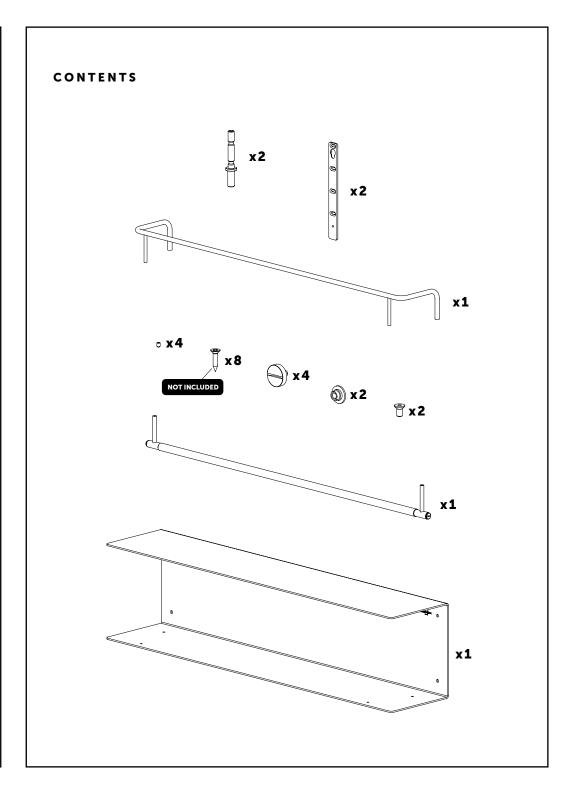


1

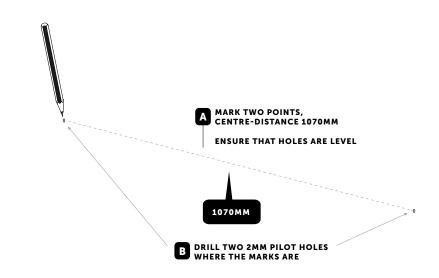


2 CONSULT THIS DIAGRAM TO DETERMINE THE HEIGHT YOUR SHELF WILL SIT ON THE WALL.

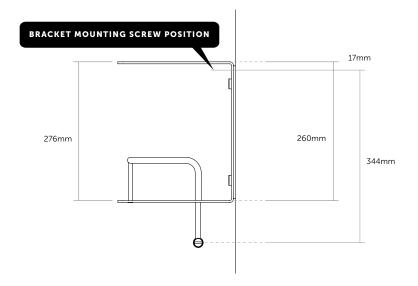


CERTAIN ITEMS IN THE RANGE WILL NOT FIT INTO A 4 LUG BOX. IF SUCH A BOX HAS BEEN PREVIOUSLY INSTALLED THE TOP AND BOTTOM LUGS SHOULD BE REMOVED OR BENT BACK TO AVOID CONTACT WITH THE INTERIOR.

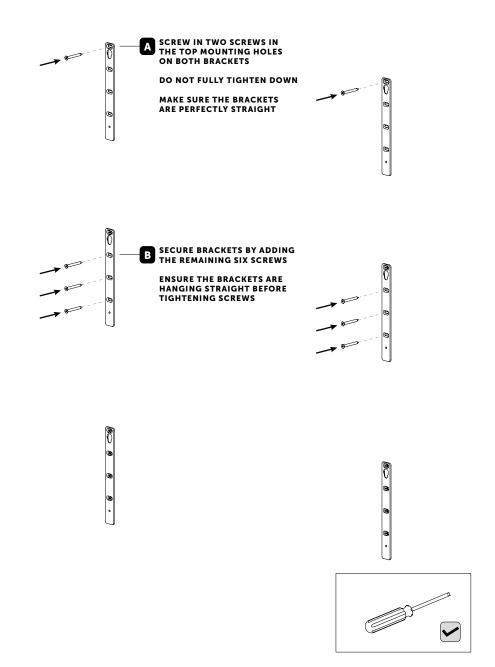


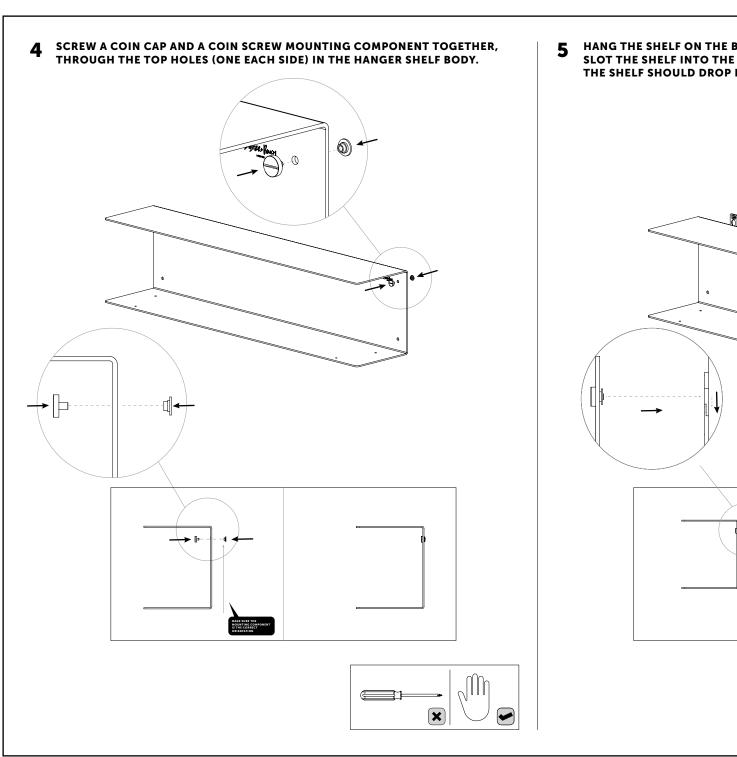


HANG THE SHELF ON THE BRACKETS. USE THE COIN SCREW CONNECTOR AND SLOT THE SHELF INTO THE BRACKETS .ONCE THE CONNECTOR IS IN THE HOLE, THE SHELF SHOULD DROP DOWN INTO THE SLOT ON THE BRACKET.

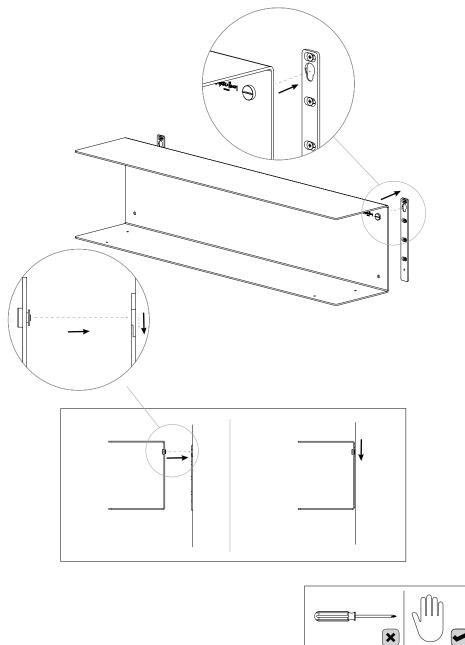

6 SCREW IN THE REMAINING TWO COIN SCREW INTO THE BOTTOM HOLES. CHECK ALL FOUR SCREWS TO MAKE SURE THEY ARE ALL TIGHT. ENSURE THE SCREWS ARE NOT CROSS-THREADED.

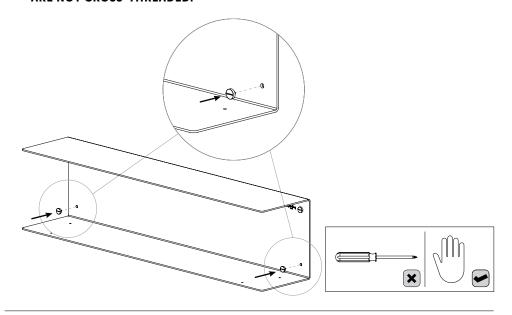

7 SCREW IN THE REMAINING TWO COIN SCREW INTO THE BOTTOM HOLES. CHECK ALL FOUR SCREWS TO MAKE SURE THEY ARE ALL TIGHT. ENSURE THE SCREWS ARE NOT CROSS-THREADED.

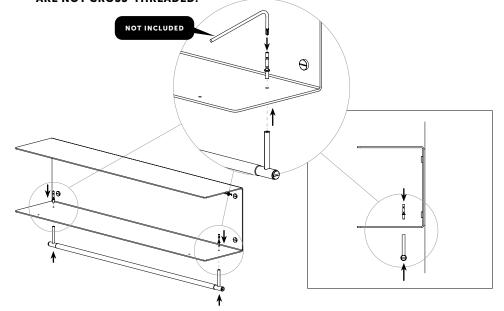


ASSEMBLE THE PAN RAIL TO THE SHELF USING THE TWO CONNECTING BOLTS SUPPLIED, THREADING THE BOLTS INTO THE PAN RAIL. USE A 3MM ALLEN KEY **BOLT TO TIGHTEN THEM.** ASSEMBLE THE GUARD RAIL ON TO THE SHELF, LOCATING THE PAN RAIL CONNECTING BOLTS. LOOSELY SCREW IN THE TWO M5 X 10 MM COUNTERSUNK BOLTS USING A 5MM ALLEN KEY (NOT INCLUDED).

NOT INCLUDED

9 SCREW IN THE FOUR GRUB SCREWS TO THE HOLES ON THE BACK OF THE GUARD RAIL, ENSURING THEY ARE TIGHT.

ONCE GRUB SCREWS ARE TIGHT, TIGHTEN THE TWO M5 X 10 MM COUNTERSUNK BOLTS FOR THE GUARD RAIL ON THE BOTTOM OF THE SHELF.

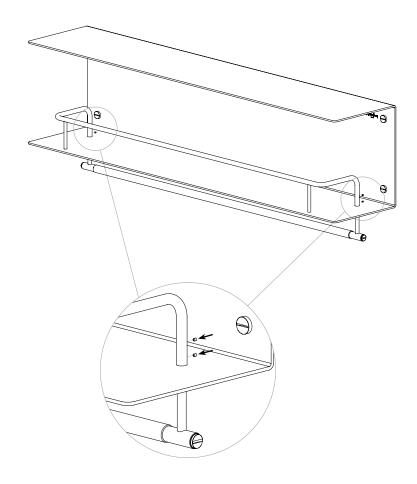

[end. **ORDINARY**]