



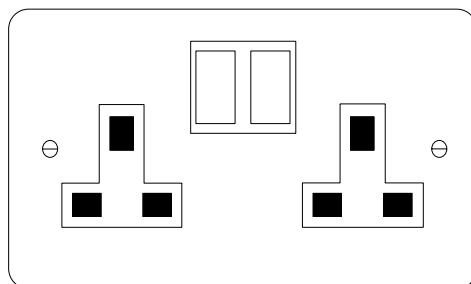

ELECTRICITY
1G & 2G UK PLUG SOCKET
INSTALLATION MANUAL

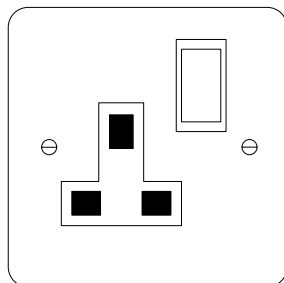

EN

TECHNICAL SPECIFICATION

PLUG SOCKET STYLE:
13A DP SWITCHED SOCKET.
RATED AT 13A 250V~

IMPORTANT NOTES

PLEASE READ BEFORE INSTALLING

These products must be installed in accordance with the latest Building and IEE wiring regulations. If in any doubt, please contact a qualified electrician. Not for use in wet/damp environments or in places which have condensing humidity.

BACK BOXES

We recommend you to use a UK back box to install your product. Back boxes are available to purchase from us, please see recommended sizes below:

SOCKET PLATE	RECOMMENDED BACK BOX
1G	1G UK Back box – SKU# SB632
2G	2G UK Back box – SKU# SB631

When installing our sockets, we recommend that backboxes are set back a minimum of 4mm from the finished wall surface. This is to ensure a flush install between the back of the socket plate and the finished wall.

WARRANTY INFORMATION

The Warranty Period of Two (2) years from the date of the original purchase.

RECYCLING ELECTRICAL PRODUCTS

Buster and Punch encourages all its customers to make note of this symbol and avoid putting any waste electrical goods in your domestic waste bin or container. Please ensure you take your waste electrical goods to a suitable facility for disposal.



1



BEFORE COMMENCING WORK, ISOLATE THE MAINS POWER SUPPLY AND REMOVE THE FUSE IN THE FUSE BOX OR SWITCH OFF THE CIRCUIT BREAKER IN THE CONSUMER UNIT.



2 IF UNIT IS TO BE USED AS A REPLACEMENT FOR AN EXISTING PRODUCT, REMOVE EXISTING UNIT FROM ITS LOCATION AND DISCONNECT THE WIRING.



CAUTION:
Verify power is OFF to switch before proceeding.


3

PLEASE NOTE THAT THE MINIMUM RECOMMENDED DEPTH FOR THE MOUNTING BOX IS 47MM. PLEASE ENSURE THAT THE MOULDING PLATE SCREWS ARE SUFFICIENTLY TIGHTENED TO SUPPORT THE PRODUCT, BUT DO NOT OVERTIGHTEN.


4

CONNECT THE WIRES AS SHOWN IN APPROPRIATE WIRING DIAGRAM BELOW. USE GREEN/YELLOW SLEEVING ON EARTH CONDUCTORS THAT ARE NOT INSULATED. ENSURE TERMINALS ARE PROPERLY TIGHTENED TO 0.4NM AND NO BARE WIRE IS VISIBLE. PUSH BACK UNIT INTO MOULDING BOX MAKING SURE CONDUCTORS ARE NOT TRAPPED.

1 GANG 13A D.P. SWITCHED SOCKET

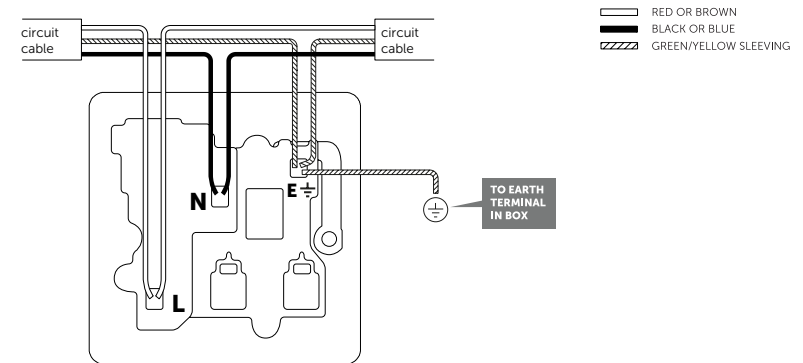

2 GANG 13A D.P. SWITCHED SOCKET

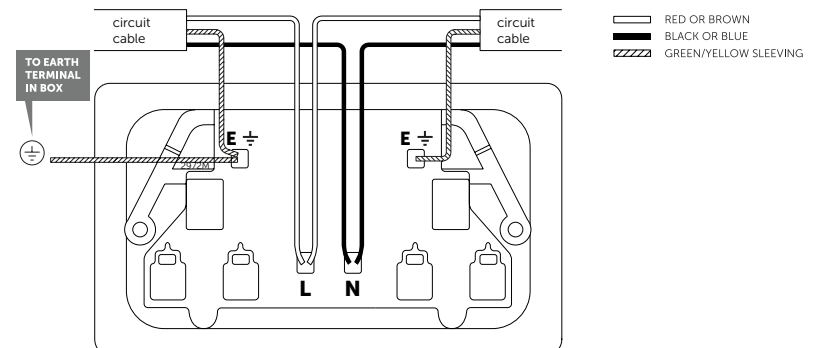

5 SCREW THE UNIT TO THE MOUNTING BOX USING SCREWS PROVIDED. DO NOT OVER TIGHTEN FIXING SCREWS.

6 TO REDUCE THE RISK OF DISCOLOURATION OR TARNISHING, AVOID INSTALLATION ON WET PLASTER.

7 TURN POWER BACK ON.



[end. **ORDINARY**]