

FLIPFIX

FITTING INSTRUCTIONS

FlipFix Plasterboard Faced Access Panel

Scan for
Fitting
Video




NOTE:

Apply intumescent sealant to the rear of the frame before placing it in the structural opening on Fire Rated Panels.
For a Beaded Frame Panel, apply skim tape prior to plastering.



1

To fit the panel, cut the plasterboard to the structural opening size required ensuring the aperture is 5mm larger than panel size. Stock sizes are supplied with a perforated pop out template which is part of the box the panel arrived in.

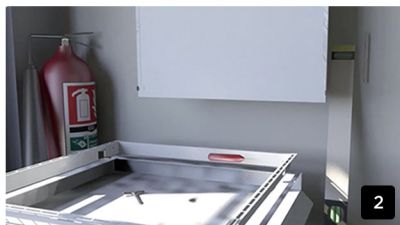

2

Place your frame into the aperture, no need to remove the door from the frame. Make sure you set your drill to a low torque setting before the next step. Apply intumescent sealant to the rear of the frame before placing it in the structural opening on Fire Rated Panels.



3

Proceed to screw the Flipfix device in place until it grips on to the rear of the plasterboard securely.



4

Lock the door in place with key provided & ensure the door is flush when closed. You have successfully installed a FlipFix Access Panel! For a beaded framed panel, apply skim tape prior to plastering.

QUALITY ASSURANCE

Please sign both

Sign

Ref

FIRE RATING

Please tick one

Non

1 Hour

2 Hour