

53

Fitting Instructions


Range 53 Plasterboard Faced Access Panel

For a Beaded Frame Panel, apply skim tape prior to plastering.


Independent bracing or support may be required to take the weight of the panel.




To remove the door; Open the door, pull the spring hinge handle into the hinge stop then lift the door out.

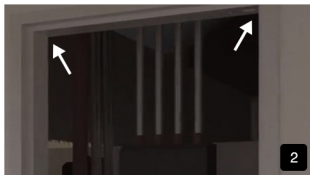


Place the frame into the aperture ensuring the aperture is 7mm larger than the panel size. Mark the position of the hinge pivot holes and if 3 point locking the locking bar slots as well.

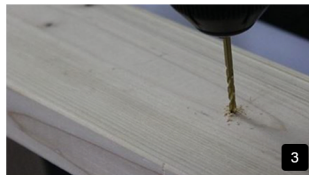


Remove the frame & drill clearance holes for hinge holes and if 3 point locking the locking bar slots as well as previously marked.

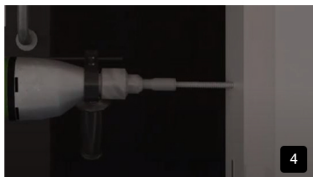

Fix the frame into the aperture using all the fixing holes to secure in place. Ensure frame is square by measuring diagonally & flush to the wall. If fire, acoustic or airtight rated apply Intumescent acrylic mastic on the rear of the frame jamb prior to installing the frame.

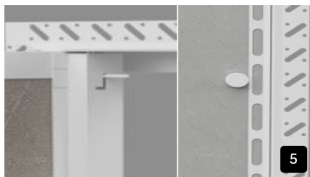

Refit the door securing the spring pin hinges back in place ensuring the pins are fully inserted through the frame. Lock the door in place with key provided & ensure the door is flush when closed.

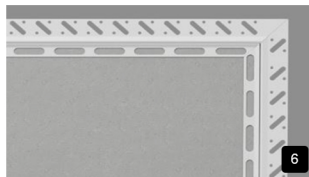

Apply skim tape to the beaded frame & door prior to plastering. If fire, acoustic or airtight rated apply Intumescent acrylic mastic to the rear of the frame, nominally 5mm wide sealing to the supporting construction.

QUALITY ASSURANCE

Please sign both

FIRE RATING

Please tick one

Sign

Ref

Non

1 Hour

2 Hour