

Safety Information

>All electrical work must be undertaken by a qualified contractor to ensure compliance with latest edition BS7671 and IEE/IET wiring regulations.


> Before installing an LED High Bay or doing any maintenance, ensure power supply is turned off at the circuit breaker or fuse box.

> This product is designed for permanent connection to fixed wiring; the circuit should be protected with the appropriate MCB or fuse.

Environment

>Please DO NOT dispose of electrical items or packaging as unsorted waste. Use the recycling facilities provided by your local authorities.

PRODUCT DIMENSIONS

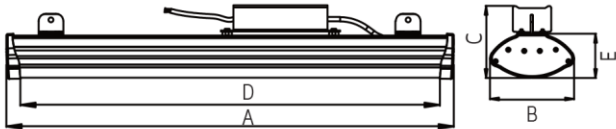

	A	B	C	D	E
150W	905	135	115	865	72

All units are in mm

Important Warranty Information

The Tri-colour Downlight has a 3 year warranty, which can be extended free of charge to 5 years by registering online via the website address below. The registrant must provide the product part number and date of manufacture, which can be found on the label attached to the luminaire housing.



Certificate No. FS 571788



Certificate No. EMS 571787

NET LED Ltd.
Buckingway Business Park
300 Anderson Road
Cambridge
CB24 4UQ
sales@netled.co.uk
www.netled.co.uk

Technical Helpline: 01223 851505
Email: support@netled.co.uk

www.netled.co.uk/downloads

Distributed by



LED LINEAR HIGH BAY INSTALLATION GUIDE

LED LINEAR HIGH BAY NET-23-12-18

KEY DATA

Light Source	LED
Power	150W
Luminous Flux	2000lm
Luminous Efficacy	113lm/W
IP Rating	IP65
IK Rating	IK10
Colour Temperature	5000K
Colour Rendering	>80 CRI
Housing Material	Aluminium
Diffuser Material	Polycarbonate
Manufacturer	FYTLED


SUPPLY/EARTH CLASS

100-270V AC 50/60 Hz
Mains Input Termination




Class I

Mains Input Termination

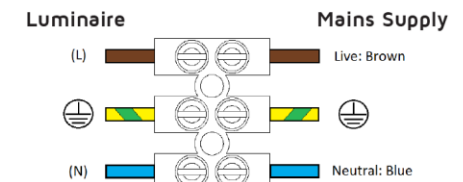

1-10V Dimming Terminal



Installation procedure: Carefully read the instructions and ensure the mains supply is isolated before installation. Please follow the safety information overleaf before carrying out any installation. Please retain this leaflet for future reference.

Installation instructions for suspended use:



Non-replaceable light source




Replaceable control gear by professional


Step 1: Drill two 100mm holes where Linear High Bay is going to be installed.




Step 2: Fix the expansions screws in the holes.




Step 3: Connect the Linear High Bay to the suspension kit; make sure the safety clip is closed.

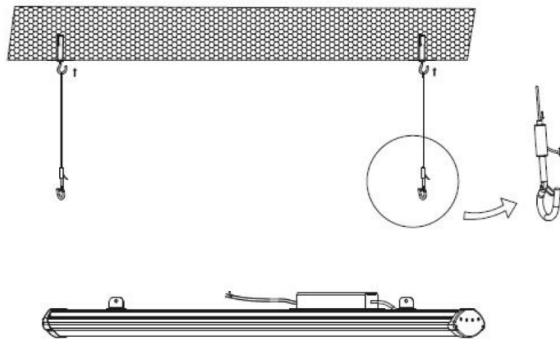

Step 4: Connect the driver to the power line according to the wiring diagram below.

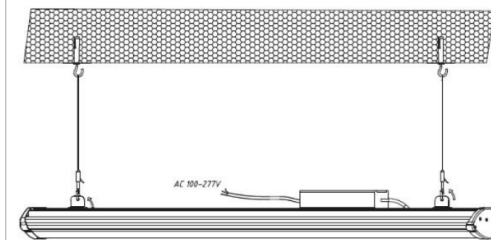

Mains Input Termination

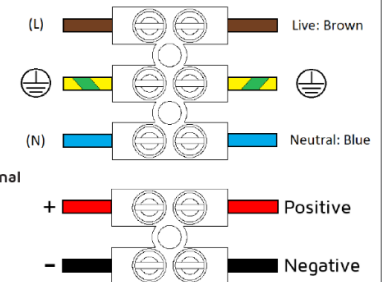

LED High Bays

Available in 100W, 150W & 200W, the Orwell Range of LED High Bays are dimmable (1-10V) as standard.



LED High Power Flood Lights

Available in 150W, 200W & 240W.



Full product range available

Visit www.netled.co.uk for more commercial LED lighting products, including:

Panel Lights, Downlights, T5 and T8 Tubes, Batten and Linear Luminaires, 2D Bulkheads and retrofit Gear Trays, Non-Corrosive Luminaires and much more.

Safety Information

>All electrical work must be undertaken by a qualified contractor to ensure compliance with latest edition BS7671 and IEE/IET wiring regulations.


> Before installing the Motion and Photocell Sensor or doing any maintenance, ensure power supply is turned off at the circuit breaker or fuse box.

> This product is designed for permanent connection to fixed wiring; the circuit should be protected with the appropriate MCB or fuse.

Environment

>Please DO NOT dispose of electrical items or packaging as unsorted waste. Use the recycling facilities provided by your local authorities.

PRODUCT DIMENSIONS

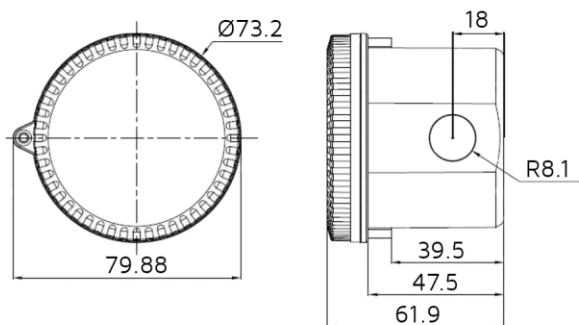

All units are in mm

Important Warranty Information

The Motion Sensor has a 5 year warranty.

To claim, you must provide the product part number and date of manufacture, which can be found on the label attached to the sensor housing along with the original purchase invoice.



theLIA
MEMBER



Certificate No. FS 571788



Certificate No. EMS 571787

NET LED Ltd.
Buckingway Business Park
300 Anderson Road
Cambridge
CB24 4UQ
sales@netled.co.uk
www.netled.co.uk

Technical Helpline: 01223 851505
Email: support@netled.co.uk

www.netled.co.uk/downloads

Distributed by

NET LED®
LIGHTING

MOTION AND
PHOTOCELL SENSOR
INSTALLATION
GUIDE

MOTION SENSOR NET-42-43-36

KEY DATA

Input Voltage AC	120-277V
Power Frequency	60Hz
Stand-by Power	<1W
Maximum Detection Distance	15m
Detection Angle	150°(Wall), 360° (Ceiling mounting)
Operating Temp.	-35°C to +55°C
Daylight Sensor	5Lux/15Lux/30Lux/50Lux/ 100Lux/150Lux/Disable
Detection Area	25%/50%/75%/100%
Hold Time	5s/30s/1min/3min/5min/ 10min/20min/30min
Manufacturer	Merrytek



UK
CA


CE



Installation procedure: Carefully read the instructions and ensure the mains supply is isolated before installation. Please follow the safety information overleaf before carrying out any installation. Please retain this leaflet for future reference.

Motion Sensor Installation:

Connect Sensor wiring as per below diagram.

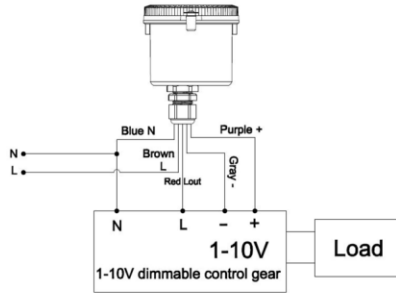


Remote control and code setting conversion:

1. Dip switch setting convert to remote control press any button except 'RESET' on the remote control and the sensor settings convert to the function currently selected by the remote control. (No function button settings invalid).
2. Remote control convert to DIP switch setting.
 - a. Press the 'RESET' button on the remote control and all settings return to the DIP switch settings of the sensor.
 - b. Turn off the power, toggle any DIP switch. Connect the power and all settings return to the DIP switch settings when supplying power again.

Remote Control Setting

Buttons

Remarks

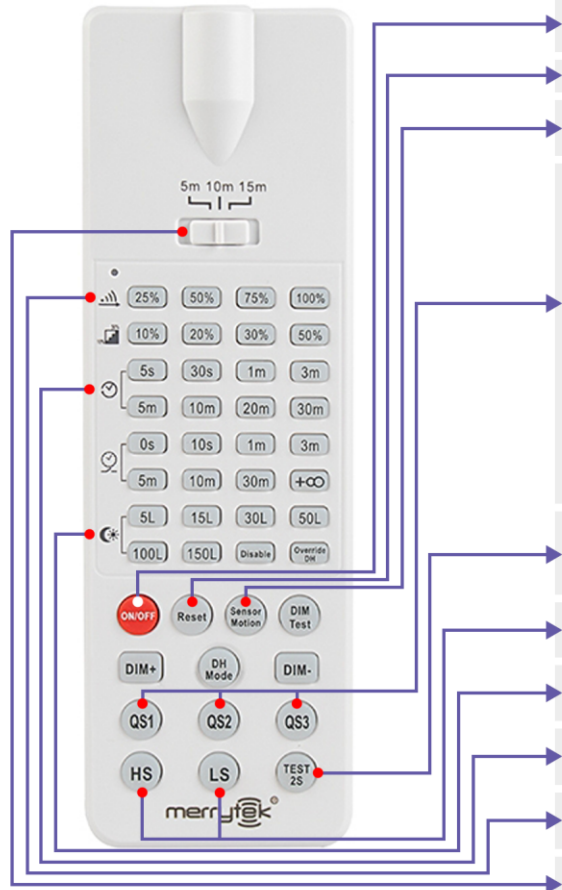

	Press the 'ON/OFF' button. The light goes to constant on/off mode. Sensor is disabled. Press any button to quit from this mode and the sensor starts to work.																				
	Press 'RESET' button. All parameters are the same as the DIP switch factory settings.																				
	Press 'Sensor Motion' button. The light quits from the constant on/off mode and the sensor starts to work (The latest setting stays in validity).																				
	<table border="1"> <thead> <tr> <th>Scene Options</th> <th>Detection Area</th> <th>Hold Time</th> <th>Daylight Sensor</th> <th>Induction Mode</th> </tr> </thead> <tbody> <tr> <td>QS1</td> <td>100%</td> <td>5min</td> <td>30Lux</td> <td>Hs</td> </tr> <tr> <td>QS2</td> <td>100%</td> <td>10min</td> <td>Disable</td> <td>Hs</td> </tr> <tr> <td>QS3</td> <td>100%</td> <td>20min</td> <td>Disable</td> <td>Hs</td> </tr> </tbody> </table> <p>Note: Detection area / Hold time / Stand by period / Stand by dim level / Daylight sensor can be adjusted by pressing the corresponding button. The latest setting will stay valid.</p>	Scene Options	Detection Area	Hold Time	Daylight Sensor	Induction Mode	QS1	100%	5min	30Lux	Hs	QS2	100%	10min	Disable	Hs	QS3	100%	20min	Disable	Hs
Scene Options	Detection Area	Hold Time	Daylight Sensor	Induction Mode																	
QS1	100%	5min	30Lux	Hs																	
QS2	100%	10min	Disable	Hs																	
QS3	100%	20min	Disable	Hs																	
	Press the 'TEST 2S' button to enter the test mode anytime. In this mode, the sensor parameters are as follows: Detection Area is 100%. Hold time is 5s. Stand-by Period is 0s. Daylight sensor is disabled. This function is only for testing. To quit the mode, press 'RESET' or any other function buttons.																				
	Press 'HS' button to set the detection area to high sensitivity. Press 'LS' button to set the detection area to low sensitivity																				
	Detection Area Set up detection area: 5Lux / 15Lux / 30Lux / 50Lux / 100Lux / 150Lux / Disable																				
	Hold Time Set up hold time: 5S / 30S / 1min / 3min / 5min / 10min / 20min / 30min																				
	Detection Area Set up detection area: 25% / 50% / 75% / 100%																				
	Remote Distance Toggle button can set the remote distance of remote control and sensor.																				

Initialization

1: On/Off function / 3 step dimming function:

After power on, the sensor automatically turns on at 100% brightness. After 10sec, it turns off the light. During the initialization, the sensor is not able to detect movement.

2: 2 step dimming function:

After power on, the sensor automatically turns on light at 100% brightness. After 10sec, it dims the light to a low light level (set by stand-by dim level). During the initialization, the sensor is not able to detect movement.

