

### Safety Information

>All electrical work must be undertaken by a qualified contractor to ensure compliance with latest edition BS 7671 and IEE/IET wiring regulations.

>Before installing an LED Batten or doing an maintenance, ensure power supply is turned off at the circuit breaker or fuse box.

>This product is designed for permanent connection to fixed wiring; the circuit should be protected with the appropriate MCB or fuse.

### Environment

>Please DO NOT dispose of electrical items or packaging as unsorted waste. Use the recycling facilities provided by your local authorities.


### SUPPLY/EARTH CLASS

220-240V AC 50/60 Hz




Class I

Fig.1 Mains Input Termination

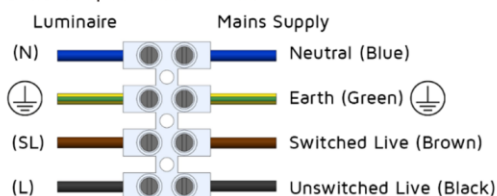

### PRODUCT DIMENSIONS

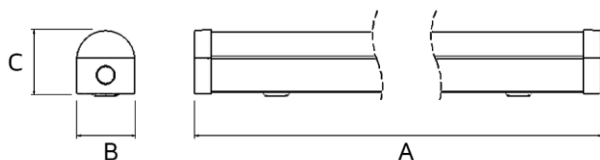

Size (ft)	A	B	C
2	600	63	73
4	1200	63	73
5	1500	63	73
6	1800	63	73

All units are in mm

### Important Warranty Information

The LED Batten has a 3 year warranty, which can be extended free of charge to 5 years by registering online via the website address below. The registrant must provide the product part number and date of manufacture, which can be found on the label attached to the luminaire housing.



Certificate No. FS 590684



Certificate No. EMS 590685

NET LED Lighting  
Buckway Business Park  
300 Anderson Road  
Cambridge  
CB24 4UQ  
sales@netled.co.uk  
www.netled.co.uk

Technical Helpline: 01223 851505  
Email: support@netled.co.uk

www.netled.co.uk/downloads

Distributed by



### FOXTON LED BATTEN INSTALLATION GUIDE

Part Number	Description
NET-41-11-68	2ft 10W Batten - Standard
NET-41-11-69	2ft 10W Batten - Emergency
NET-41-11-91	4ft 20W Batten - Standard
NET-41-11-92	4ft 20W Batten - Emergency
NET-41-12-92	4ft 20W Batten - Self Test EMG
NET-41-11-08	4ft 20W Batten - Dimmable
NET-41-11-09	4ft 20W Batten - Dimmable EMG
NET-41-11-93	5ft 25W Batten - Standard
NET-41-11-94	5ft 25W Batten - Emergency
NET-41-12-94	5ft 25W Batten - Self Test EMG
NET-41-11-06	5ft 25W Batten - Dimmable
NET-41-11-07	5ft 25W Batten - Dimmable EMG
NET-41-11-96	5ft 50W Batten - Standard
NET-41-11-95	5ft 50W Batten - Emergency
NET-41-12-95	5ft 50W Batten - Self Test EMG
NET-41-11-13	5ft 50W Batten - Dimmable
NET-41-11-14	5ft 50W Batten - Dimmable EMG
NET-41-11-97	6ft 35W Batten - Standard
NET-41-11-98	6ft 35W Batten - Emergency
NET-41-12-98	6ft 35W Batten - Self Test EMG
NET-41-11-15	6ft 35W Batten - Dimmable
NET-41-11-16	6ft 35W Batten - Dimmable EMG
NET-41-11-10	6ft 75W Batten - Standard
NET-41-11-99	6ft 75W Batten - Emergency
NET-41-12-99	6ft 75W Batten - Self Test EMG
NET-41-11-17	6ft 75W Batten - Dimmable
NET-41-11-18	6ft 75W Batten - Dimmable EMG



**Installation procedure:** Carefully read the installation instructions and ensure the mains supply is isolated before installation. Please read the safety information overleaf before carrying out any installation. Please retain the leaflet for future reference.

**LED Batten Installation:**




Replaceable light source by end-user




Replaceable control gear by professional


**Step 1:** Carefully remove the LED Batten from the packaging. Press the clips on the luminaire housing to remove the diffuser.

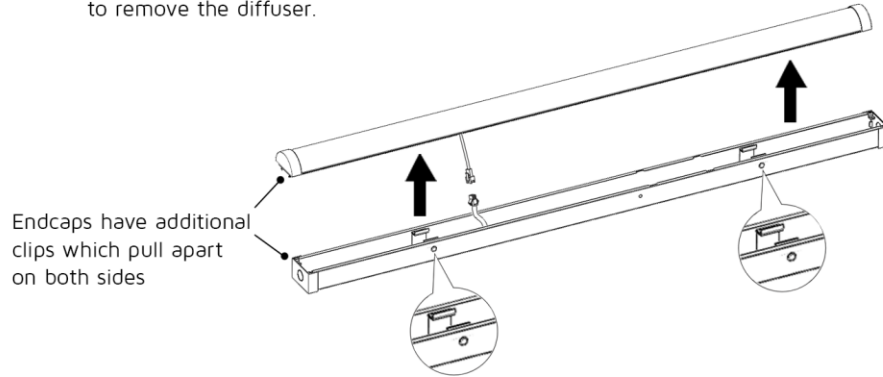


**Step 2:** Pop out the required cable entry hole and fix the cable gland supplied if required.

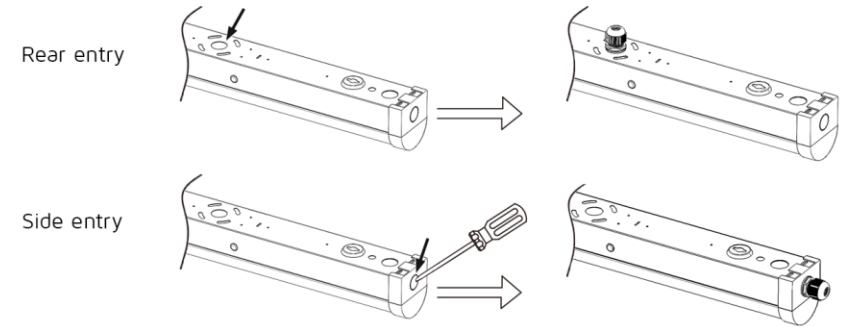



**Step 3:** Fix the LED Batten onto a mounting surface as per the illustration below.

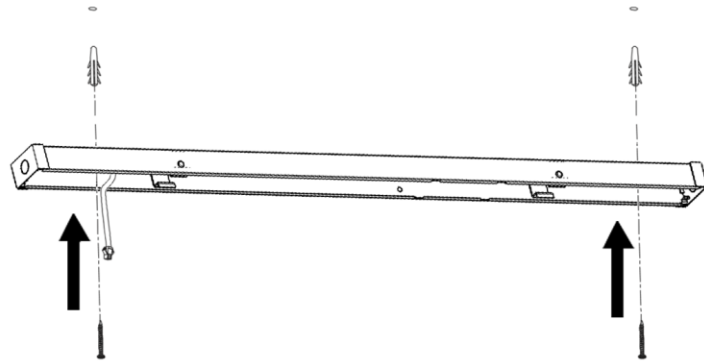

**Step 4:** Wire the cable into the terminal block inside the luminaire housing.

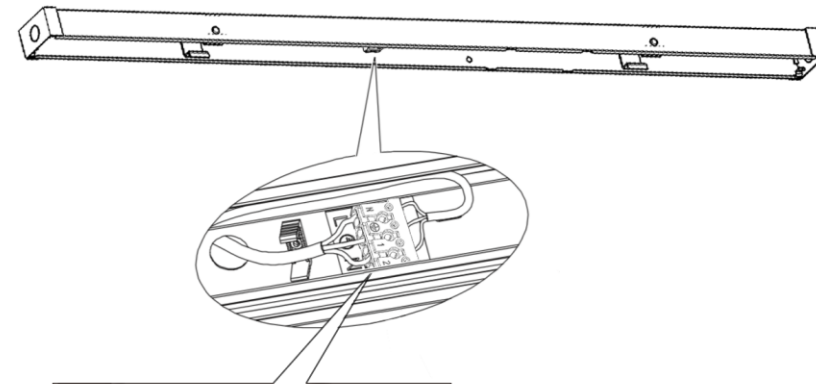

**Step 5:** Select colour temperature, then replace the diffuser and ensure it has clicked into place. Turn on the power supply to ensure the luminaire is working properly.

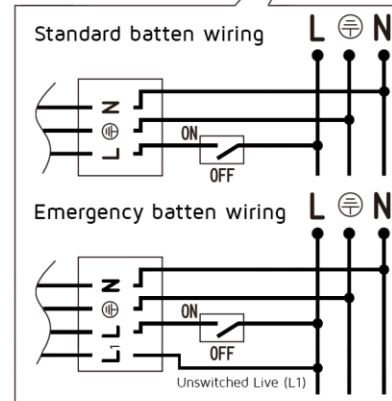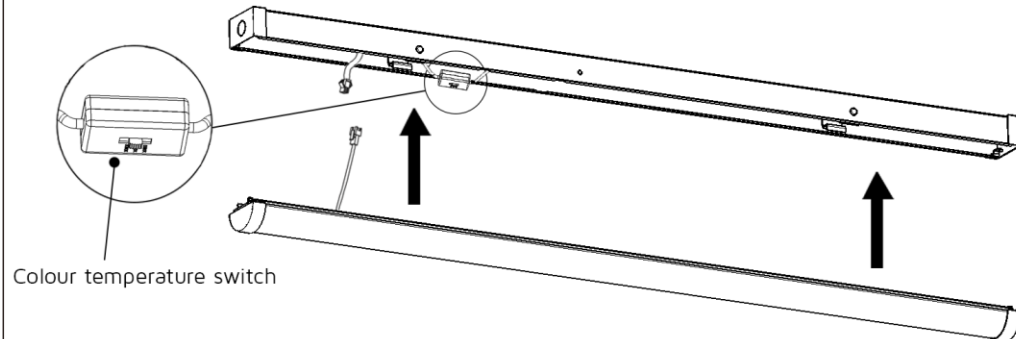

**Important Battery Warranty information**  
 The Battery has a 1 Year Warranty.  
 To claim, you must provide the product part number and date of manufacture, which can be found on the label attached to the Luminaire housing along with the original purchase invoice.

### Safety Information

>All electrical work must be undertaken by a qualified contractor to ensure compliance with latest edition BS7671 and IEE/IET wiring regulations.


> Before installing the Motion and Photocell Sensor or doing any maintenance, ensure power supply is turned off at the circuit breaker or fuse box.

> This product is designed for permanent connection to fixed wiring; the circuit should be protected with the appropriate MCB or fuse.

### Environment

>Please DO NOT dispose of electrical items or packaging as unsorted waste. Use the recycling facilities provided by your local authorities.

### PRODUCT DIMENSIONS

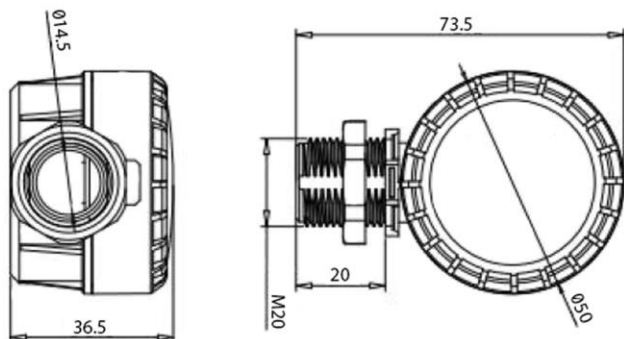

All units are in mm

### Important Warranty Information

The Motion Sensor has a 5 year warranty. To claim, you must provide the product part number and date of manufacture, which can be found on the label attached to the sensor housing along with the original purchase invoice.



theLIA  
MEMBER



Certificate No. FS 571788



Certificate No. EMS 571787

NET LED Ltd.  
Buckingway Business Park  
300 Anderson Road  
Cambridge  
CB24 4UQ  
sales@netled.co.uk  
www.netled.co.uk

Technical Helpline: 01223 851505  
Email: support@netled.co.uk

www.netled.co.uk/downloads

Distributed by



MOTION SENSOR  
INSTALLATION  
GUIDE

### MOTION SENSOR NET-42-43-38

#### KEY DATA


Input Voltage AC	120-277V
Power Frequency	50/60Hz
Maximum Load	400W-inductive or 800W-resistive
Maximum Detection Distance	12m
Detection Angle	150°(Wall), 360° (Ceiling mounting)
Operating Temp.	-15°C to +45°C
Daylight Sensor	5Lux/15Lux/30Lux/50Lux/ 100Lux/150Lux/Disable
Detection Area	25%/50%/75%/100%
Hold Time	5s/30s/1min/3min/5min/ 10min/20min/30min
Manufacturer	Merrytek



Installation procedure: Carefully read the instructions and ensure the mains supply is isolated before installation. Please follow the safety information overleaf before carrying out any installation. Pleaseretain this leaflet for future reference.

### Motion Sensor Installation:


Connect Sensor wiring as per below diagram.

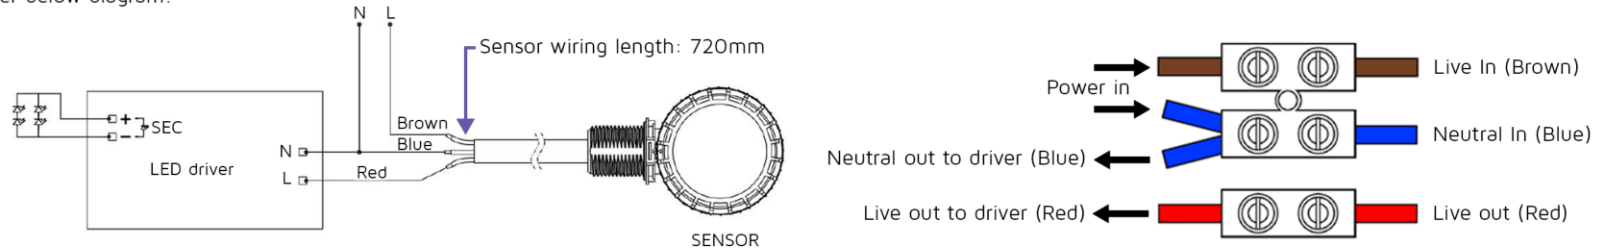

### Remote Control Setting

### Buttons

### Remarks

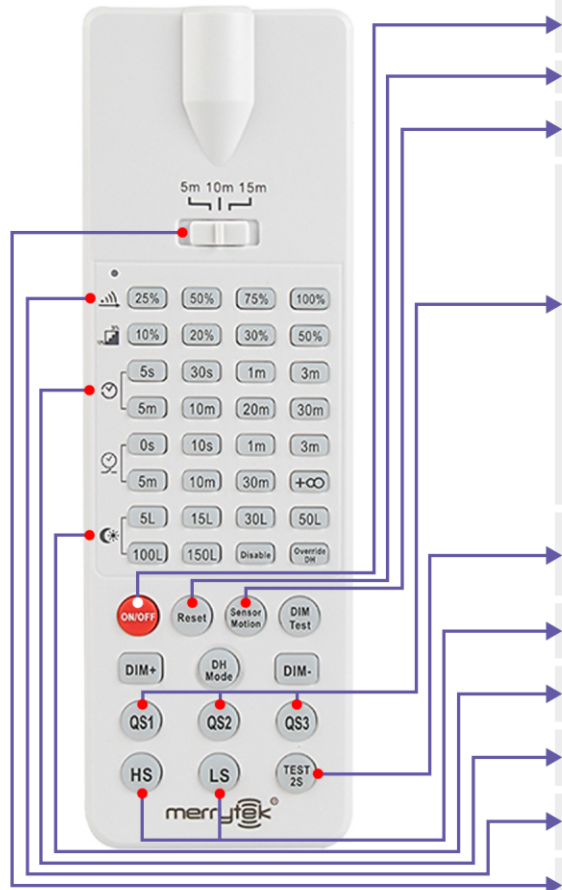

- Press the 'ON/OFF' button. The light goes to constant on/off mode. Sensor is disabled. Press any button to quit from this mode and the sensor starts to work.
- Press 'RESET' button. All parameters are the same as the DIP switch factory settings.
- Press 'Sensor Motion' button. The light quits from the constant on/off mode and the sensor starts to work (The latest setting stays in validity).

Scene Options	Detection Area	Hold Time	Daylight Sensor	Induction Mode
QS1	100%	5min	30Lux	Hs
QS2	100%	10min	Disable	Hs
QS3	100%	20min	Disable	Hs

Note: Detection area / Hold time / Stand by period / Stand by dim level / Daylight sensor can be adjusted by pressing the corresponding button. The latest setting will stay valid.

- Press the 'TEST 2S' button to enter the test mode anytime. In this mode, the sensor parameters are as follows: Detection Area is 100%. Hold time is 5s. Stand-by Period is 0s. Daylight sensor is disabled. This function is only for testing. To quit the mode, press 'RESET' or any other function buttons.

- Press 'HS' button to set the detection area to high sensitivity. Press 'LS' button to set the detection area to low sensitivity
- Detection Area  
Set up detection area: 5Lux / 15Lux / 30Lux / 50Lux / 100Lux / 150Lux / Disable
- Hold Time  
Set up hold time: 5S / 30S / 1min / 3min / 5min / 10min / 20min / 30min
- Detection Area  
Set up detection area: 25% / 50% / 75% / 100%
- Remote Distance  
Toggle button can set the remote distance of remote control and sensor.

