Safety Information

- > All electrical work must be undertaken by a qualified contractor to ensure compliance with latest edition BS7671 and IEE/IET wiring regulations.
- > Before installing a Bulkhead or doing any maintainance, ensure power supply is turned off at the circuit breaker or fuse box.
- > This product is designed for permanent connection to fixed wiring; the circuit should be protected with the appropriate MCB or fuse.

Environment

> Please DO NOT dispose of electrical items or packaging as unsorted waste. Use the recycling facilities provided by your local authorities.

PRODUCT DIMENSIONS 110 325 All units are in mm

Important Warranty Information

The LED Bulkhead has a 3 Year Warranty. The registrant must provide the product part number and date of manufacture, which can be found on the label attached to the Luminaire housing along with the original invoice. The Battery has a 1 Year Warranty.









14001

Certificate No. FS 590684

Certificate No. EMS 590685

NET LED Lighting Buckingway Business Park 300 Anderson Road Cambridge CB24 4UO sales@netled.co.uk www.netled.co.uk

Technical Helpline: 01223 851505 Email: support@netled.co.uk

www.netled.co.uk/downloads




DUXFORD LED BULKHEAD INSTALLATION GUIDE

Part Number	Description
NET-33-06-20	Tri-colour - Standard
NET-33-06-30	Tri-colour - Emergency
NET-33-06-25	Tri-colour - Self Test EMG
NET-33-06-24	Tri-colour - Motion Sensor
NET-33-06-34	Tri-colour - Motion Sensor EMG
NET-33-06-27	Tri-colour - Motion Self Test EMG
NET-33-06-70	Tri-colour - Photocell
NET-33-06-71	Tri-colour - Photocell EMG
NET-33-06-48	Tri-colour - Photocell Motion
NET-33-06-49	Tri-colour - Photocell Motion EMG
NET-33-06-40	4K - Standard
NET-33-06-42	4K - Emergency
NET-33-06-45	4K - Self Test Emergency
NET-33-06-44	4K - Motion Sensor
NET-33-06-46	4K - Motion Sensor Emergency
NET-33-06-47	4K - Motion Sensor Self Test EMG

SUPPLY/EARTH CLASS

220-240V AC 50/60 Hz



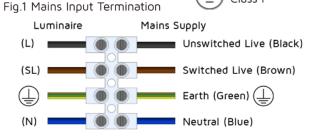







Installation procedure: Carefully read the installation instructions and ensure the mains supply is isolated before installation. Please read the safety information overleaf before carrying out any installation. Please retain this leaflet for future reference.

Bulkhead installation:


Step 1: Hold down the Bulkhead and rotate the Outer Ring anti-clockwise to remove it. Then remove the Diffuser.

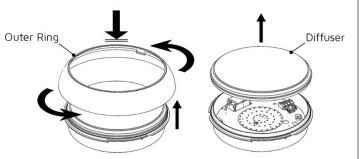

Step 2: Remove the Gear Tray from the housing by loosening the quick release screws. Drill out the screw holes in the housing and screw it into a solid surface using suitable wall plugs and screws.

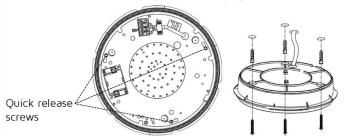

Step 4: Re-insert the Gear Tray into the housing and secure the power cable. Refit the Diffuser and switch on the mains to test that Bulkhead functions correctly.

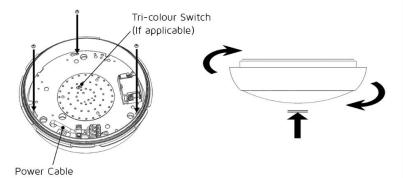

Photocell Sensor Configuration (Only for units with the Photocell Sensor option:

Night/Light Sensor Function								
		1	2	3	4	open	close	
0 Z	I	ON	ON	ON	ON	5Lux	25Lux	
	II	ON	ON	ON	-	10Lux	50Lux	
	III	ON	ON	-	ON	25Lux	75Lux	+
	IV	ON	ON	-	-	50Lux	100Lux	
	V	ON	-	ON	-	100Lux	200Lux	
	VI	ON	-	-	-	150Lux	300Lux	
	VII	-	ON	-	-	200Lux	400Lux	
	VIII	-	-	-	-	Disc	able	

When ambient light level is below the open lux level, the sensor automatically switches on luminaire at 100% brightness. When ambient level is over close lux level, the luminaire switches off.


Step 3: Wire the Gear Tray as per the diagram below.

source by professional

Replaceable (LED only) light




Replaceable control gear by professional

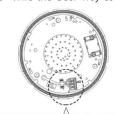

Note: A qualified electrician is required to carry out the electrical wiring.

All wiring must be double insulated where there is a possibility of coming in contact with live wires.

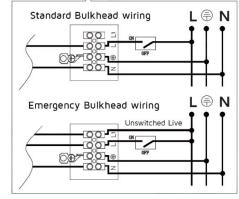

Important Battery Warranty information

The Battery has a 1 Year Warranty.

To claim, you must provide the product part number and date of manufacture, which can be found on the label attached to the Luminaire housing along with the original purchase invoice.

Microwave Motion Sensor Configuration: These settings are only for the LED Gear Tray with Microwave Sensor option.



Please note: Dip switch in the 'Up' position is ON.

Detection area can be changed by selecting the combinations below on the DIP switches. Maximum detection area 12m. Refers to the time period the lamp remains at 100% illumination after no motion is detected.

The sensor can be set to only allow the lamp to illuminate below a defined ambient brightness threshold. When set to Disable mode, the daylight sensor will switch on the lamp when motion is detected regardless of ambient light level.

Default Settings

Refers to the time period the lamp remains at a low light level before it completely switches off in the long absense of people. When set to '+\omega', the low light is maintained until motion is detected. When set to 'Os', the light will turn off after hold time.

Detection Area		Full Brightness Hold Time				Daylight Sensor			10% Corridor Function Time		
ch1	ON		ch3	ON		ch5	ON		ch7	ON	
ch2	ON	100%	ch4	ON	5S	ch6	ON	Disable	ch8	ON	Off/OS
ch1			ch3	-		ch5	-		ch7	1	
ch2	ON	75%	ch4	ON	90S	ch6	ON	50Lux	ch8	ON	30S
ch1	ON		ch3	ON		ch5	ON		ch7	ON	
ch2	-	50%	ch4	-	3min	ch6	-	15Lux	ch8	-	10min
ch1	-		ch3	-		ch5	-		ch7	-	
ch2		25%	ch4	-	10min	ch6	-	5Lux	ch8	-	Always On/+∞