

### Safety Information

>All electrical work must be undertaken by a qualified contractor to ensure compliance with latest edition BS7671 and IEE/IET wiring regulations.


> Before installing a LED NCF Luminaire or doing any maintenance, ensure power supply is turned off at the circuit breaker or fuse box.

> This product is designed for permanent connection to fixed wiring; the circuit should be protected with the appropriate MCB or fuse.

### Environment

>Please DO NOT dispose of electrical items or packaging as unsorted waste. Use the recycling facilities provided by your local authorities.

### PRODUCT DIMENSIONS

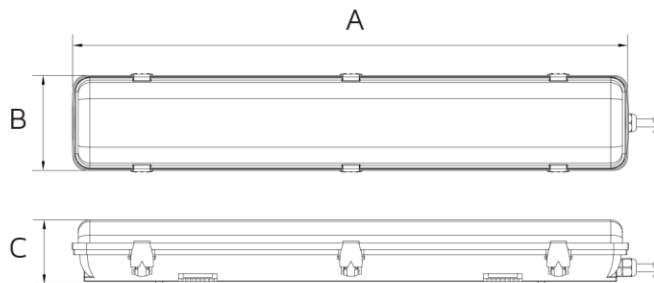

| Size | A    | B   | C  |
|------|------|-----|----|
| 2ft  | 600  | 100 | 85 |
| 4ft  | 1200 | 100 | 85 |
| 5ft  | 1500 | 100 | 85 |
| 6ft  | 1800 | 100 | 85 |

### Important Warranty Information

The LED NCF Luminaire has a 3 year warranty, which can be extended free of charge to 5 years by registering online via the website address below. The registrant must provide the product part number and date of manufacture, which can be found on the label attached to the luminaire housing.



Certificate No. FS 590684



Certificate No. EMS 590685

NET LED Lighting  
Buckingway Business Park  
300 Anderson Road  
Cambridge  
CB24 4UQ  
sales@netled.co.uk  
www.netled.co.uk

Technical Helpline: 01223 851505  
Email: support@netled.co.uk

www.netled.co.uk/downloads

Distributed by



### LED NCF LUMINAIRE INSTALLATION GUIDE

| Part Number  | Description                           |
|--------------|---------------------------------------|
| NET-41-11-01 | Tri-colour 2ft 14/20W - Standard      |
| NET-41-12-01 | Tri-colour 2ft 14/20W - Emergency     |
| NET-41-11-03 | Tri-colour 4ft 24/40W - Standard      |
| NET-41-12-03 | Tri-colour 4ft 24/40W - Emergency     |
| NET-41-12-04 | Tri-colour 4ft 24/40W - Self Test EMG |
| NET-41-11-20 | Tri-colour 4ft 40W - Dimmable         |
| NET-41-12-09 | Tri-colour 4ft 40W - Dimmable EMG     |
| NET-41-11-05 | Tri-colour 5ft 48/60W - Standard      |
| NET-41-12-05 | Tri-colour 5ft 48/60W - Emergency     |
| NET-41-12-06 | Tri-colour 5ft 48/60W - Self Test EMG |
| NET-41-11-12 | Tri-colour 5ft 60W - Dimmable         |
| NET-41-12-12 | Tri-colour 5ft 60W - Dimmable EMG     |
| NET-41-11-11 | Tri-colour 6ft 62/80W - Standard      |
| NET-41-12-11 | Tri-colour 6ft 62/80W - Emergency     |
| NET-41-12-13 | Tri-colour 6ft 62/80W - Self Test EMG |
| NET-41-11-21 | Tri-colour 6ft 75W - Dimmable         |
| NET-41-12-15 | Tri-colour 6ft 75W - Dimmable EMG     |


### SUPPLY/EARTH CLASS

220-240V AC 50/60 Hz



Class I

Fig.1 Mains Input Termination

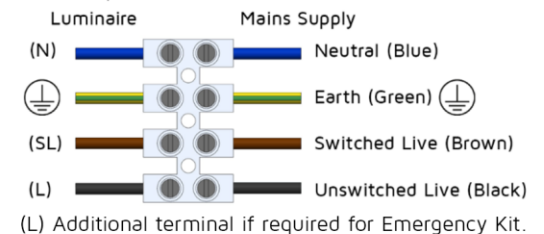

Installation procedure: Carefully read the installation instructions and ensure the mains supply is isolated before installation. Please read the safety information overleaf before carrying out any installation. Please retain the leaflet for future reference.

LED NCF Luminaire Installation:




Replaceable light source by end-user




Replaceable control gear by professional


**Step 1:** Carefully remove the fitting from the packaging. Release the stainless steel clips to remove the diffuser. Access the accessories bag inside the housing.

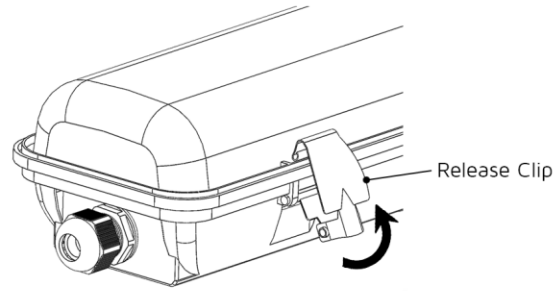

**Step 2:** Fix the supplied metal clips on a mounting surface as per the illustration below.

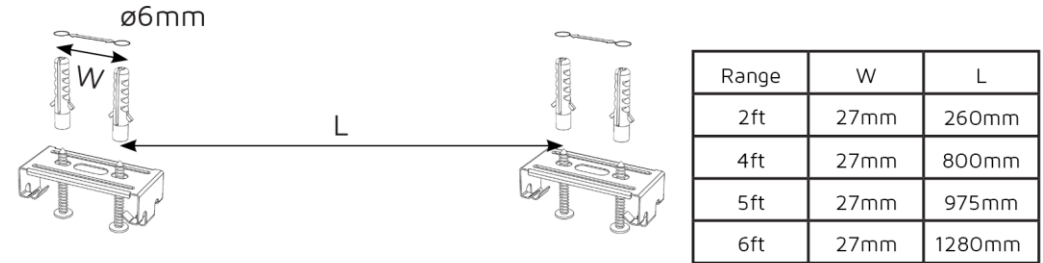


**Step 3:** Use the driver dip switches to select the required wattage according to the table below.

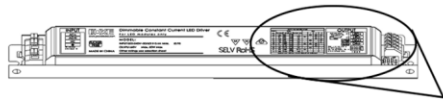

|                       |     | Dip Switch |     |     |     |
|-----------------------|-----|------------|-----|-----|-----|
|                       |     | 1          | 2   | 3   | 4   |
| NET-41-11-01<br>(2FT) | 14W | OFF        | ON  | ON  | ON  |
|                       | 20W | OFF        | ON  | OFF | ON  |
| NET-41-11-03<br>(4FT) | 24W | ON         | OFF | ON  | ON  |
|                       | 40W | OFF        | OFF | OFF | OFF |
| NET-41-11-05<br>(5FT) | 48W | ON         | OFF | ON  | ON  |
|                       | 60W | OFF        | ON  | OFF | OFF |
| NET-41-11-11<br>(6FT) | 62W | ON         | OFF | ON  | ON  |
|                       | 80W | OFF        | OFF | OFF | OFF |


**Step 4:** Wire the mains supply through the cable gland to the terminal block inside the housing

Standard NCF wiring diagram

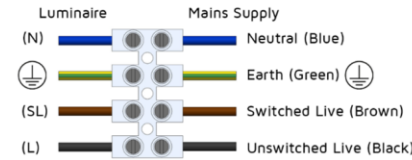


(L) Additional terminal if required for Emergency Kit.

Dimmable NCF wiring diagram

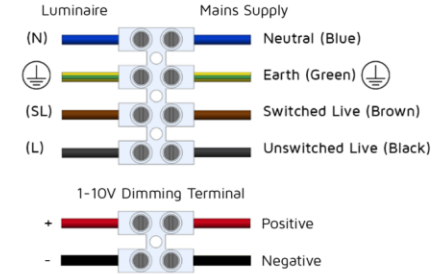

**Step 5:** Refit the diffuser and lock the stainless steel clips. Align the luminaire with the mounting clips and push it into place. Turn on mains supply to test luminaire is working properly.

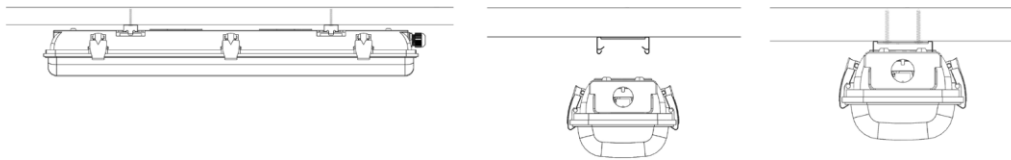

View A (metal clip and the luminaire body aligned)

View B (luminaire fixed in place)

**Step 6:** If you purchased an Emergency variant, ensure that the Emergency Test Record is completed when required.



| Part Number:                |        | Installation Date:   |        |      |        |      |        |      |        |      |
|-----------------------------|--------|--|--------|------|--------|------|--------|------|--------|------|
| Luminaire Ref/Location      |        | In case of difficulty, contact the Installation Engineers:<br>Tel: _____ |        |      |        |      |        |      |        |      |
| Full Recharge Time 24 Hours |        | Duration 3 Hours   |        |      |        |      |        |      |        |      |
|                             |        | Lamp Type - LED  |        |      |        |      |        |      |        |      |
| ROUTINE TEST RECORD         |        |  |        |      |        |      |        |      |        |      |
|                             | Year 1 |  | Year 2 |      | Year 3 |      | Year 4 |      | Year 5 |      |
| Monthly Test                | Signed | Date   | Signed | Date | Signed | Date | Signed | Date | Signed | Date |
| Functional                  |        |  |        |      |        |      |        |      |        |      |
| Functional                  |        |  |        |      |        |      |        |      |        |      |
| Functional                  |        |  |        |      |        |      |        |      |        |      |
| Functional                  |        |  |        |      |        |      |        |      |        |      |
| One Hour                    |        |  |        |      |        |      |        |      |        |      |
| Functional                  |        |  |        |      |        |      |        |      |        |      |
| Functional                  |        |  |        |      |        |      |        |      |        |      |
| Functional                  |        |  |        |      |        |      |        |      |        |      |
| Functional                  |        |  |        |      |        |      |        |      |        |      |
| Three Hour                  |        |  |        |      |        |      |        |      |        |      |

Emergency Test Record example.

### Safety Information:

- The dimming cables should be run separately from the connections and mains cables to ensure good EMC conditions.


### Wiring the plug-in terminal:

- Use solid wire or stranded wire with the correct cross-section
- Strip off correct length of insulation; you may need to twist the tool slightly
- If stranded wire is used: push onto the terminal from above to be able to insert the wire
- Insert the bare end into the terminal

### Detaching the plug-in terminal:

- Push onto the terminal from above to release the wire
- Pull out the wire at the front

Mains supply wires  
Stranded with or solid wire from  
0.5 to 2.5mm<sup>2</sup> may be used for  
wiring.

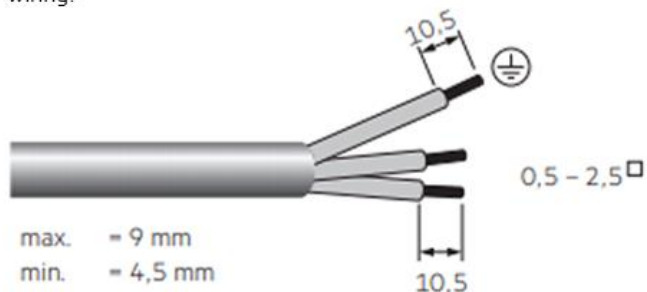

For more information regarding driver settings/options, please  
access the QR code below:



Tridonic LCA PRE, LC EXC



Certificate No. FS 590684



Certificate No. EMS 590685

# TRIDONIC

## Dimming Driver Installation Guide

Distributed by  
**NET LED**  
LIGHTING



NET LED Lighting  
Buckway Business Park  
300 Anderson Road  
Cambridge  
CB24 4UQ  
sales@netled.co.uk  
www.netled.co.uk

Technical Helpline: 01223 851505  
Email: support@netled.co.uk

www.netled.co.uk/downloads  
PRD-40-10-81

**Installation procedure:** Carefully read the installation instructions and ensure the mains supply is isolated before installation. Please follow the safety information overleaf before carrying out any installation. Please retain this leaflet for future reference.

### DALI

#### **Description:**


DALI (Digital Addressable Lighting Interface) is an interface protocol for digital communication between electronic lighting equipment.

#### **DALI offers a lot of possibilities:**

- DALI line: 64 LED Driver can be grouped to a line
- DALI groups: Every LED Driver can be attributed into 16 groups
- Addressability: All LED Driver are individually addressable
- Grouping: Possible without complicated rewiring
- Programmability: Individual programmability makes it possible to use functions which transcend the DALI standard
- Monitoring: Easily possible thanks to status feedback
- Wiring: Simple wiring with five pole standard cables and a cable length of max. 300 metres
- Wiring: Polarity-free control lines can be used for mains and control lines
- Wiring: Multiple wiring possibilities (star, series and mixed wiring)
- Unaffected by interruptions: All luminaires receive the same, unaffected digital signal and dimming level
- Similar light level from first to last luminaire.

#### **Technical data of a DALI line:**

- DALI voltage: 9.5V - 22.4V
- Maximum DALI system current: max. 250mA
- Data transfer rate: 1200 Baud
- Maximum line length: up to 300m (for 1.5mm<sup>2</sup>)

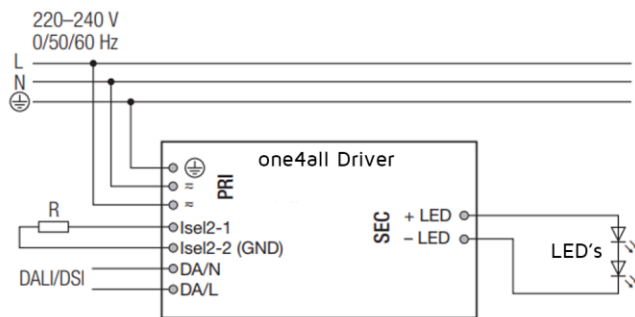

### switchDIM/Push

#### **Description:**

With the switchDIM function it is possible to use the mains voltage as a control signal.

The phase of a standard mains voltage push button is connected to the terminal marked DA/L and the neutral conductor is connected to the terminal marked DA/N.

Using the function is easy and convenient:

- A short press (50-600 ms) switches the device on or off
- A long press (>600 ms) fades the connected operating device alternately up and down (between 1 and 100%)

The device has a switchDIM memory function. This is used, among other things, for storing the last dimming value in the event of interruptions in the power supply.

When power returns, the LED is automatically restored to its previous operating state and dimmed to the last value.

#### **⚠ Caution!**

Glow switches are not approved for controlling switchDIM.

Glow switches may cause the LED Driver to spontaneously switch on or off or make sudden changes in the dimming value.

#### **⚠ Caution!**

A maximum number of 25 operating devices per switchDIM system should not be exceeded.

If you have more devices please use DALI.

